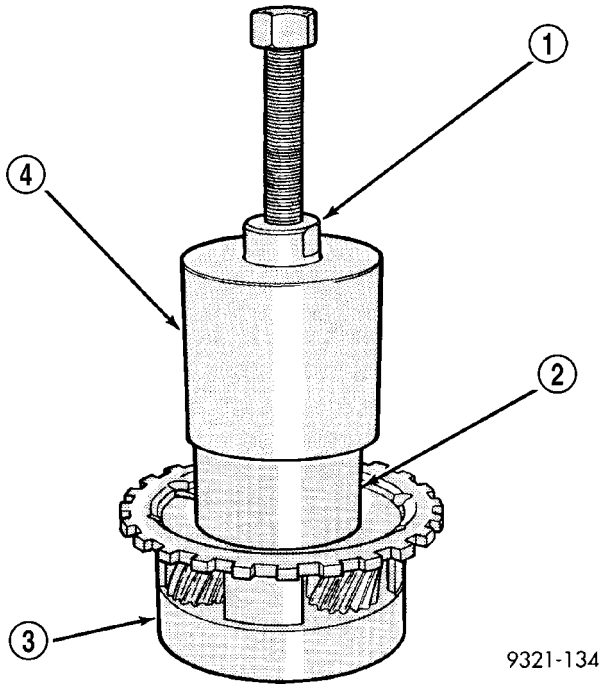


Fig. 68 Remove Rear Carrier Front Bearing Cone

1 - INSTALLER 5048-1
2 - PULLER JAWS 6545
3 - REAR CARRIER
4 - INSTALLER 5048

(47) Install and load compressor (Fig. 69) as shown in (Fig. 70).

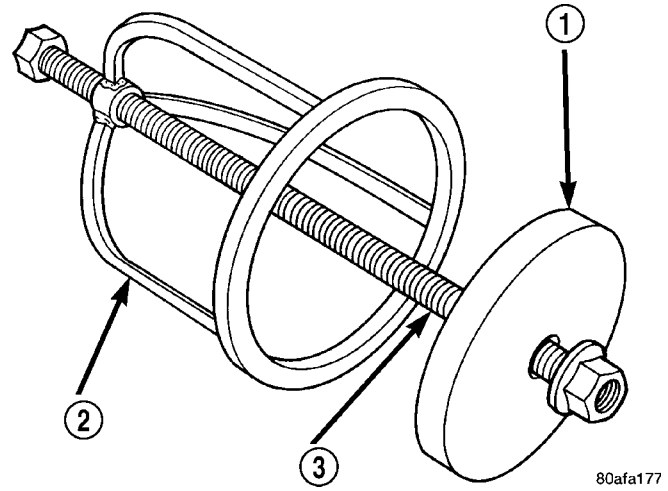


Fig. 69 Low/Reverse Spring Compressor Tool

1 - DISC 6057
2 - COMPRESSOR 5059
3 - COMPRESSOR 5058-3

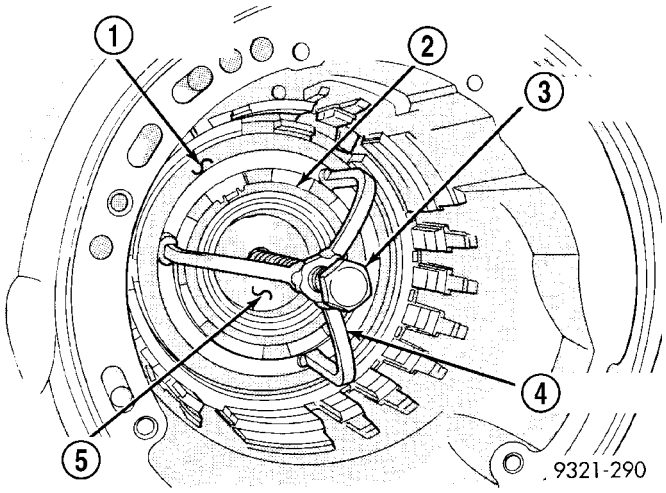


Fig. 70 Compressor Tool in Use

1 - LOW/REVERSE CLUTCH RETURN SPRING
2 - SNAP RING (INSTALL AS SHOWN)
3 - COMPRESSOR 5058A-3
4 - COMPRESSOR 5059A
5 - DISC 6057

(48) Remove the low/reverse belleville spring snap ring (Fig. 71).

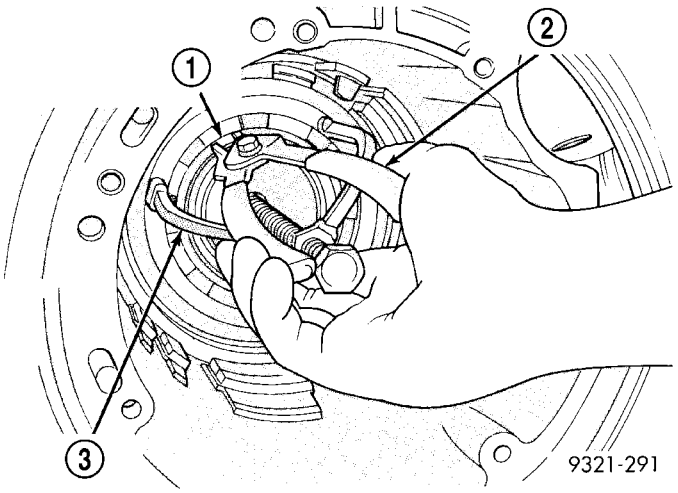


Fig. 71 Remove Snap Ring

1 - SNAP RING OPENING MUST BE BETWEEN SPRING LEVERS (AS SHOWN)
2 - SNAP RING PLIERS
3 - COMPRESSOR 5059A

(49) Remove the low/reverse piston belleville spring (Fig. 72).