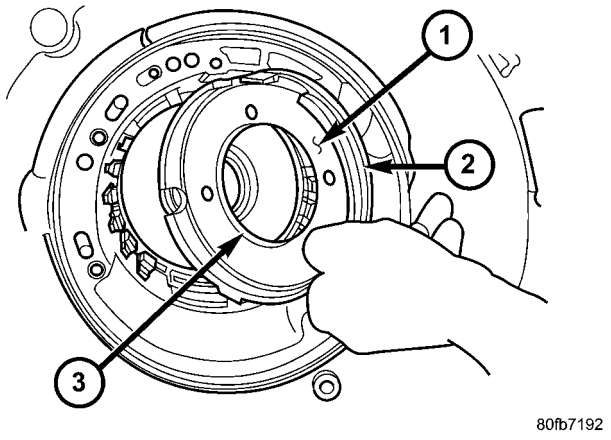

Fig. 76 Remove Low/Reverse Clutch Piston

1 - LOW/REVERSE CLUTCH PISTON
2 - BONDED SEAL
3 - BONDED SEAL

(54) Remove the low/reverse piston retainer screws.

(55) Remove low/reverse piston retainer (Fig. 77).

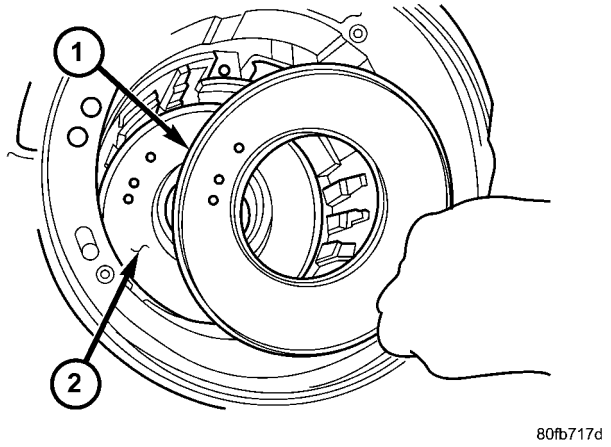

Fig. 77 Remove Piston Retainer

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - GASKET

(56) Remove the low/reverse piston retainer gasket (Fig. 78).

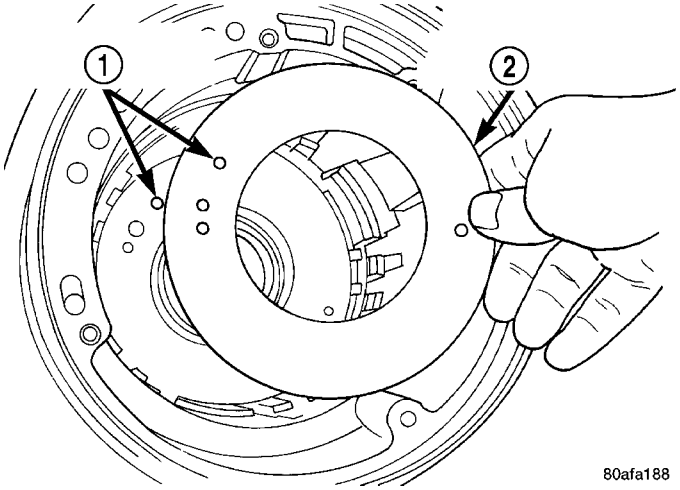

Fig. 78 Remove Piston Retainer Gasket

1 - GASKET HOLES MUST LINE UP
2 - LOW/REVERSE CLUTCH PISTON RETAINER GASKET

ASSEMBLY

NOTE: If the transmission assembly is being reconditioned (clutch/seal replacement) or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE).

(1) Install the output bearing cups using Special Tool - 5050A (Fig. 79).

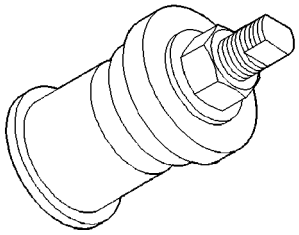

Fig. 79 Bearing Cup Installation Special Tool - 5050A

(2) Install low/reverse piston retainer gasket (Fig. 80).