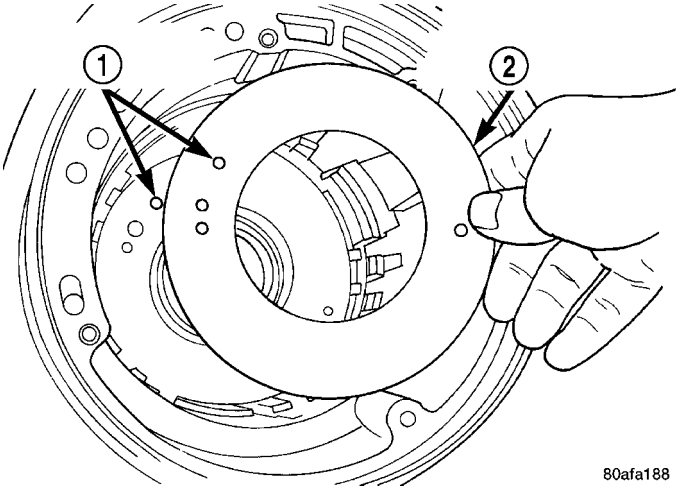

Fig. 80 Install Piston Retainer Gasket

1 - GASKET HOLES MUST LINE UP
2 - LOW/REVERSE CLUTCH PISTON RETAINER GASKET

(3) Install low/reverse piston retainer (Fig. 81).

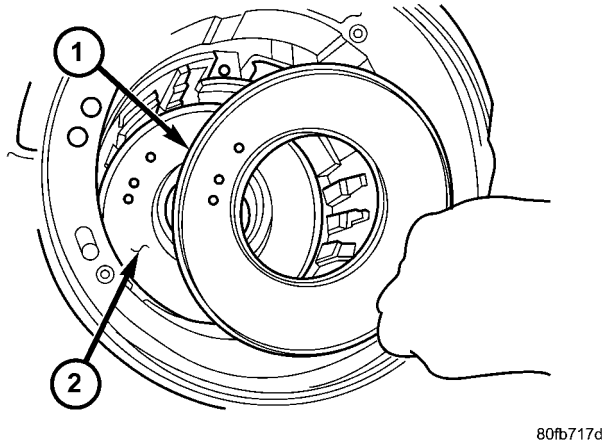

Fig. 81 Install Piston Retainer

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - GASKET

(4) Install low/reverse piston retainer-to-case screws (Fig. 82) and torque to 5 N·m (45 in. lbs.).

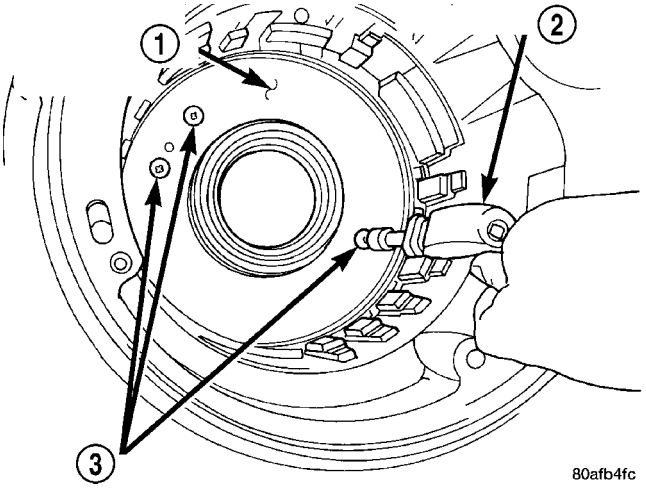

Fig. 82 Install Retainer Attaching Screws

1 - LOW/REVERSE CLUTCH PISTON RETAINER
2 - SCREWDRIVER
3 - TORX-LOC SCREWS

NOTE: The Low/Reverse Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(5) Install low/reverse clutch piston (Fig. 83).

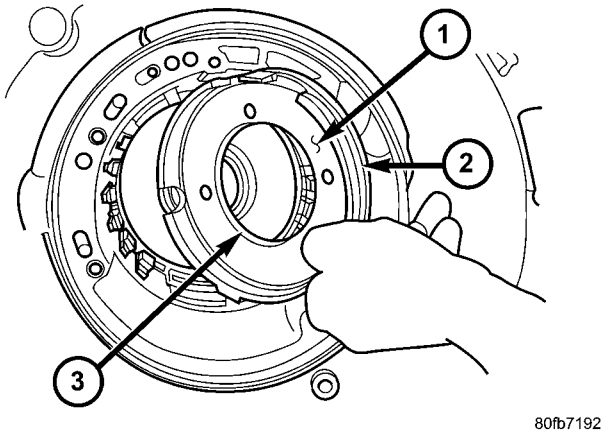

Fig. 83 Install Low/Reverse Clutch Piston

1 - LOW/REVERSE CLUTCH PISTON
2 - BONDED SEAL
3 - BONDED SEAL

(6) Assemble guide bracket assembly as shown in (Fig. 84) (Fig. 85).