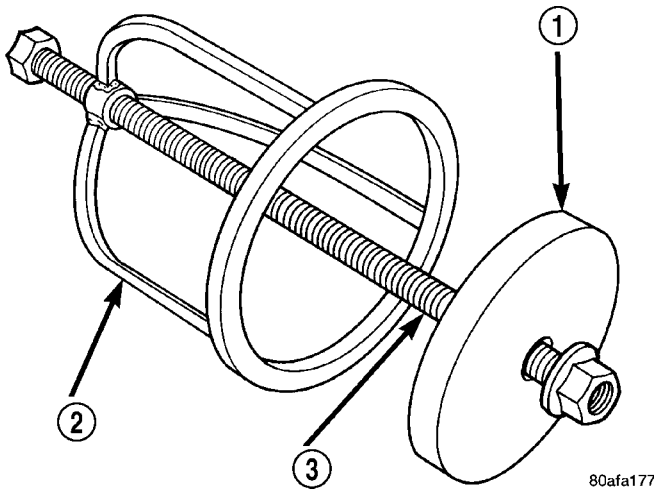


Fig. 88 Low/Reverse Spring Compressor Tool

1 - DISC 6057
2 - COMPRESSOR 5059
3 - COMPRESSOR 5058-3

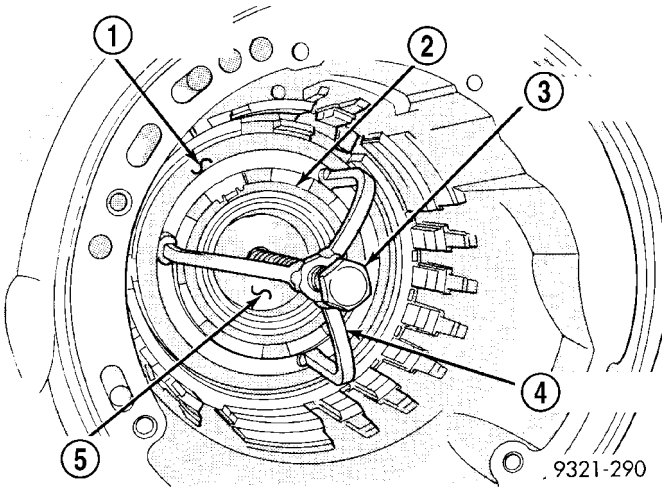


Fig. 89 Compressor Tool in Use

1 - LOW/REVERSE CLUTCH RETURN SPRING
2 - SNAP RING (INSTALL AS SHOWN)
3 - COMPRESSOR 5058A-3
4 - COMPRESSOR 5059A
5 - DISC 6057

(11) Install snap ring and remove compressor tool (Fig. 90).

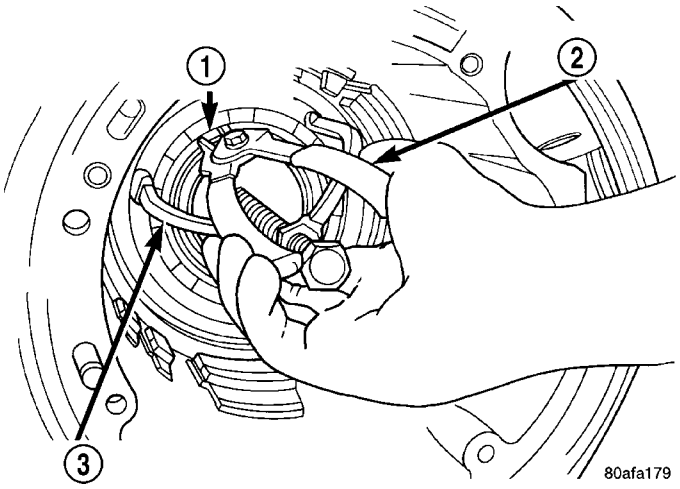


Fig. 90 Install Snap Ring

1 - SNAP RING OPENING MUST BE BETWEEN SPRING LEVERS (AS SHOWN)
2 - SNAP RING PLIERS
3 - TOOL 6057

(12) Install rear carrier front bearing cone (Fig. 91).

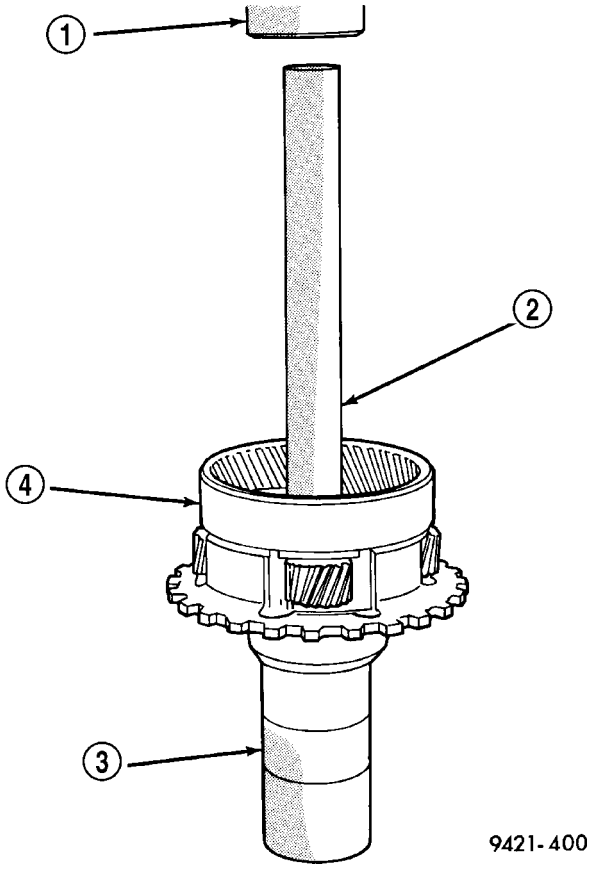


Fig. 91 Install Rear Carrier Front Bearing Cone

1 - ARBOR PRESS
2 - SPECIAL TOOL C-4171
3 - SPECIAL TOOL 6052
4 - REAR CARRIER