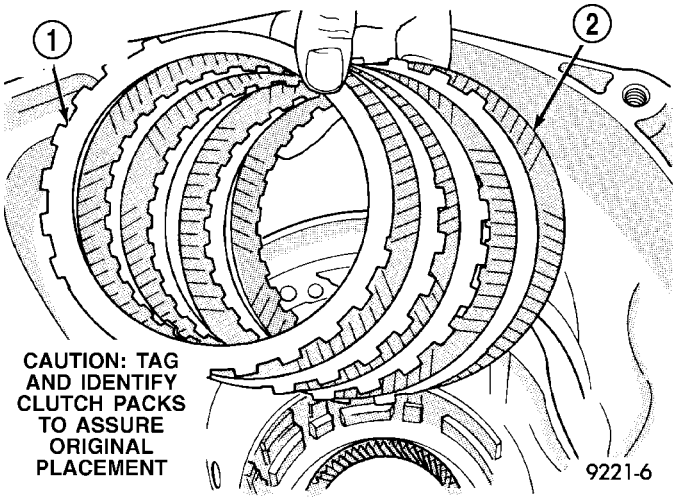


Fig. 106 Install 2/4 Clutch Pack

1 - CLUTCH PLATE (4)
2 - CLUTCH DISC (4)

NOTE: The 2/4 Clutch Piston has bonded seals which are not individually serviceable. Seal replacement requires replacement of the piston assembly.

(22) Install 2/4 clutch belleville spring (Fig. 107) (Fig. 108).

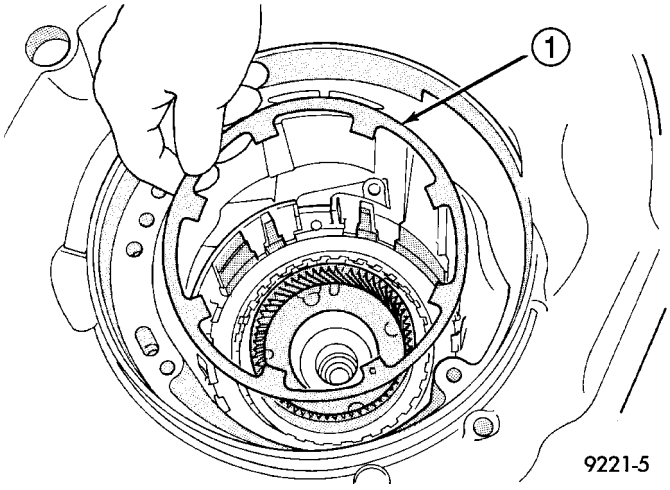


Fig. 107 Install 2/4 Clutch Return Spring

1 - 2/4 CLUTCH RETURN SPRING

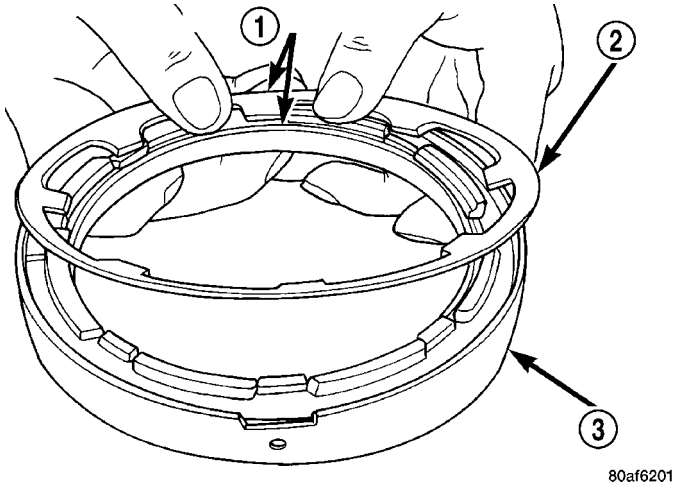


Fig. 108 Proper Orientation of 2/4 Clutch

1 - NOTE POSITION
2 - RETURN SPRING
3 - 2/4 CLUTCH RETAINER

(23) Install 2/4 clutch retainer (Fig. 109).

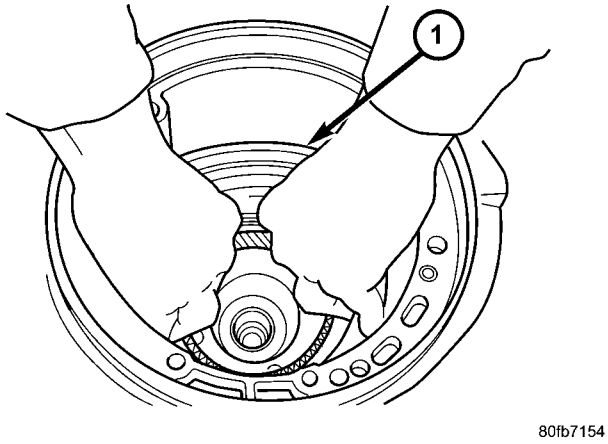


Fig. 109 Install 2/4 Clutch Retainer

1 - 2/4 CLUTCH RETAINER

NOTE: Verify that Tool 5058A is centered properly over the 2/4 clutch retainer before compressing. If necessary, fasten the 5058A bar to the bellhousing flange with any combination of locking pliers and bolts to center the tool properly.

(24) Set up Tool 5058 as shown in (Fig. 110). Compress 2/4 clutch just enough to facilitate snap ring installation.