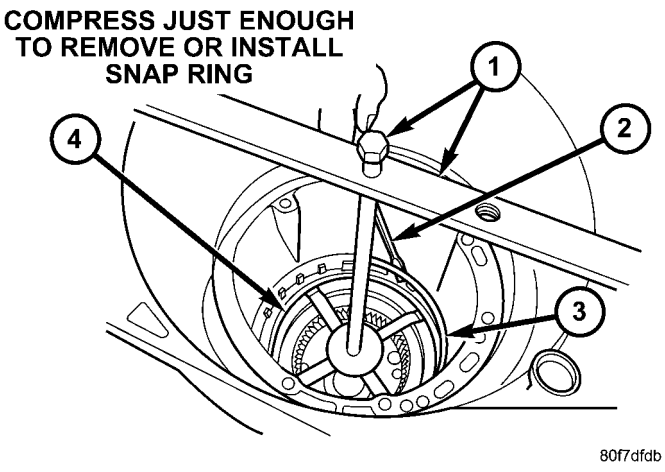

Fig. 110 Remove 2/4 Clutch Retainer Snap Ring

1 - TOOL 5058
2 - SCREWDRIVER
3 - SNAP RING
4 - 2/4 CLUTCH RETAINER

(25) **Measure 2/4 clutch clearance:** Set up dial indicator as shown in (Fig. 111). Press down clutch pack with finger and zero dial indicator. Record measurement in four (4) places and take average reading. **The 2/4 clutch pack clearance is 0.76 to 2.64 mm (0.030 to 0.104 inch).** If not within specifications, the clutch is not assembled properly or is excessively worn. **There is no adjustment for the 2/4 clutch clearance.**

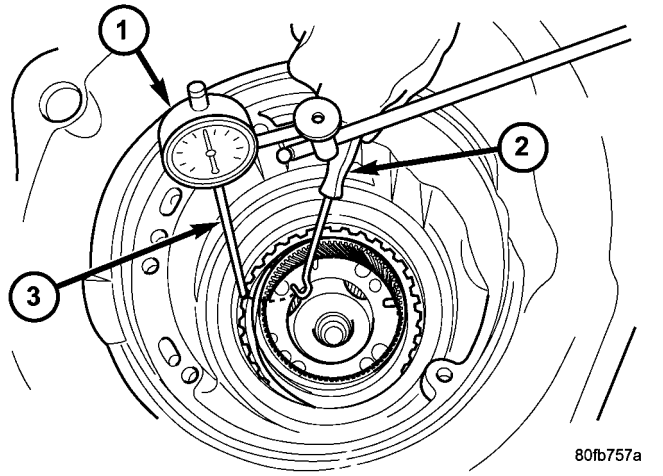

Fig. 111 Check 2/4 Clutch Clearance

1 - DIAL INDICATOR
2 - HOOK TOOL
3 - DIAL INDICATOR TIP TOOL 6268

(26) Install the #7 needle bearing to the rear sun gear (Fig. 112). **The number 7 needle bearing has three antireversal tabs and is common with the number 5 and number 2 position. The orientation should allow the bearing to seat flat against the rear sun gear. A small amount of petrolatum can be used to hold the bearing to the rear sun gear.**

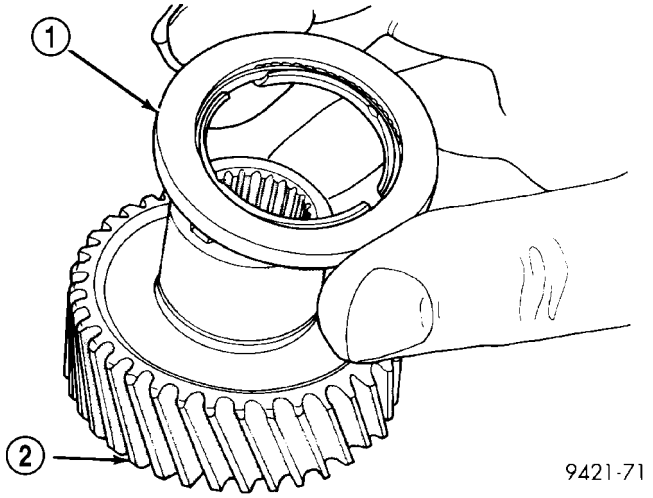

Fig. 112 Number 7 Bearing

1 - #7 BEARING
2 - REAR SUN GEAR

(27) Install rear sun gear and #7 needle bearing (Fig. 113).

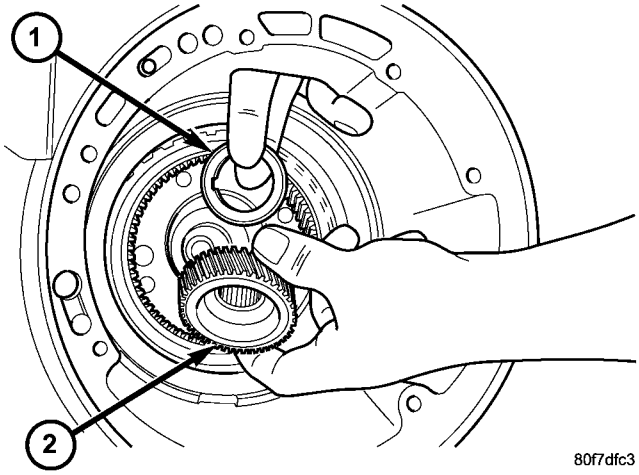

Fig. 113 Install Rear Sun Gear

1 - #7 NEEDLE BEARING
2 - REAR SUN GEAR

(28) Install front carrier/rear annulus assembly and #6 needle bearing (Fig. 114).