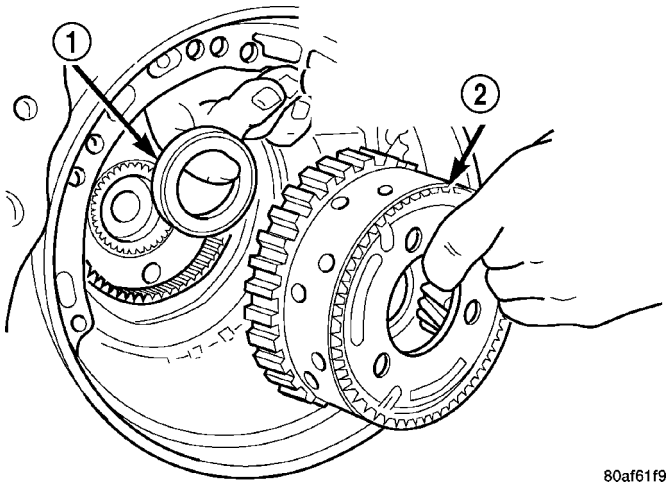

Fig. 114 Install Front Carrier/Rear Annulus

1 - #6 NEEDLE BEARING
2 - FRONT CARRIER AND REAR ANNULUS ASSEMBLY (TWIST AND PULL OR PUSH TO REMOVE OR INSTALL).

(29) Install front sun gear assembly and #4 thrust washer (Fig. 115).

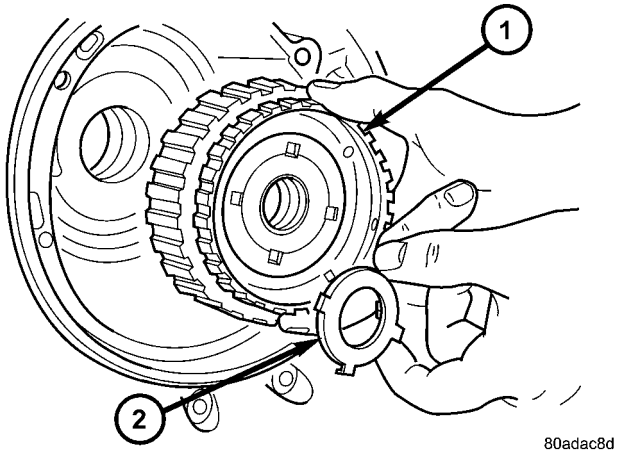

Fig. 115 Install Front Sun Gear Assembly

1 - FRONT SUN GEAR ASSEMBLY
2 - #4 THRUST WASHER (FOUR TABS)

(30) **Determine proper #4 thrust plate thickness.**

(a) Select the thinnest #4 thrust plate thickness.

(b) Install #4 thrust plate (Fig. 116) using petrolatum to hold into position.

(c) Install input clutch assembly. Ensure the input clutch assembly is completely seated by viewing position through input speed sensor hole. **If the speed sensor tone wheel is not centered in the opening, the input clutch assembly is not seated properly.**

(d) Remove the oil pump o-ring (Fig. 117) and install oil pump and gasket to transmission. Tighten the oil pump bolts to 30 N·m (265 in. lbs.). **Use screw-in dowels or phillips-head screwdrivers to align pump to case. Be sure to reinstall O-ring on oil pump after selecting the proper No. 4 thrust plate.**

(e) Measure the input shaft end play with the transmission in the vertical position. This will ensure that the measurement will be accurate.

(f) Set up and measure endplay using End Play Set 8266 and Dial Indicator Set C3339 as shown in (Fig. 118).

(g) Measure input shaft end play. **Input shaft end play must be 0.127 to 0.635 mm (0.005 to 0.025 inch).** For example, if end play reading is 0.055 inch, select No. 4 Thrust Plate which is 0.071 to 0.074 thick. This should provide an input shaft end play reading of 0.020 inch, which is within specifications.

(h) Remove oil pump, gasket, and input clutch assembly to gain access to and install proper #4 thrust plate.

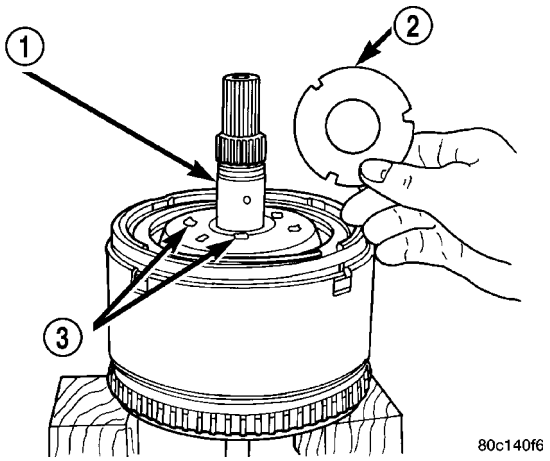

Fig. 116 Install #4 Thrust Plate

1 - OVERDRIVE SHAFT ASSEMBLY
2 - #4 THRUST PLATE (SELECT)
3 - PETROLATUM FOR RETENTION

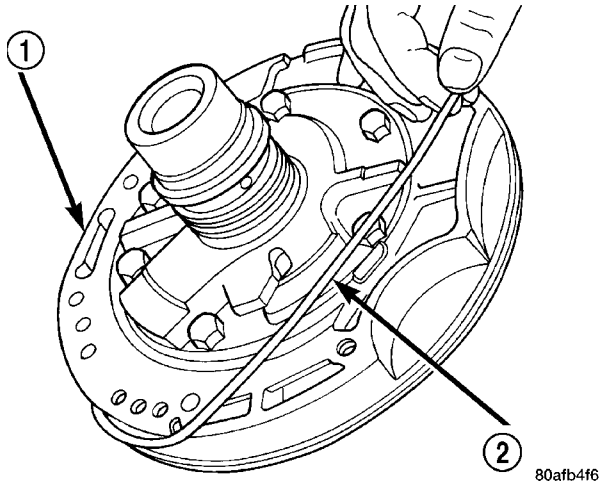

Fig. 117 Remove Oil Pump O-Ring

1 - OIL PUMP ASSEMBLY
2 - O-RING