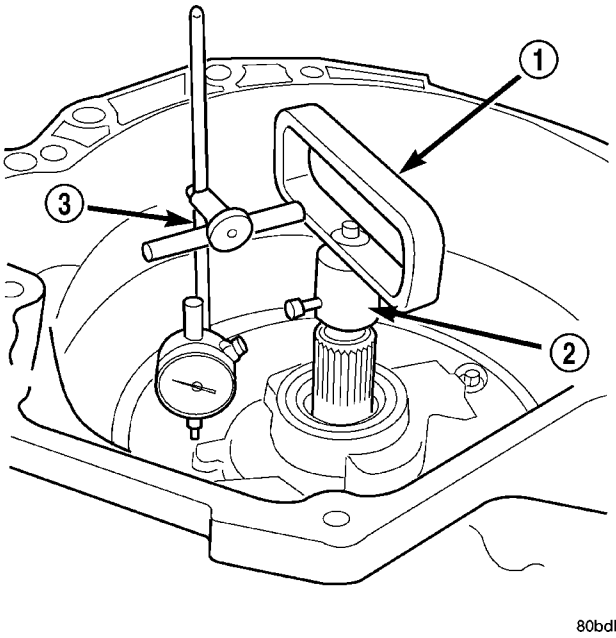


Fig. 118 Measure Input Shaft End Play Using Tool 8266 - Typical

1 - TOOL 8266-8
2 - TOOL 8266-2
3 - TOOL C-3339

(31) Install input clutch assembly with proper thrust plate (Fig. 119).

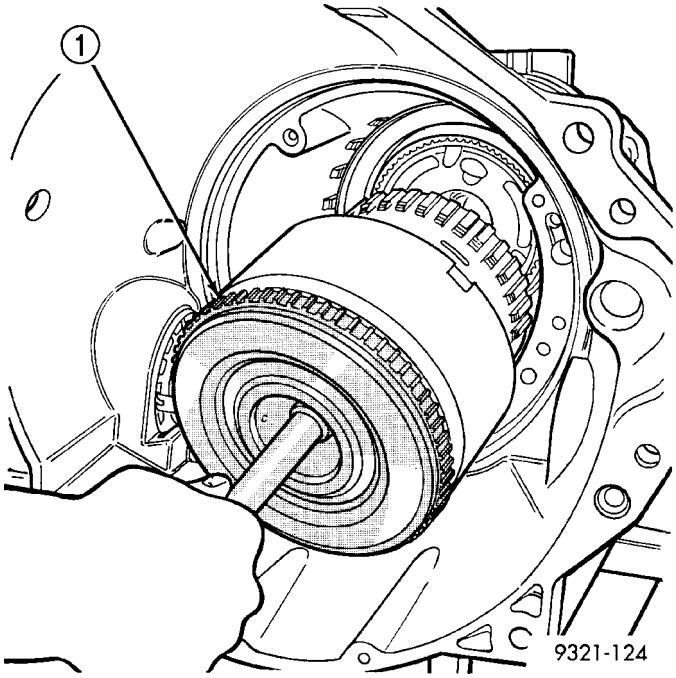


Fig. 119 Install Input Clutch Assembly

1 - INPUT CLUTCH ASSEMBLY

(32) Install #1 caged needle bearing (Fig. 120).

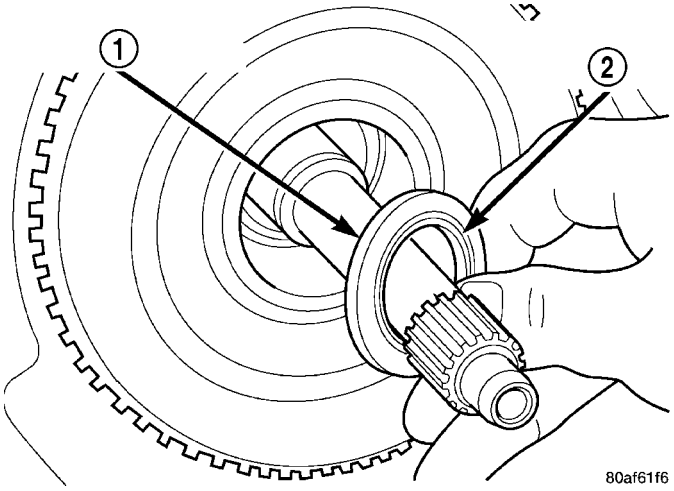


Fig. 120 Install No. 1 Caged Needle Bearing

1 - #1 CAGED NEEDLE BEARING
2 - NOTE: TANGED SIDE OUT

(33) Replace cooler by-pass valve if transmission failure has occurred (Fig. 121).

CAUTION: By-pass valve MUST be replaced if transmission failure occurs.

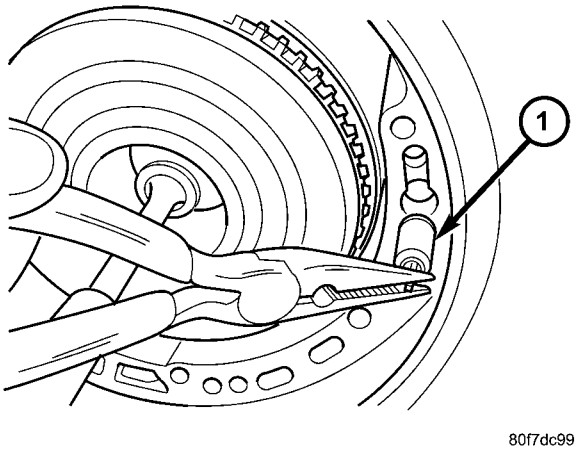


Fig. 121 Install By-Pass Valve

1 - BYPASS VALVE

NOTE: To align oil pump, gasket, and case during installation, use threaded dowels or phillips screwdrivers.

(34) Install oil pump gasket (Fig. 122).