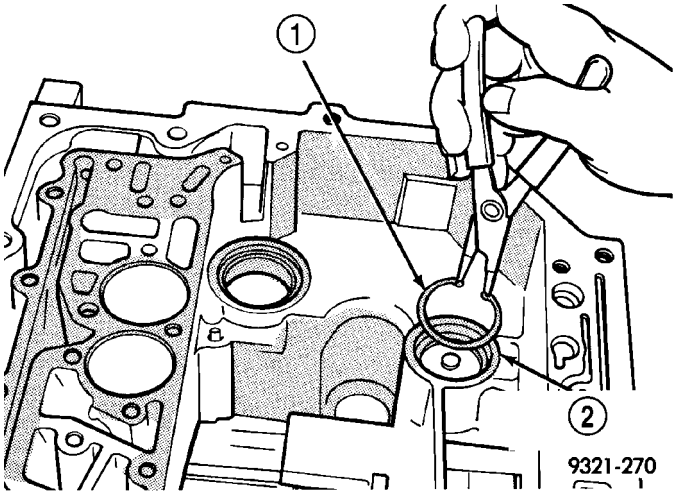


Fig. 126 Install Low/Reverse Accumulator Snap Ring

1 - SNAP RING
2 - LOW/REVERSE ACCUMULATOR

(39) Install underdrive and overdrive accumulators and springs (Fig. 127).

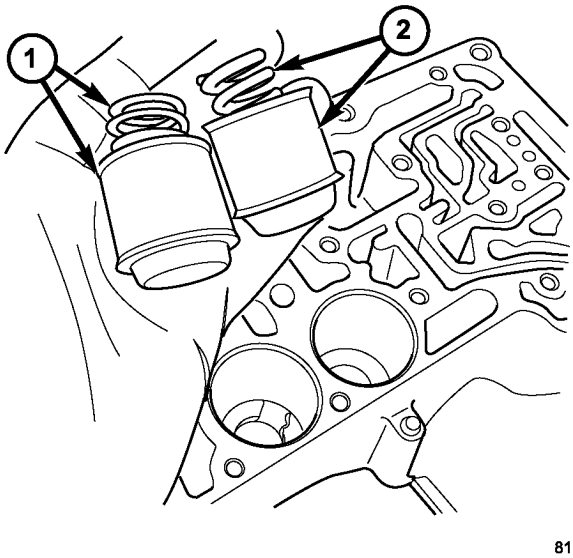


Fig. 127 Underdrive and Overdrive Accumulators

1 - OVERDRIVE PISTON AND SPRING
2 - UNDERDRIVE PISTON AND SPRING

CAUTION: Do not handle the valve body by the manual shaft. Damage could result.

(40) Install valve body into place as shown in (Fig. 128).

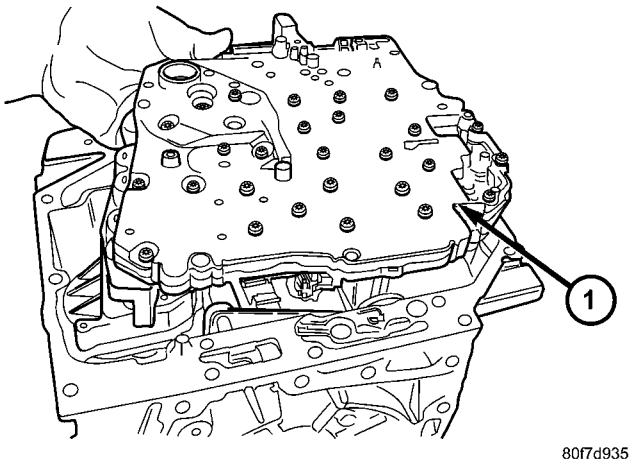


Fig. 128 Install Valve Body Onto Transmission

1 - VALVE BODY

(41) Install seven (7) valve body-to-case bolts (Fig. 129) and torque to 12 N·m (105 in. lbs.).

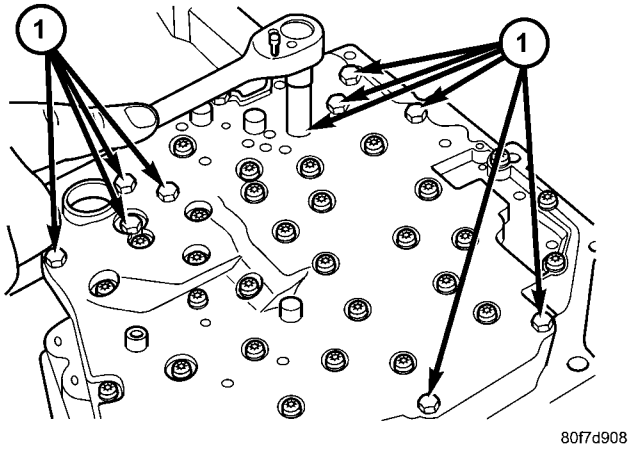


Fig. 129 Install Valve Body Bolts (7)

1 - BOLTS

(42) Install transmission oil filter (Fig. 130). Tighten the bolts to 5 N·m (45 in. lbs.)