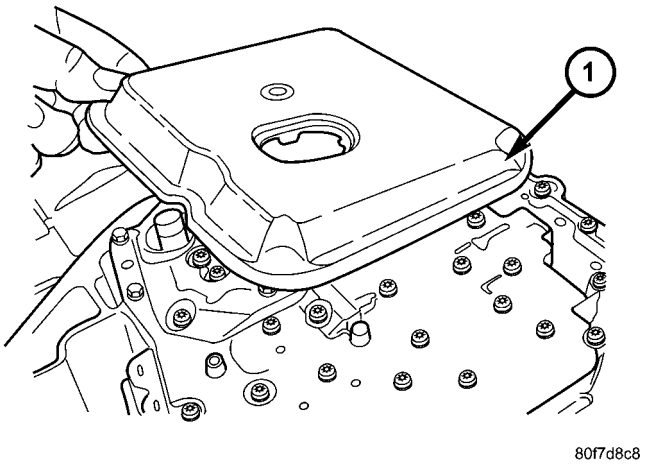

Fig. 130 Install Transmission Filter

1 - TRANSMISSION FILTER

NOTE: Before installing the oil pan bolt in the bolt hole located between the torque converter clutch on and U/D clutch pressure tap circuits (Fig. 131), it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

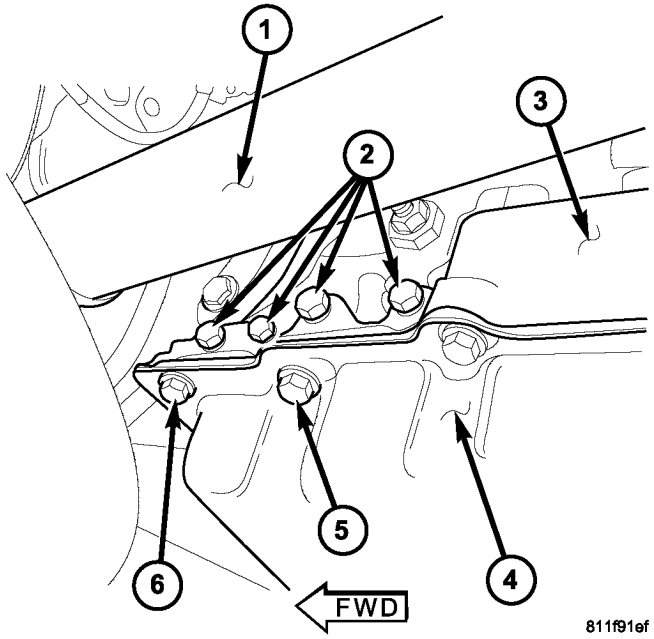

Fig. 131 Pan Fastener

1 - FRONT DRIVESHAFT
2 - PRESSURE PORTS
3 - TRANSMISSION CASE
4 - TRANSMISSION OIL PAN
5 - SECOND TRANSMISSION OIL PAN BOLT ON LEFT SIDE
6 - FIRST TRANSMISSION OIL PAN BOLT

(43) Install transmission oil pan (Fig. 132) with a bead of Mopar® ATF RTV. Torque oil pan-to-case bolts to 20 N·m (14.5 ft. lbs.).

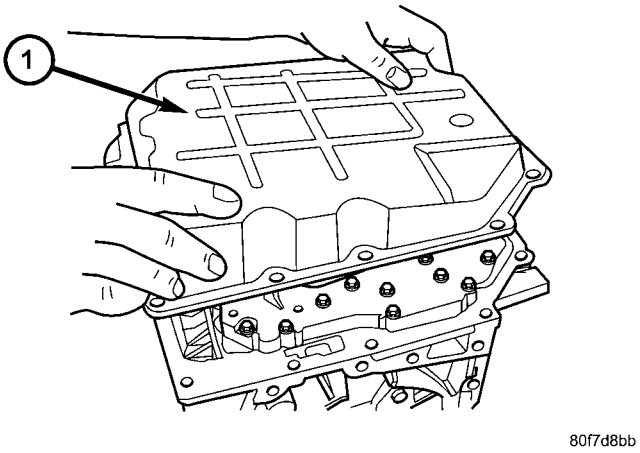

Fig. 132 Install Transmission Oil Pan

1 - TRANSMISSION OIL PAN

NOTE: Before installing either speed sensor bolt, it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(44) Install both speed sensors into transmission case (Fig. 133). Torque the speed sensor bolts to 9 N·m (80 in. lbs.).

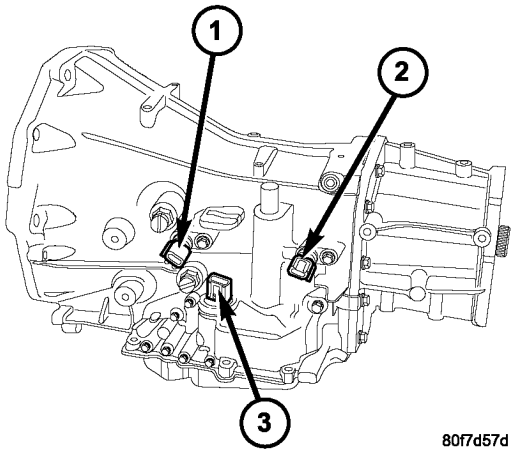

Fig. 133 Input and Output Speed Sensors and Transmission Range Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

(45) As a final check of the transmission, measure the input shaft end play. This will indicate when a #4 thrust plate change is required. The #4 thrust plate is located behind the overdrive clutch hub. Attach a dial indicator to transmission bell housing with its plunger seated against end of input shaft (Fig. 134). Move input shaft in and out to obtain end play reading. **Input shaft end play must be 0.127 to 0.635 mm (0.005 to 0.025 inch).** If not within specifications, make the necessary thrust plate adjustment.