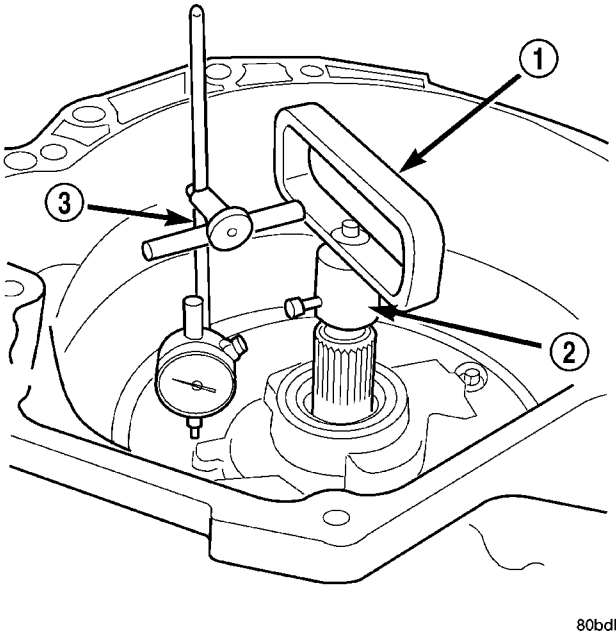


***Fig. 134 Measure Input Shaft End Play Using Tool 8266 - Typical***

1 - TOOL 8266-8
2 - TOOL 8266-2
3 - TOOL C-3339

(46) Inspect the lube tube grommet (Fig. 135) for damage. If the grommet lip is damaged, it will need to be replaced.

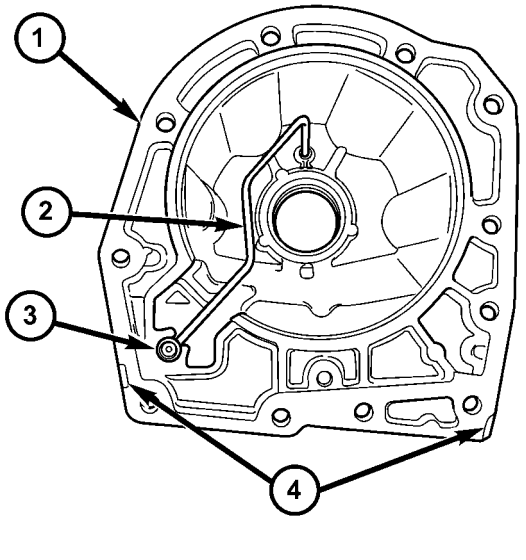


***Fig. 135 Lube Tube Grommet***

1 - HOUSING
2 - LUBE TUBE
3 - GROMMET
4 - PRY SLOTS

(47) Install the 4X4 stub shaft onto the transmission output shaft.

(48) Place a bead of Mopar® ATF RTV on the rear surface of the transmission case for the adapter housing.

(49) Install the adapter (Fig. 136) housing onto the transmission case.

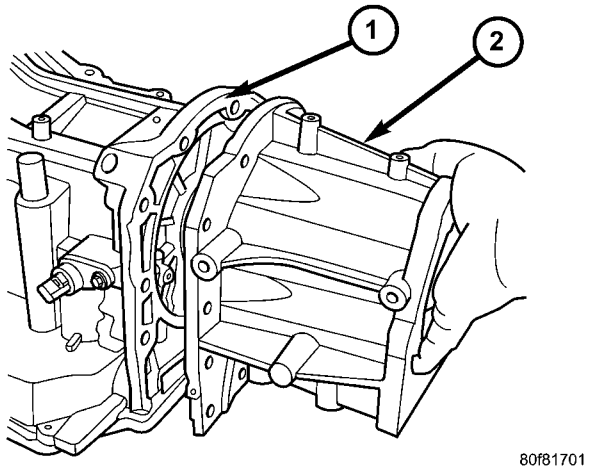


***Fig. 136 Install Adapter Housing***

1 - TRANSMISSION CASE
2 - ADAPTER HOUSING

**NOTE: Before installing the lowermost four adapter housing bolts (Fig. 137), it will be necessary to replentish the sealing patch on the bolts using Mopar® Lock & Seal Adhesive.**

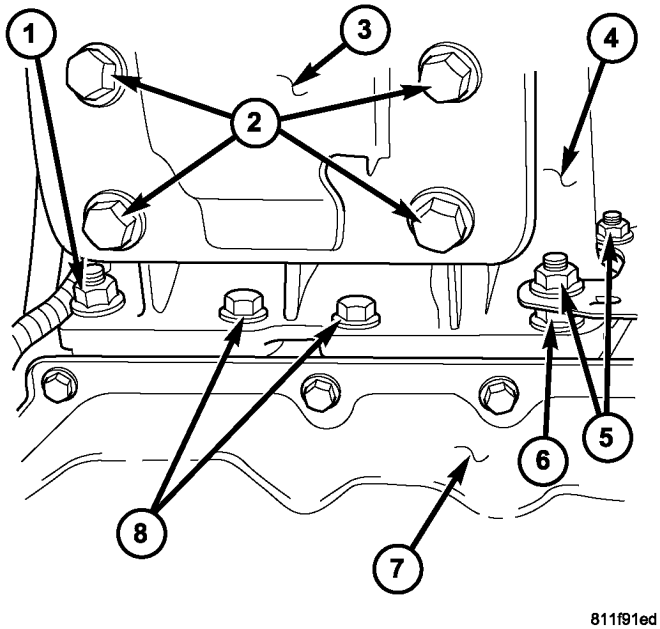


***Fig. 137 Adapter Housing Fasteners***

1 - STUD, ADAPTER/EXTENSION
2 - TRANSMISSION MOUNT FASTENERS (4)
3 - TRANSMISSION MOUNT
4 - TRANSMISSION CASE
5 - NUT, EXHAUST HANGER BRACKET (2)
6 - STUD, ADAPTER/EXTENSION
7 - TRANSMISSION OIL PAN
8 - BOLT, ADAPTER/EXTENSION (2)