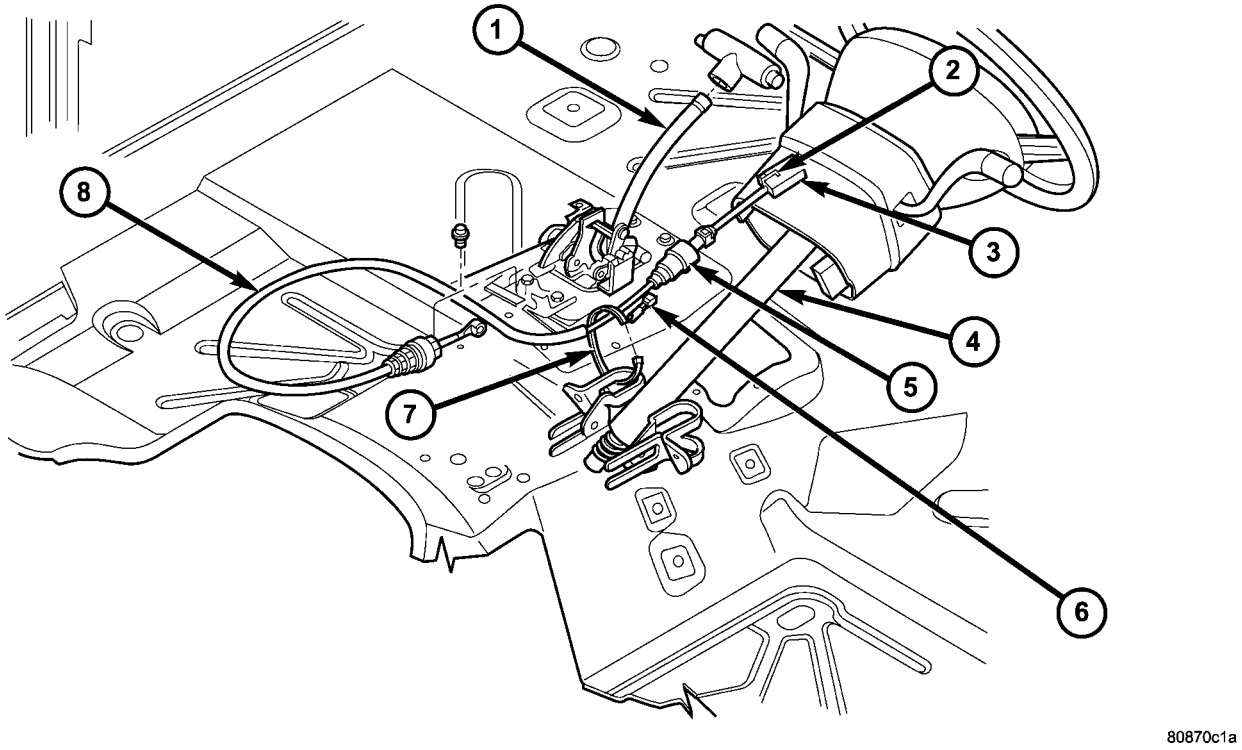

Fig. 147 Ignition Interlock Cable Routing

1 - SHIFT MECHANISM
2 - LOCK-TAB
3 - IGNITION LOCK INTERLOCK
4 - STEERING COLUMN
5 - SOLENOID
6 - WIRE CONNECTOR
7 - TIE STRAP
8 - PARK/BRAKE INTERLOCK CABLE

OPERATION

The system locks the shifter into the PARK position. The Interlock system is engaged whenever the ignition switch is in the LOCK or ACCESSORY position. An additional electrically activated feature will prevent shifting out of the PARK position unless the brake pedal is depressed at least one-half an inch. A magnetic holding device in line with the park/brake interlock cable is energized when the ignition is in the RUN position. When the key is in the RUN position and the brake pedal is depressed, the shifter is unlocked and will move into any position. The interlock system also prevents the ignition switch from being turned to the LOCK or ACCESSORY position (Fig. 148) unless the shifter is fully locked into the PARK position.

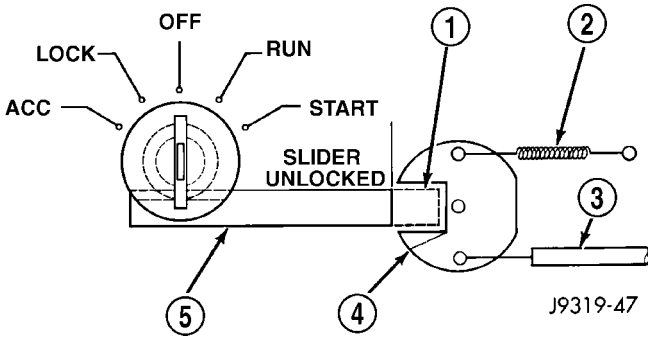

Fig. 148 Ignition Key Cylinder Actuation

1 - SLIDER LOCKED
2 - CAM RETURN SPRING
3 - INTERLOCK CABLE
4 - CAM
5 - SLIDER

REMOVAL

(1) Remove lower steering column cover. (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL)

(2) Remove lower steering column shroud.

(3) Remove tie strap near the solenoid retaining the brake transmission interlock cable to the steering column.

(4) Disengage wire connector from solenoid.