(5) With the ignition removed or in the unlocked position, disengage lock tab holding cable end to steering column (Fig. 149).

(6) Pull cable end from steering column.

(7) Remove the floor console and related trim. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - REMOVAL)

(8) Disconnect the cable from the bellcrank (Fig. 150).

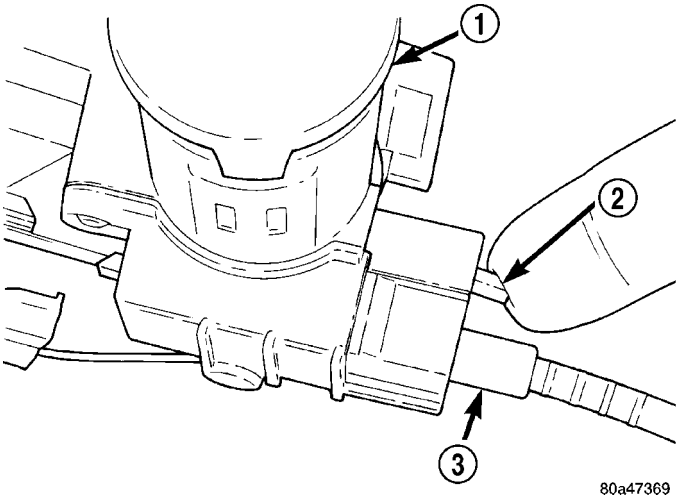

Fig. 149 Brake/Park Interlock Cable

1 - IGNITION LOCK
2 - LOCK TAB
3 - CABLE END