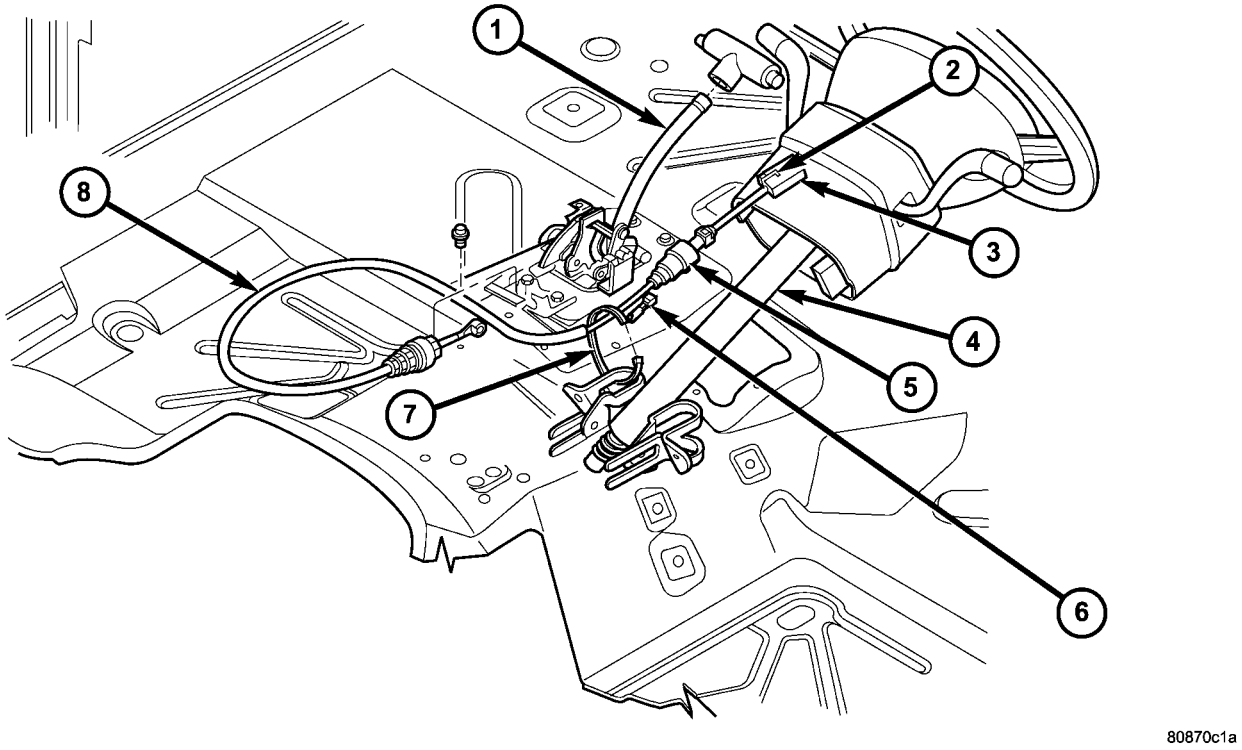

Fig. 150 Cable and Shifter

1 - SHIFT MECHANISM
2 - LOCK-TAB
3 - IGNITION LOCK INTERLOCK
4 - STEERING COLUMN
5 - SOLENOID
6 - WIRE CONNECTOR
7 - TIE STRAP
8 - PARK/BRAKE INTERLOCK CABLE

(9) Disconnect and remove the cable from the shift bracket.

INSTALLATION

(1) Route replacement cable behind instrument panel and under floor console area to shift mechanism.

(2) Insert cable end into opening in steering column hub under ignition lock. Push cable inward until lock tab engages.

(3) Insert the cable end into the shifter bellcrank.

(4) Place gear selector in PARK.

(5) Push the spring-loaded cable adjuster forward and snap cable into bracket.

(6) Adjust the brake transmission shifter interlock cable.

(7) Verify that the cable adjuster lock clamp is pushed downward to the locked position.

(8) Test the park-lock cable operation.

(9) Install the floor console and related trim.

(10) Install tie strap to hold cable to base of steering column.

(11) Install lower steering column shroud and ignition lock.

(12) Install lower steering column cover.

ADJUSTMENTS

ADJUSTMENT - BRAKE TRANSMISSION SHIFT INTERLOCK CABLE

(1) Shift transmission into PARK.

(2) Remove shift lever bezel and console screws. Raise bezel and console for access to cable.

(3) Pull cable lock button up to release cable.

(4) Turn ignition switch to LOCK position.

(5) Use a spacer to create a one millimeter gap between the shifter pawl and top of the shift gate.

(6) Pull the cable forward and release.Ensure the cable end is seated in the bellcrank and press cable lock button down until it snaps in place.

(7) Check adjustment as follows:

(a) Check movement of release shift handle button (floor shift) or release lever (column shift). You should not be able to press button inward or move column lever.

(b) Turn ignition switch to RUN position.

(c) Shifting out of park should not be possible.

(d) Apply the brake and attempt to shift out of PARK. Shifting should be possible.

(e) While the transmission is shifted out of PARK, release the brake and attempt to shift through all gears. Release the shift button at least