FLUID LEVEL CHECK USING DRB

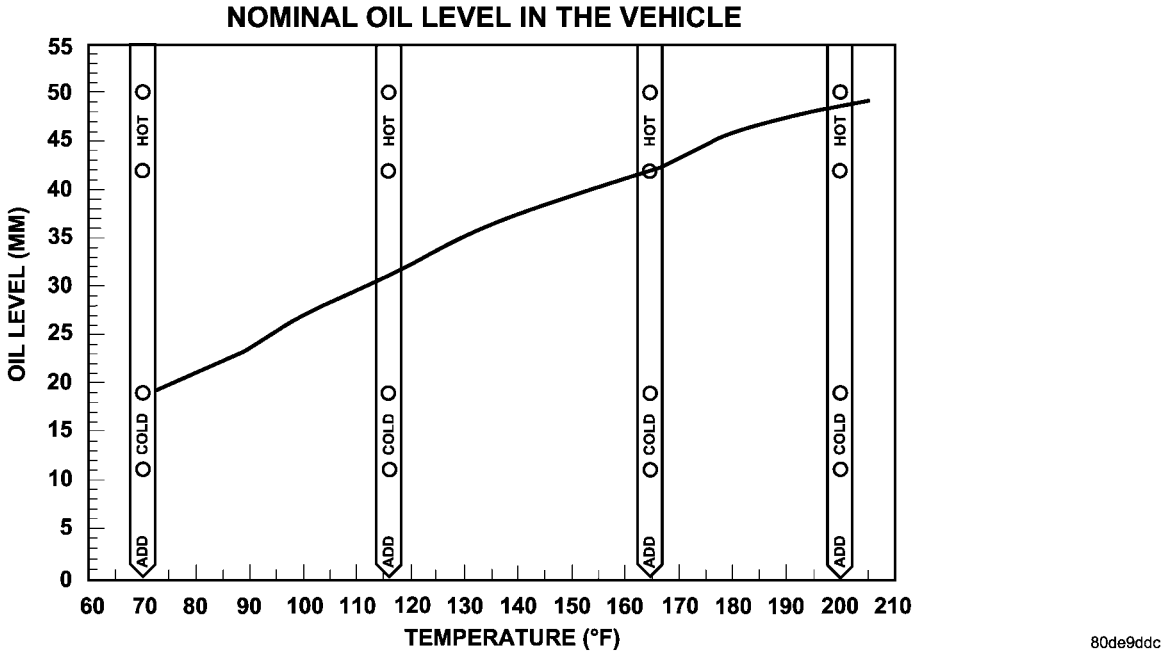

Fig. 152 42RLE Fluid Temperature Chart

NOTE: Engine and Transmission should be at normal operating temperature before performing this procedure.

(1) Start engine and apply parking brake.
(2) Connect DRBIII® scan tool and select transmission.
(3) Select sensors.
(4) Read the transmission temperature value.
(5) Compare the fluid temperature value with the chart.
(6) Adjust transmission fluid level shown on the dipstick according to the 42RLE Fluid Temperature Chart (Fig. 152). Use only Mopar® ATF+4, Automatic Transmission Fluid.
(7) Check transmission for leaks.

STANDARD PROCEDURE - FLUID / FILTER SERVICE

NOTE: Only fluids of the type labeled Mopar® ATF+4, Automatic Transmission Fluid, should be used in the transmission sump. A filter change should be made at the time of the transmission oil change. The magnet (on the inside of the oil pan) should also be cleaned with a clean, dry cloth.

NOTE: If the transmission is disassembled for any reason, the fluid and filter should be changed.

(1) Raise vehicle on a hoist. Place a drain container with a large opening, under transmission oil pan.

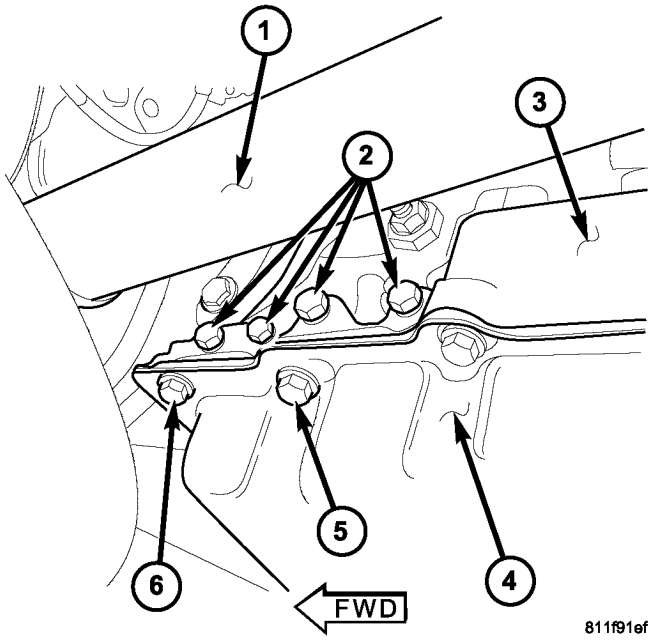

Fig. 153 Pan Fastener

1 - FRONT DRIVESHAFT
2 - PRESSURE PORTS
3 - TRANSMISSION CASE
4 - TRANSMISSION OIL PAN
5 - SECOND TRANSMISSION OIL PAN BOLT ON LEFT SIDE
6 - FIRST TRANSMISSION OIL PAN BOLT

NOTE: One of the oil pan bolts (5) has a sealing patch applied from the factory. Separate this bolt for reuse.