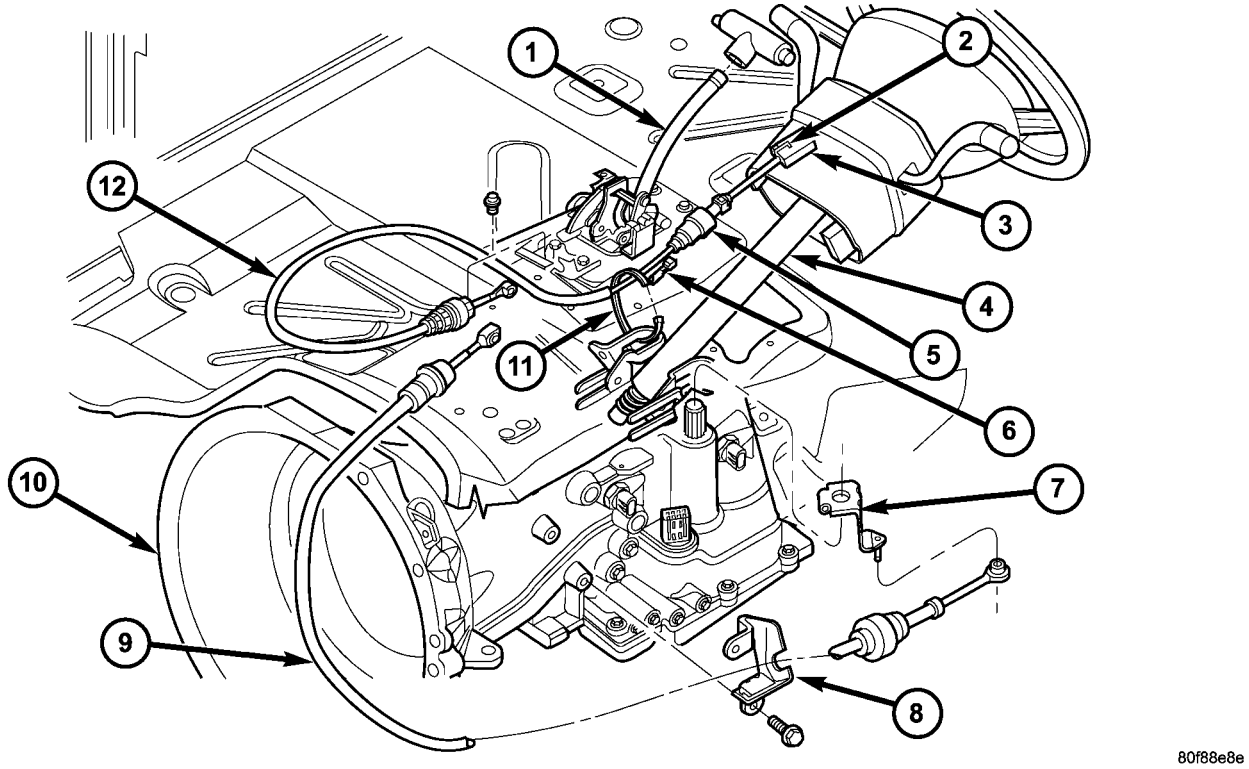

Fig. 154 Shifter Cable Routing

1 - SHIFT MECHANISM
2 - LOCK-TAB
3 - IGNITION LOCK INTERLOCK
4 - STEERING COLUMN
5 - SOLENOID
6 - WIRE CONNECTOR
7 - MANUAL LEVER
8 - CABLE BRACKET
9 - SHIFTER CABLE
10 - BELLHOUSING
11 - TIE STRAP
12 - PARK/BRAKE INTERLOCK CABLE

INSTALLATION

(1) Route cable through hole in dash panel. Fully seat cable grommet into dash panel.

(2) Place the auto transmission manual shift control lever in “PARK” detent (rearmost) position and rotate prop shaft to ensure transmission is in PARK.

(3) Snap the cable into the transmission bracket so the retaining clip is engaged and connect cable end fitting onto the manual control lever ball stud.

(4) Place the floor shifter lever in PARK position.

(5) Connect shift cable to shifter mechanism by snapping cable retaining ears into shifter bracket and press cable end fitting onto lever ball stud.

(6) Snap the cable into the transmission bracket so the retaining ears are engaged and connect cable end fitting onto the manual control lever ball stud.

(7) Adjust the shift mechanism.

(8) Install any floor console components removed previously. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - INSTALLATION)