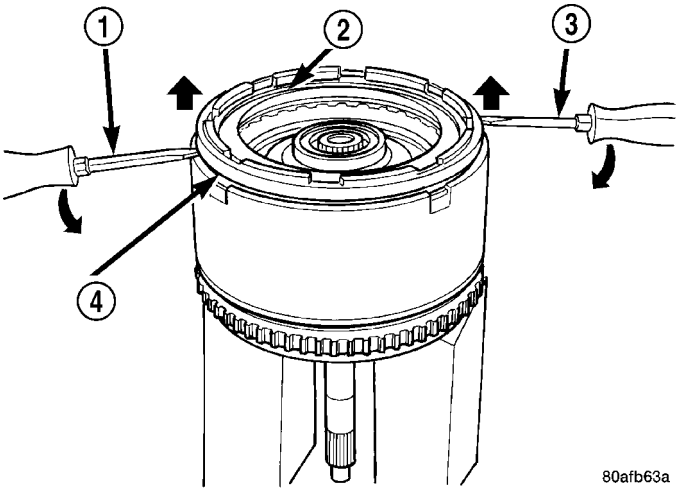

Fig. 213 Pry Up Reaction Plate

1 - SCREWDRIVER
2 - SNAP RING
3 - SCREWDRIVER
4 - MUST RAISE REVERSE REACTION PLATE TO RAISE SNAP RING

(34) Pry up reverse reaction plate (4) to seat against snap ring (2) (Fig. 213).

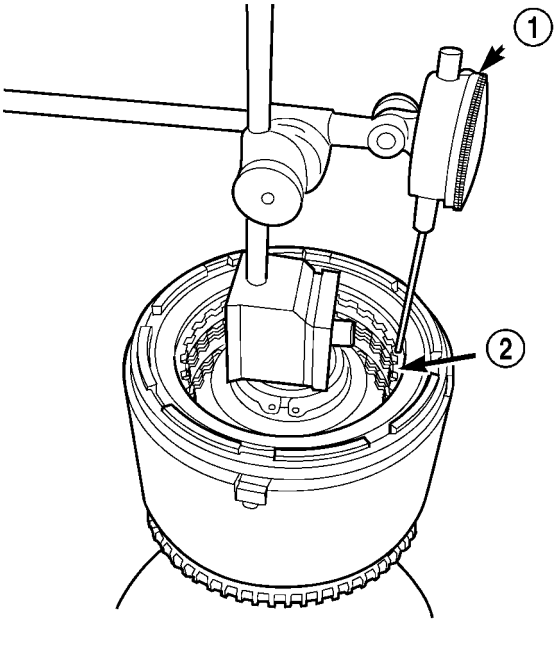

Fig. 214 Measure Reverse Clutch Pack Clearance

1 - DIAL INDICATOR
2 - REVERSE CLUTCH

(35) Set up a dial indicator (1) on the reverse clutch pack (2) (Fig. 214).

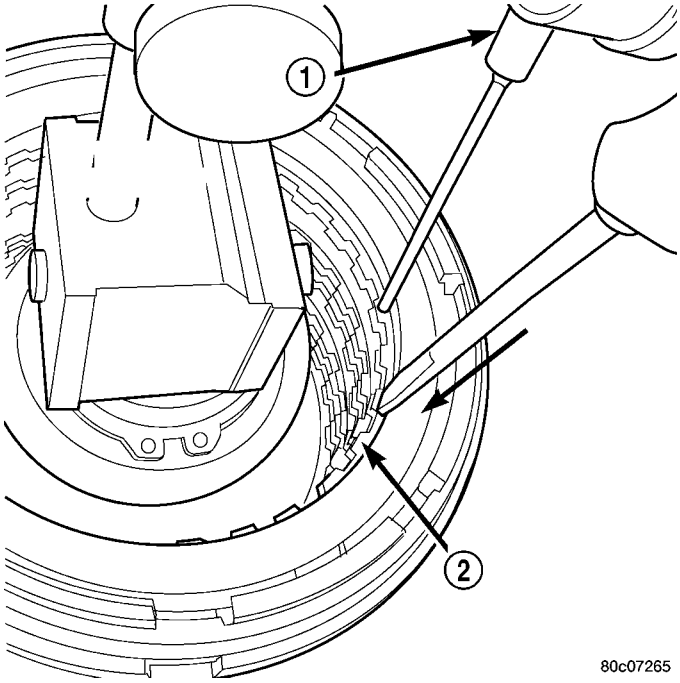

Fig. 215 Press Down on Reverse Clutch and Zero Indicator

1 - DIAL INDICATOR
2 - REVERSE CLUTCH

(36) Using moderate pressure, press down and hold (near indicator) reverse clutch disc (2) with screwdriver or suitable tool and zero dial indicator (1) (Fig. 215). When releasing pressure, indicator should advance 0.005-0.010 inches as clutch pack relaxes.

(37) Apply 30 psi (206 kPa) air pressure to the reverse clutch hose on Tool 8391. Measure and record reverse clutch pack measurement in four (4) places, 90° apart.

(38) Take average of four measurements and compare with reverse clutch pack clearance specification. **The reverse clutch pack clearance is 0.89-1.37 mm (0.035-0.054 in.).** Select the proper reverse clutch snap ring to achieve specifications.

(39) To complete the assembly, reverse clutch and overdrive clutch must be removed.