REMOVAL

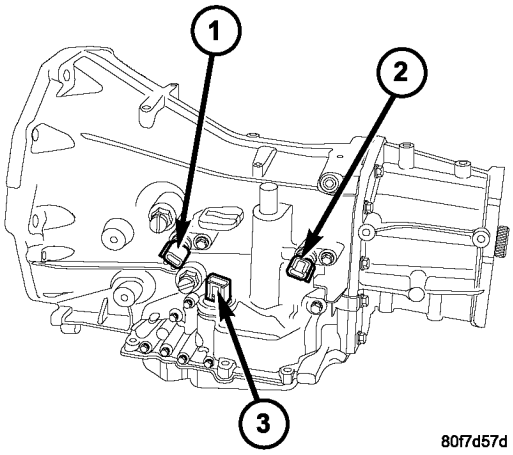

Fig. 223 Input Speed Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

(1) Raise vehicle.

(2) Place a suitable fluid catch pan under the transmission.

(3) Remove the wiring connector from the input speed sensor (Fig. 223).

NOTE: The speed sensor bolt has a sealing patch applied from the factory. Be sure to reuse the same bolt.

(4) Remove the bolt holding the input speed sensor to the transmission case.

(5) Remove the input speed sensor from the transmission case.

INSTALLATION

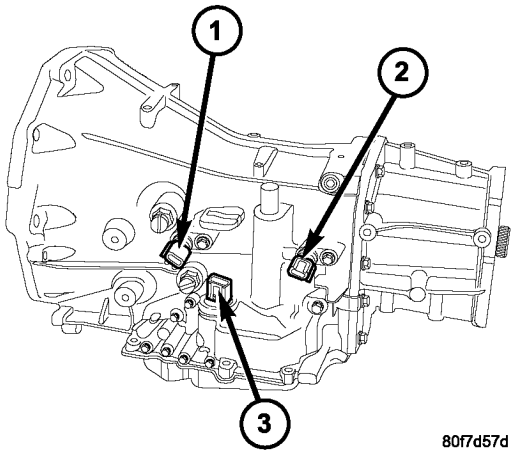

Fig. 224 Input Speed Sensor

1 - INPUT SPEED SENSOR
2 - OUTPUT SPEED SENSOR
3 - TRANSMISSION RANGE SENSOR

(1) Install the input speed sensor (1) (Fig. 224) into the transmission case.

NOTE: Before installing the speed sensor bolt, it will be necessary to replentish the sealing patch on the bolt using Mopar® Lock & Seal Adhesive.

(2) Install the bolt to hold the input speed sensor into the transmission case. Tighten the bolt to 9 N·m (80 in.lbs.).

(3) Install the wiring connector onto the input speed sensor

(4) Verify the transmission fluid level. Add fluid as necessary.

(5) Lower vehicle.