doesn't close, it is tested again. If the switch fails to close the second time, the appropriate Diagnostic Trouble Code (DTC) will set.

REMOVAL

NOTE: If the Solenoid/Pressure Switch Assembly is being replaced, the Quick Learn Procedure must be performed. (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

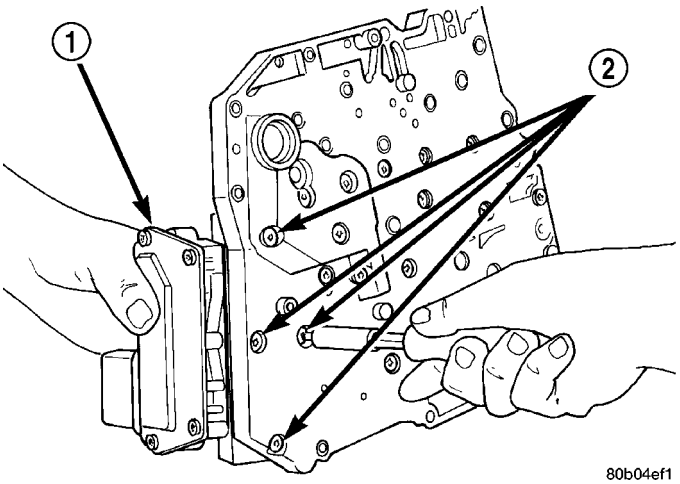


Fig. 239 Solenoid Retaining Screws

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - RETAINING SCREWS

(1) Raise vehicle on hoist.

(2) Remove valve body assembly from transmission. (Refer to 21 - TRANSMISSION/AUTOMATIC - 42RLE/VALVE BODY - REMOVAL)

(3) Remove Solenoid/Pressure Switch Assembly retaining screws (2) from solenoid (Fig. 239).

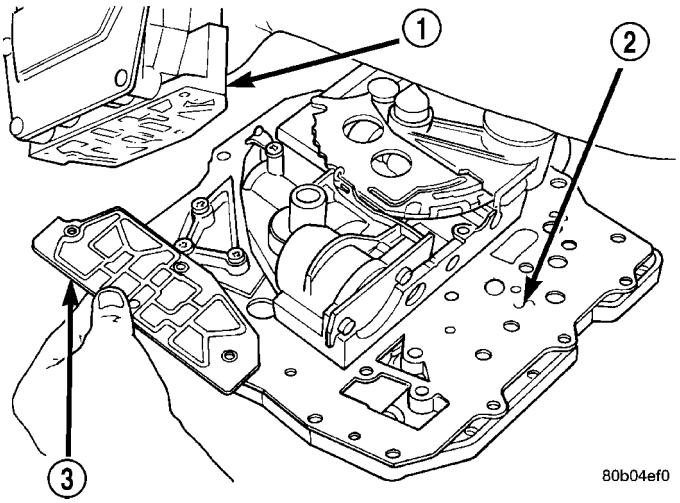


Fig. 240 Solenoid/Pressure Switch Assembly and Screen

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - VALVE BODY
3 - SCREEN

(4) Remove Solenoid/Pressure Switch Assembly (1) and screen from valve body (2) (Fig. 240).

INSTALLATION

NOTE: If the Solenoid/Pressure Switch assembly is being replaced, the Quick Learn Procedure must be performed. (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

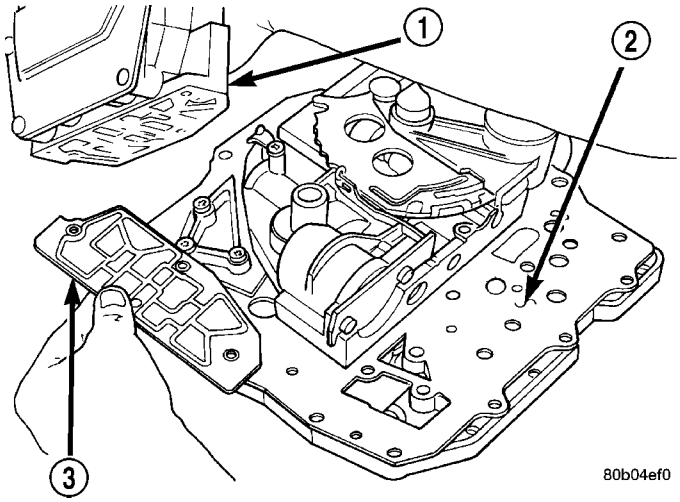


Fig. 241 Solenoid/Pressure Switch Assembly and Screen

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - VALVE BODY
3 - SCREEN

(1) Install Solenoid/Pressure Switch Assembly (1) (Fig. 241) and screen (3) to the separator and transfer plates.

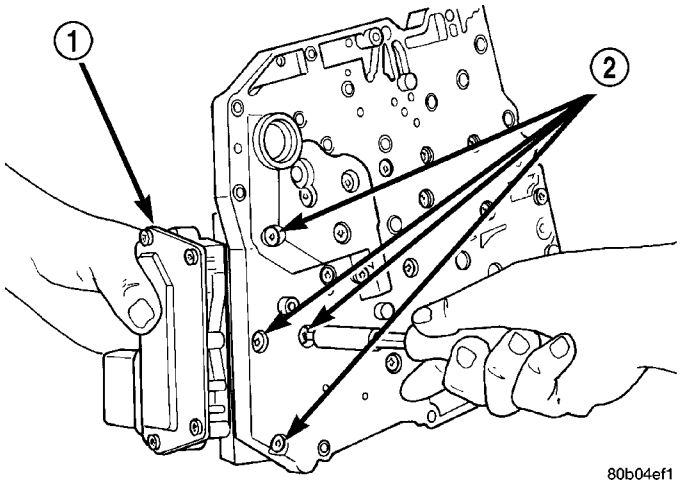


Fig. 242 Solenoid Retaining Screws

1 - SOLENOID/PRESSURE SWITCH ASSEMBLY
2 - RETAINING SCREWS

(2) Install and tighten retaining screws (2) (Fig. 242) to 5.5 N·m (50 in. lbs.) torque.