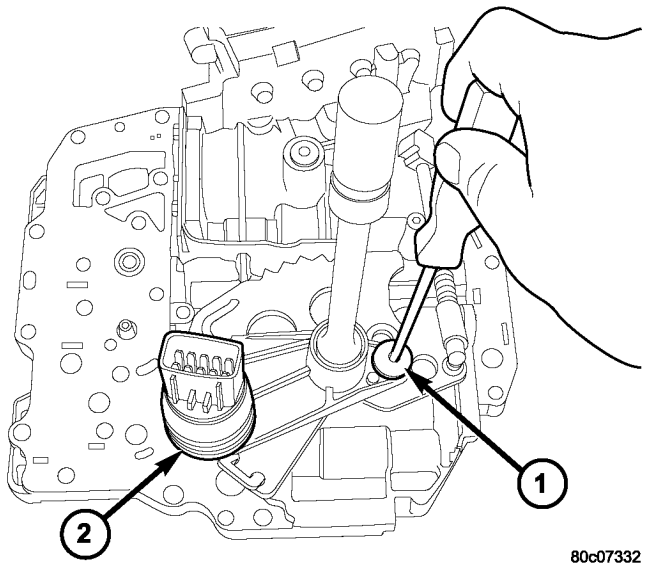

Fig. 254 Manual Shaft Retaining Screw

1 - SCREW
2 - TRS

(3) Remove manual shaft/TRS retaining screw (1) (Fig. 254).

(4) Slide TRS off of manual valve shaft.

INSTALLATION

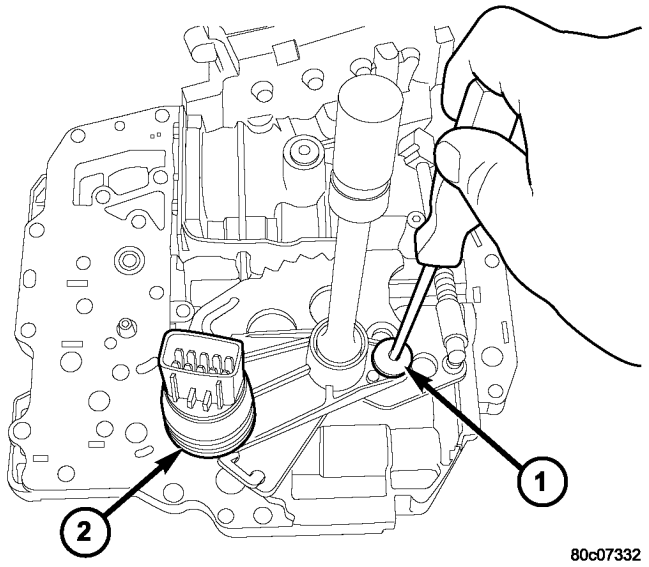

Fig. 255 Manual Shaft Retaining Screw

1 - SCREW
2 - TRS

(1) Install the TRS (2) to the manual shaft. Make sure TRS locating pin rests in manual valve bore slot.

(2) Install the TRS/manual shaft retaining screw (1) (Fig. 255) and torque to 5 N·m (45 in. lbs.) torque.

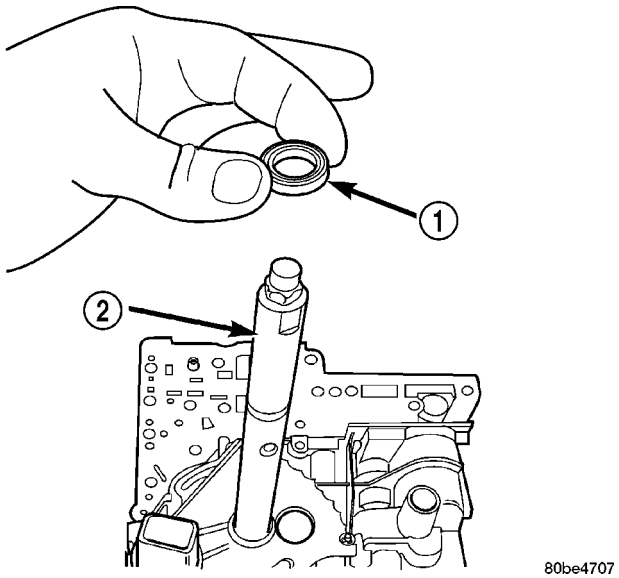

Fig. 256 Manual Shaft Seal - Typical

1 - SEAL
2 - MANUAL SHAFT

(3) Install the manual shaft seal (1) (Fig. 256).

(4) Install valve body to the transmission. (Refer to 21 - TRANSMISSION//AUTOMATIC - 42RLE/VALVE BODY - INSTALLATION)

TRANSMISSION TEMPERATURE SENSOR

DESCRIPTION

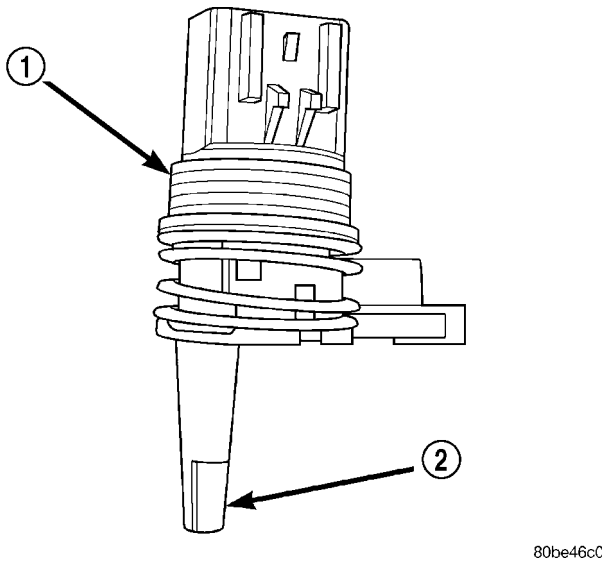

Fig. 257 Transmission Temperature Sensor

1 - TRANSMISSION RANGE SENSOR
2 - TEMPERATURE SENSOR

The transmission temperature sensor (2) (Fig. 257) is located in the transmission range sensor (1) and communicates transmission sump temperature to the TCM.