CONVERTER CLUTCH CONTROL VALVE

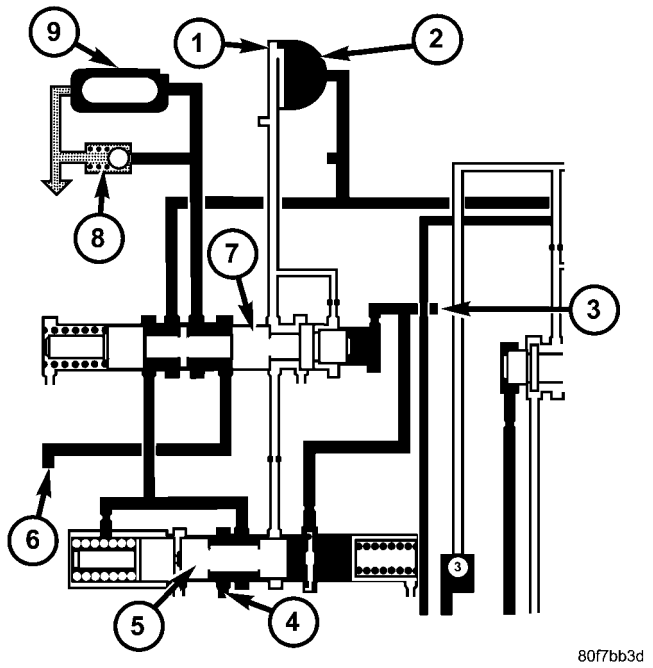

Fig. 265 Converter Clutch Control Valve

1 - CONVERTER CLUTCH
2 - TORQUE CONVERTER
3 - LR/CC SOLENOID
4 - FROM MANUAL VALVE
5 - CONVERTER CLUTCH CONTROL VALVE
6 - TORQUE CONVERTER REGULATOR VALVE
7 - CONVERTER CLUTCH SWITCH VALVE
8 - BYPASS VALVE
9 - COOLER

The converter clutch control valve (5) (Fig. 265) controls the back (on) side of the torque converter clutch (1). When the controller energizes or modulates the LR/CC solenoid to apply the converter clutch piston, both the converter clutch control valve (5) and the converter control valve move, allowing pressure to be applied to the back side of the clutch.

T / C REGULATOR VALVE

The torque converter regulator valve slightly regulates the flow of fluid to the torque converter.

LOW / REVERSE SWITCH VALVE

The low/reverse clutch is applied from different sources, depending on whether low (1st) gear or reverse is selected. The low/reverse switch valve alternates positions depending on from which direction fluid pressure is applied. By design, when the valve is shifted by fluid pressure from one channel, the opposing channel is blocked. The switch valve alienates the possibility of a sticking ball check, thus providing consistent application of the low/reverse clutch under these operating conditions.

REMOVAL

NOTE: If valve body is being reconditioned or replaced, it is necessary to perform the Quick Learn Procedure. (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

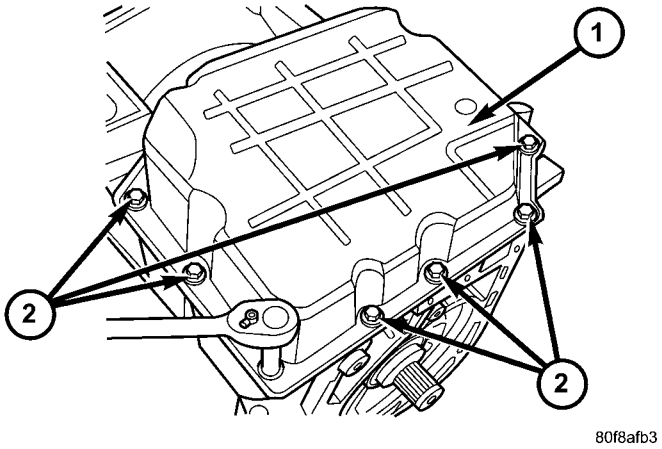

Fig. 266 Remove Transmission Oil Pan Bolts

1 - TRANSMISSION OIL PAN
2 - BOLTS

(1) Disconnect the TRS and solenoid wiring connectors.

(2) Disconnect the shift cable from the shift lever (at the transmission).

(3) Move the manual shift lever clockwise as far as it will go. This should be one position past the L position. Then remove the manual shift lever.

NOTE: One of the oil pan bolts has a sealing patch applied from the factory. Separate this bolts for reuse.

(4) Remove transmission pan bolts (2) (Fig. 266).

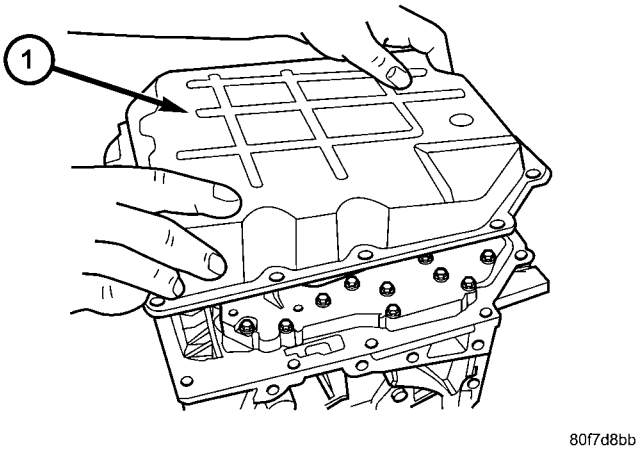

Fig. 267 Remove Transmission Oil Pan

1 - TRANSMISSION OIL PAN