(5) Remove transmission oil pan (1) (Fig. 267).

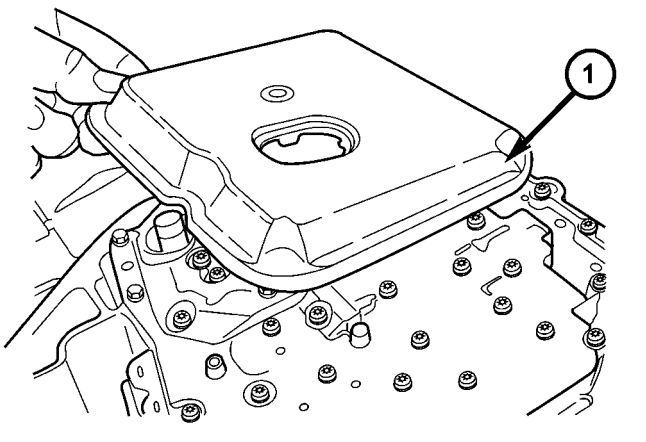

Fig. 268 Remove Transmission Filter

1 - TRANSMISSION FILTER

(6) Remove oil filter (1) (Fig. 268) from valve body. It is held in place by two screws.

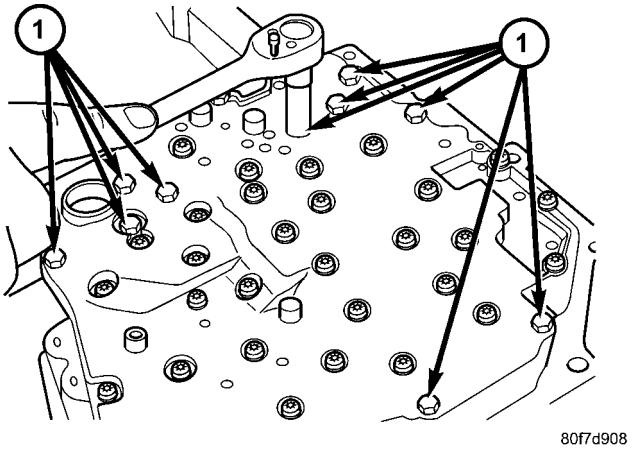

Fig. 269 Remove Valve Body Bolts

1 - BOLTS

(7) Remove valve body bolts-to-case (1) (Fig. 269).

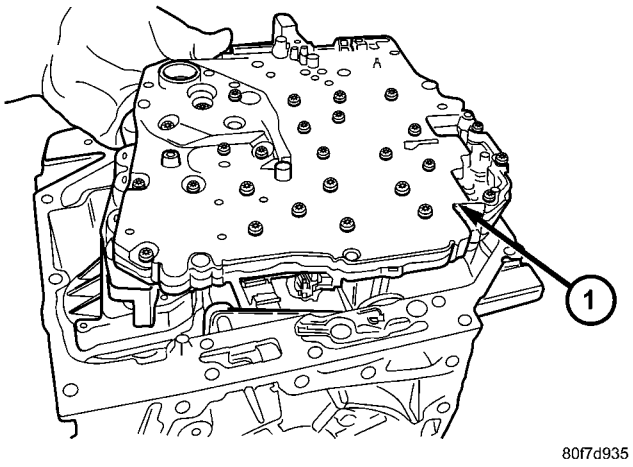

Fig. 270 Remove Valve Body From Transmission

1 - VALVE BODY

CAUTION: The overdrive and underdrive accumulators and springs may fall out when removing the valve body.

(8) Carefully remove valve body assembly (1) from the transmission (Fig. 270).

DISASSEMBLY

NOTE: If the valve body is being reconditioned or replaced, it is necessary to perform the Quick Learn Procedure using the DRBIII® Scan Tool (Refer to 8 - ELECTRICAL/ELECTRONIC CONTROL MODULES/ TRANSMISSION CONTROL MODULE - STANDARD PROCEDURE)

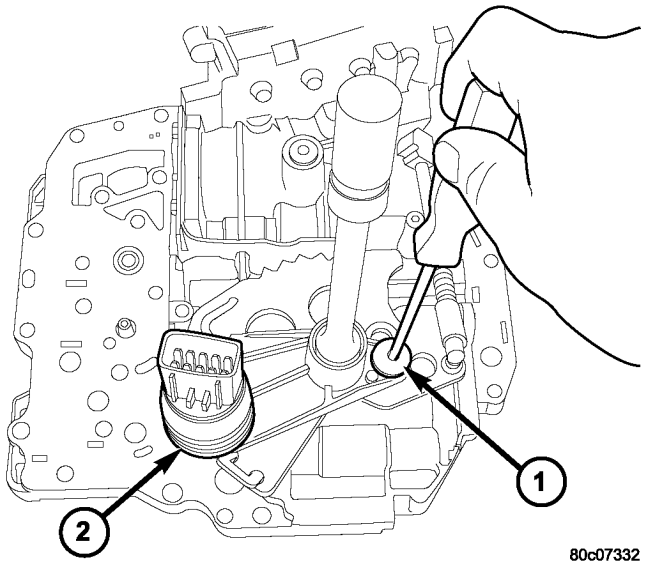

Fig. 271 Manual Shaft Retaining Screw

1 - SCREW
2 - TRS

(1) Remove manual shaft seal.
(2) Remove manual shaft screw (1) (Fig. 271).