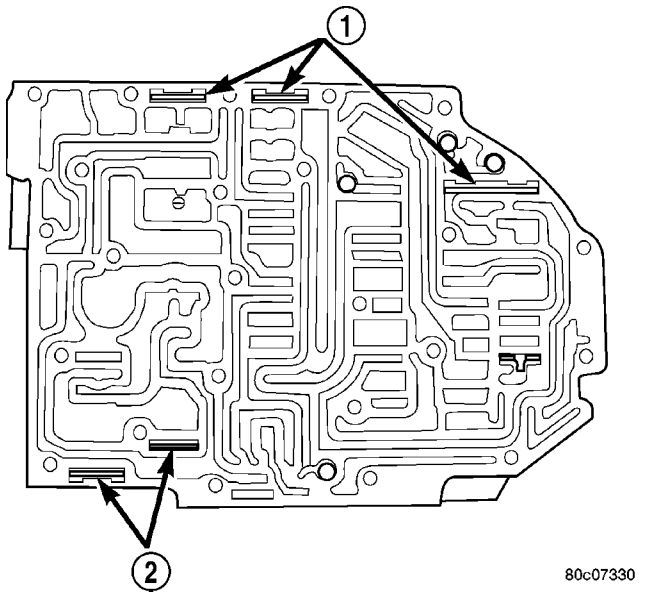


*Fig. 290 Valve Retainer Location*

1 - RETAINER
2 - RETAINER

(4) Verify that all retainers (1, 2) are installed as shown (Fig. 290). Retainers should be flush or below valve body surface.

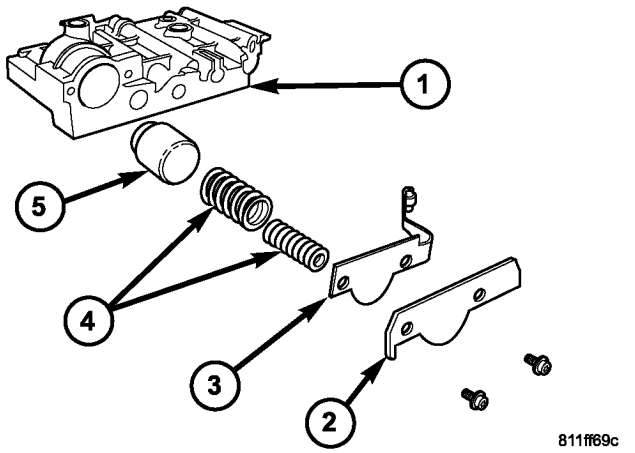


*Fig. 291 2/4 Accumulator Assembly*

1 - VALVE BODY
2 - RETAINER PLATE
3 - DETENT SPRING
4 - RETURN SPRINGS
5 - PISTON

(5) Install 2/4 Accumulator components (1-5) as shown (Fig. 291). Torque 2/4 Accumulator retainer plate to 5 N·m (45 in. lbs.).