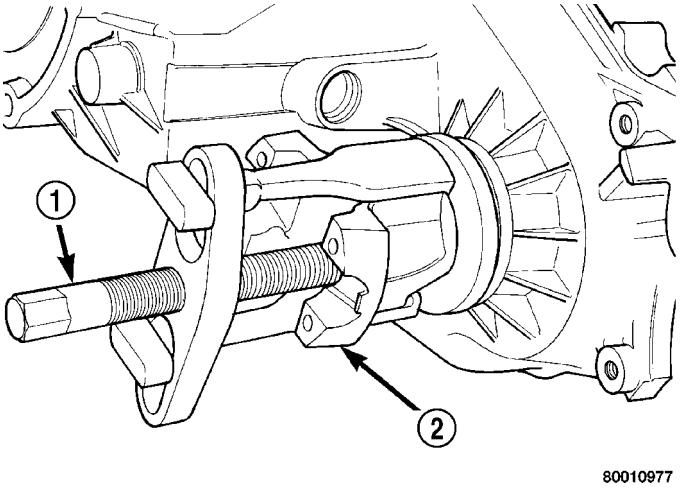


Fig. 10 Yoke Removal

1 - PULLER TOOL
2 - YOKE

(4) Remove seal washer from front output shaft. Discard washer as it should not be reused.

(5) Remove nut and washer that attach range lever to sector shaft. Then move sector to neutral position and remove range lever from shaft (Fig. 11).

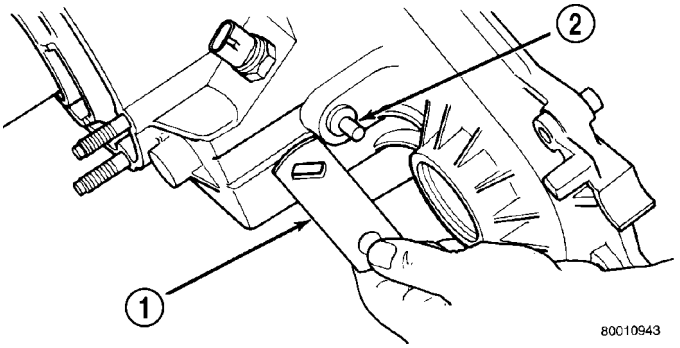


Fig. 11 Range Lever Removal

1 - RANGE LEVER
2 - SECTOR SHAFT

FRONT OUTPUT SHAFT AND DRIVE CHAIN

(1) Support transfer case so rear case is facing upward.

(2) Remove bolts holding front case to rear case. The case alignment bolts require flat washers (Fig. 12).

(3) Loosen rear case with flat blade screwdriver to break sealer bead. Insert pry tool blade only into notches provided at each end of case (Fig. 13).

(4) Remove rear case from front case.

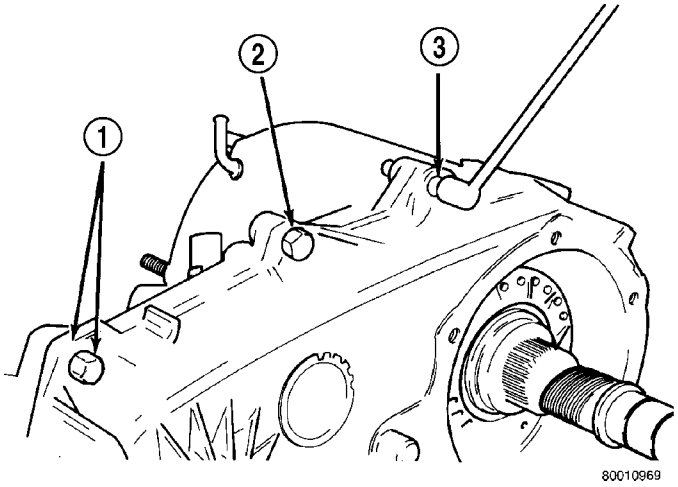


Fig. 12 Rear Case Alignment Bolt Locations

1 - DOWEL BOLT AND WASHER (2)
2 - CASE BOLT (5)
3 - SPLINE HEAD BOLT (1)

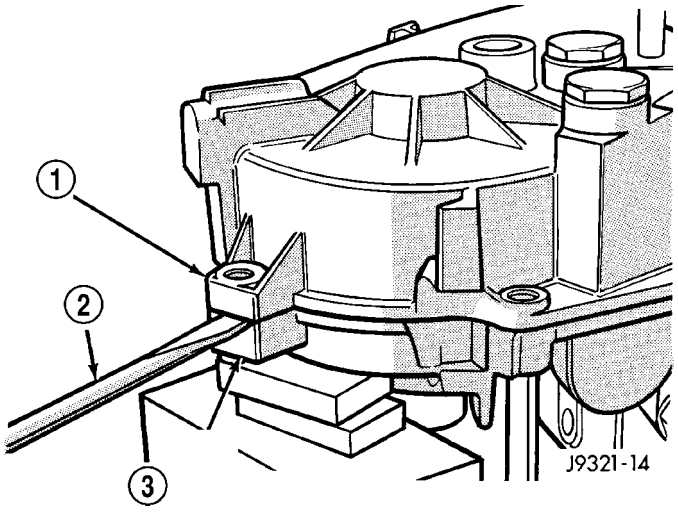


Fig. 13 Loosening Rear Case - Typical

1 - REAR CASE
2 - PRY TOOL (IN CASE SLOT)
3 - FRONT CASE

(5) Remove oil pickup tube from rear case (Fig. 14).

(6) Remove mode fork spring (Fig. 15).

(7) Pull front output shaft upward and out of front output shaft bearing (Fig. 16).

(8) Remove front output shaft and chain.