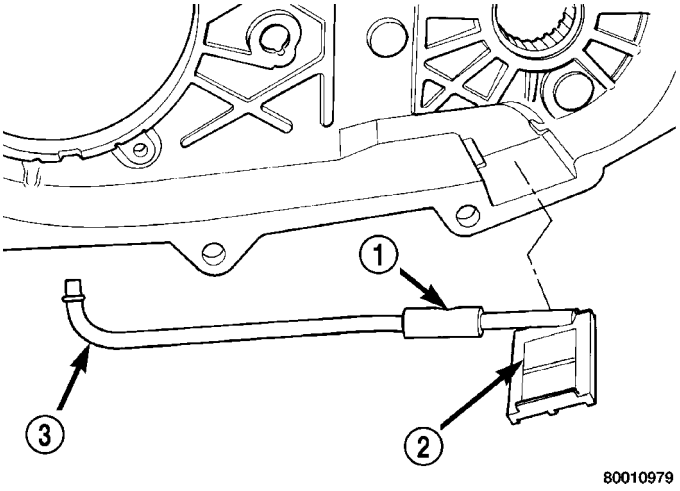


Fig. 14 Oil Pickup Tube Removal

1 - CONNECTING HOSE
2 - PICKUP SCREEN
3 - PICKUP TUBE

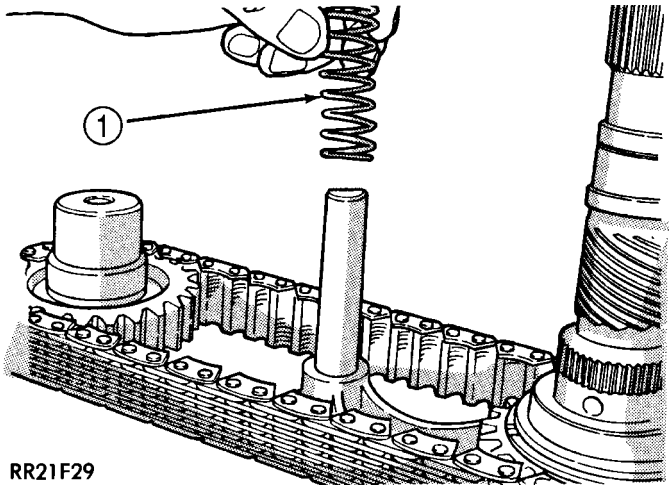


Fig. 15 Mode Fork Spring Removal

1 - MODE SPRING

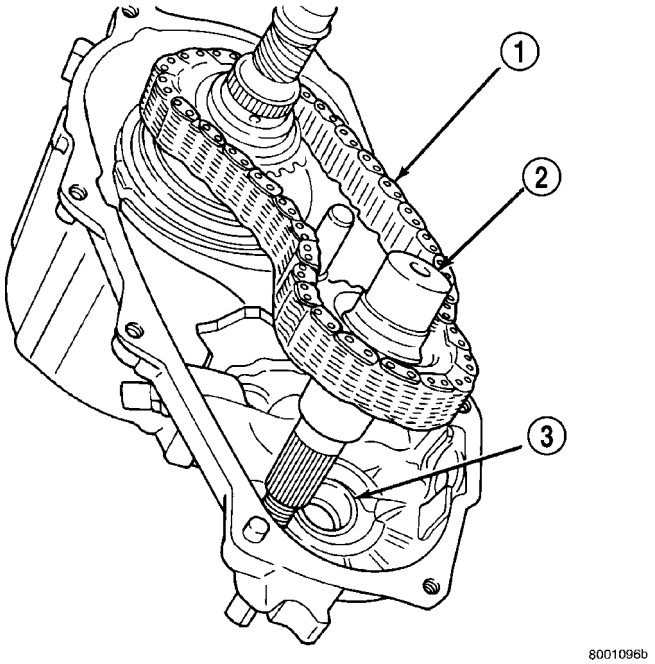


Fig. 16 Remove Front Output Shaft And Chain

1 - DRIVE CHAIN
2 - FRONT OUTPUT SHAFT
3 - SHAFT FRONT BEARING

SHIFT FORKS AND MAINSHAFT

(1) Remove detent plug, O-ring, detent spring and detent plunger (Fig. 17).

(2) Remove mainshaft from mode sleeve and input gear pilot bearing.

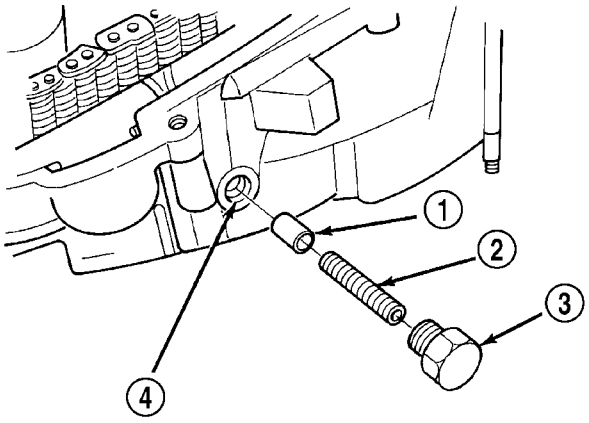


Fig. 17 Detent Plug, Spring And Plunger Removal

1 - POPPET
2 - SPRING
3 - SCREW
4 - POPPET BORE (IN CASE)

(3) Remove mode fork and sleeve as an assembly (Fig. 18). Note position of sleeve for assembly reference. The short side of the sleeve faces upward.

(4) Remove range fork and hub as an assembly (Fig. 19). Note fork position for installation reference.

(5) Remove shift sector from front case (Fig. 20).