(6) Remove shift sector bushing and O-ring (Fig. 21).

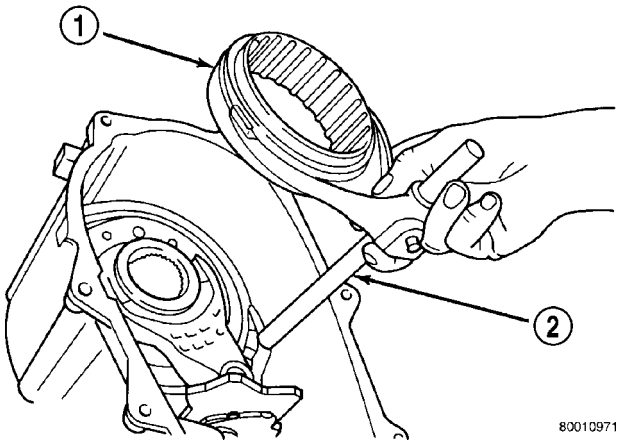

Fig. 18 Mode Fork And Sleeve Removal

1 - MODE SLEEVE
2 - MODE FORK AND RAIL

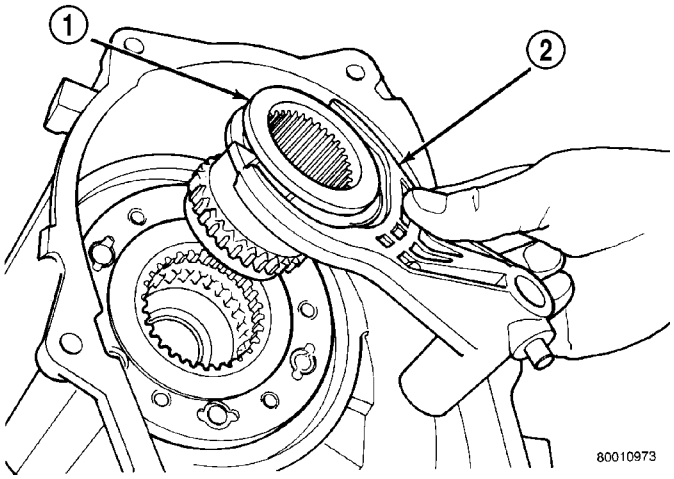

Fig. 19 Range Fork And Sleeve Removal

1 - RANGE HUB
2 - RANGE FORK

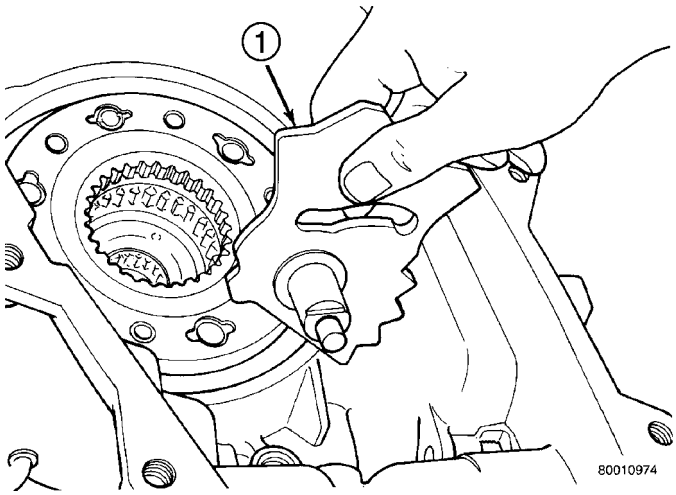

Fig. 20 Shift Sector Removal

1 - SHIFT SECTOR

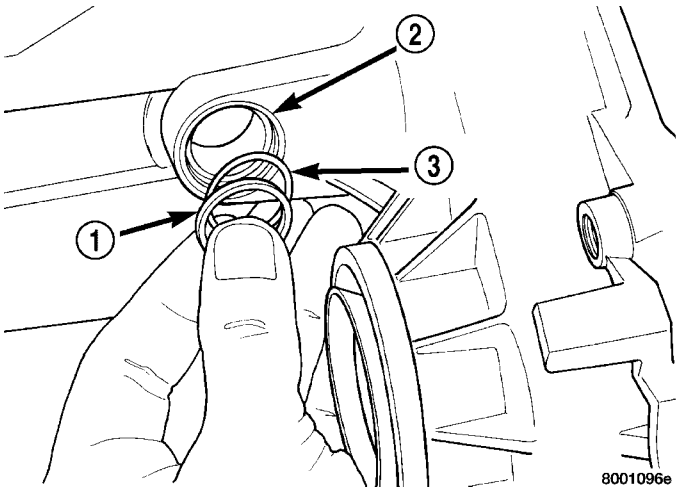

Fig. 21 Sector Bushing And O-Ring Removal

1 - SEAL RETAINER
2 - SECTOR SHAFT BORE
3 - O-RING SEAL

MAINSHAFT

(1) Remove mode hub retaining ring with heavy duty snap-ring pliers (Fig. 22).
(2) Slide mode hub off mainshaft (Fig. 23).
(3) Slide drive sprocket off mainshaft (Fig. 24).