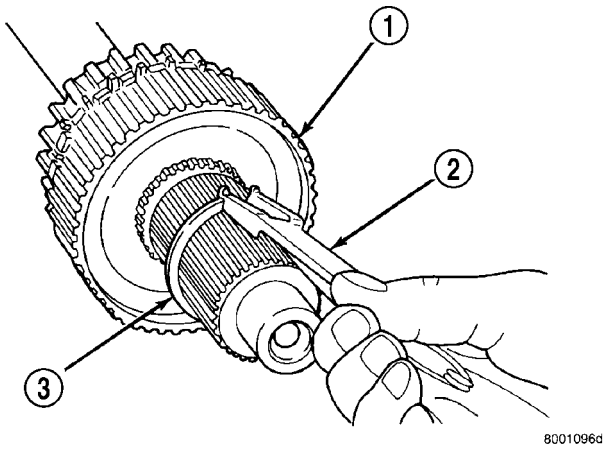


Fig. 22 Mode Hub Retaining Ring Removal

1 - MODE HUB
2 - SNAP-RING PLIERS (HEAVY DUTY)
3 - MODE HUB RETAINING RING

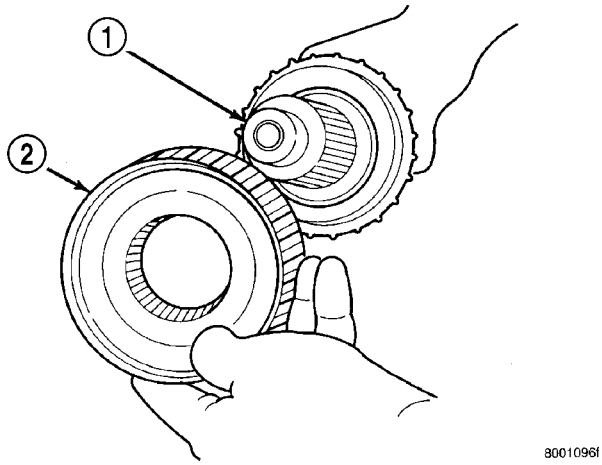


Fig. 23 Mode Hub Removal

1 - MAINSHAFT
2 - MODE HUB

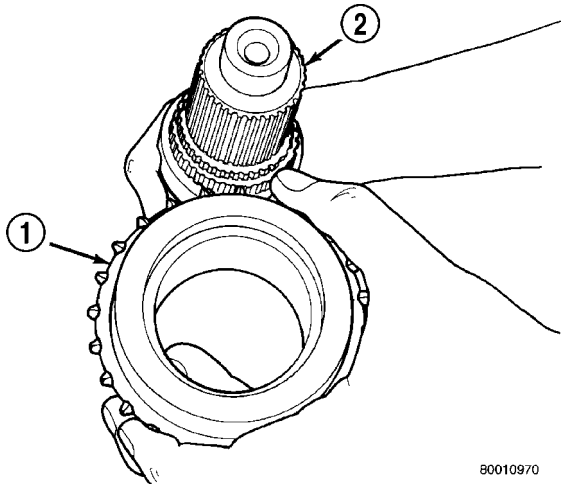


Fig. 24 Drive Sprocket Removal

1 - DRIVE SPROCKET
2 - MAINSHAFT

INPUT GEAR AND LOW RANGE GEAR

(1) Remove front bearing retainer attaching bolts (Fig. 25).

(2) Remove front bearing retainer. Pry retainer loose with pry tool positioned in slots at each end of retainer (Fig. 26).

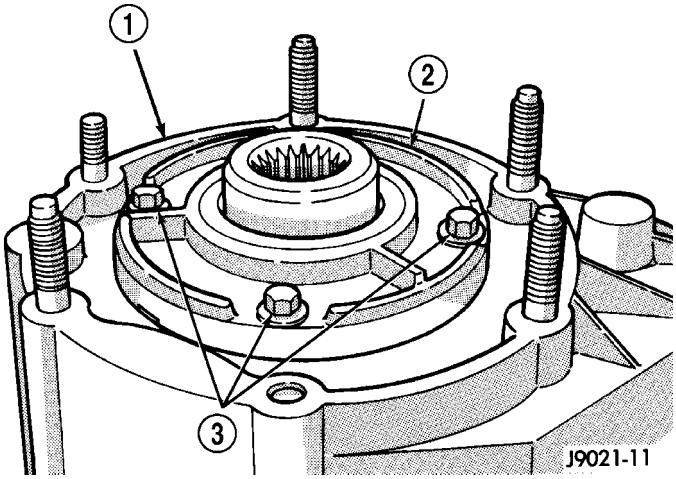


Fig. 25 Front Bearing Retainer Bolts

1 - FRONT CASE
2 - FRONT BEARING RETAINER
3 - RETAINER BOLTS