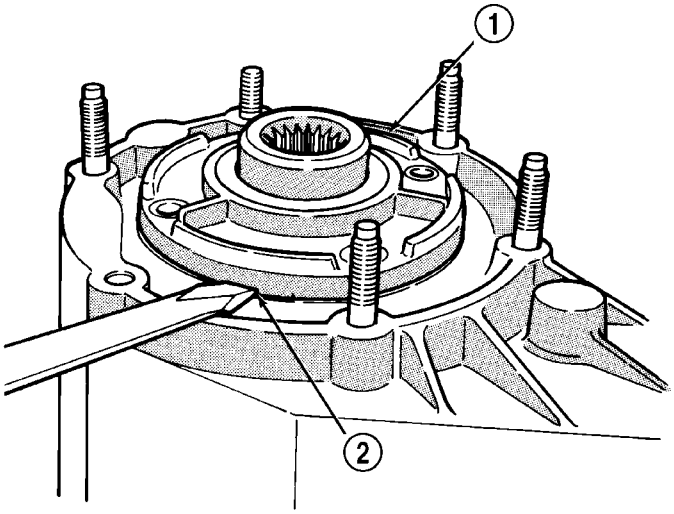


Fig. 26 Front Bearing Retainer Removal

1 - FRONT BEARING RETAINER
2 - RETAINER SLOT

(3) Remove front bearing retainer seal. Tap seal out with drift and hammer.

(4) Remove input gear retaining ring with heavy duty snap-ring pliers (Fig. 27)

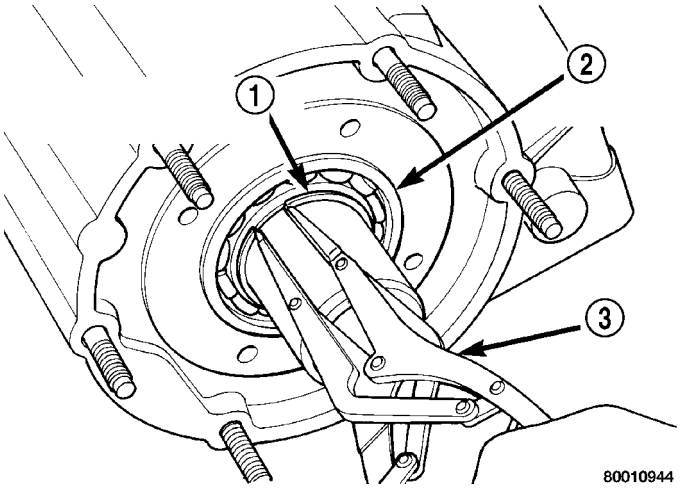


Fig. 27 Removing Input Gear Retaining Ring

1 - INPUT GEAR BEARING RETAINING RING
2 - INPUT GEAR BEARING
3 - SNAP-RING PLIERS

(5) Place front case in horizontal position. Then remove input gear and low range gear as an assembly (Fig. 28). Tap gear out of bearing with plastic mallet if necessary.

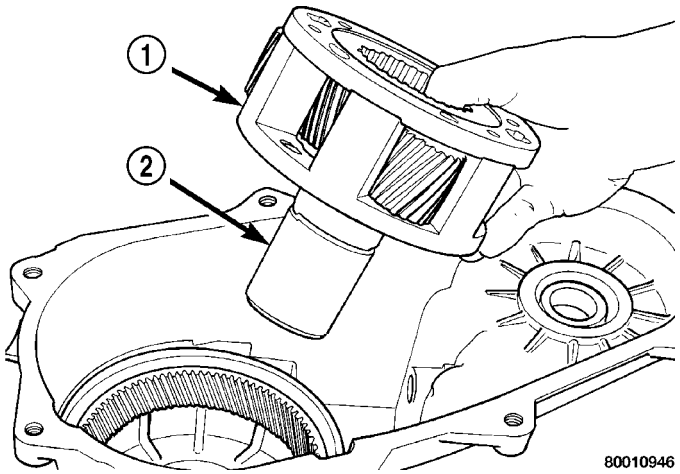


Fig. 28 Input Gear And Planetary Carrier Removal

1 - PLANETARY ASSEMBLY
2 - INPUT GEAR

INPUT AND LOW RANGE GEAR

(1) Remove snap-ring that retains input gear in low range gear (Fig. 29).

(2) Remove retainer (Fig. 30).

(3) Remove front tabbed thrust washer (Fig. 31).

(4) Remove input gear (Fig. 32).

(5) Remove rear tabbed thrust washer from low range gear (Fig. 33).

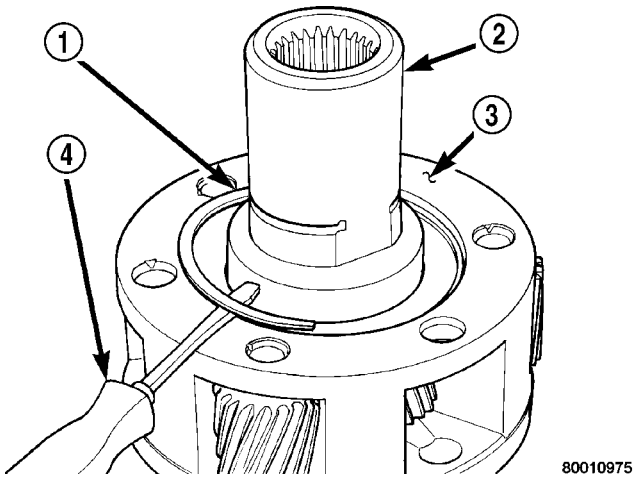


Fig. 29 Input Gear Snap-Ring Removal

1 - CARRIER LOCK RETAINING RING
2 - INPUT GEAR
3 - PLANETARY CARRIER
4 - SCREWDRIVER