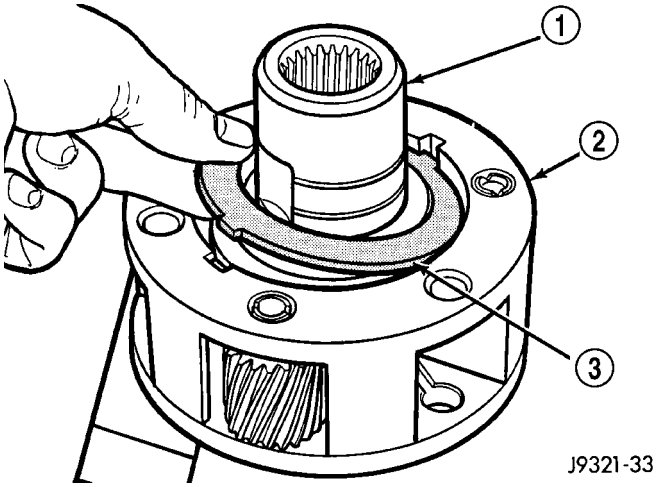


Fig. 30 Input Gear Retainer Removal

1 - INPUT GEAR
2 - LOW RANGE GEAR
3 - RETAINER

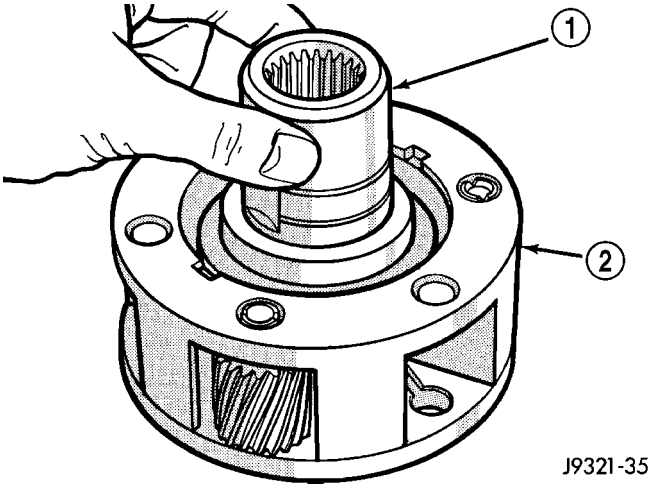


Fig. 32 Input Gear Removal

1 - INPUT GEAR
2 - LOW RANGE GEAR

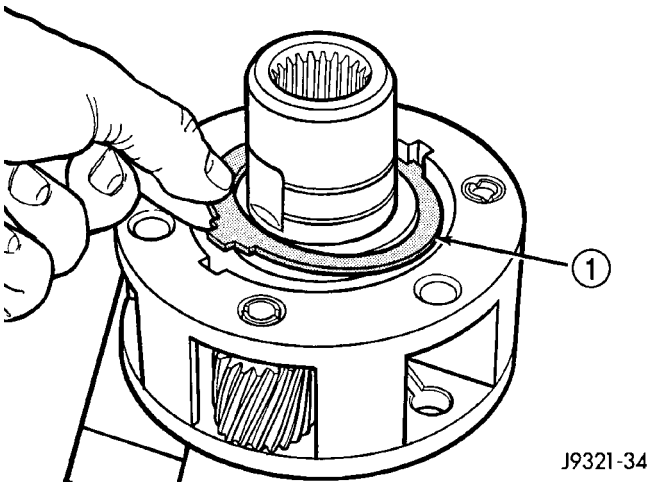


Fig. 31 Front Tabbed Thrust Washer Removal

1 - FRONT TABBED THRUST WASHER

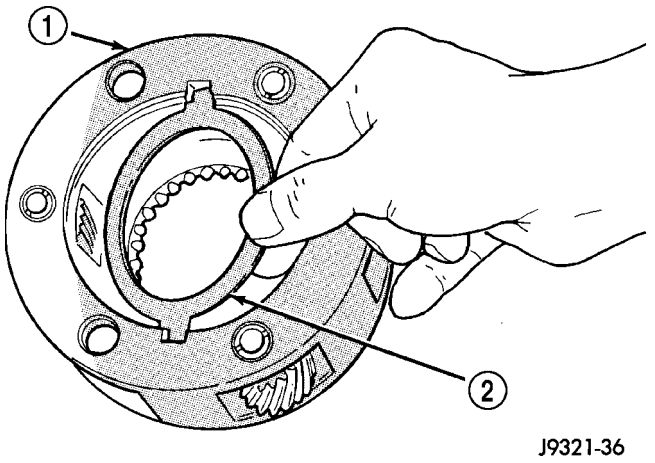


Fig. 33 Rear Tabbed Thrust Washer Removal

1 - LOW RANGE GEAR
2 - REAR TABBED THRUST WASHER

CLEANING

Clean the transfer case parts with a standard parts cleaning solvent. Remove all traces of sealer from the cases and retainers with a scraper and 3M™ all purpose cleaner. Use compressed air to remove solvent residue from oil feed passages in the case halves, retainers, gears, and shafts.

INSPECTION

MAINSHAFT / SPROCKET / HUB

Inspect the splines on the hub and shaft and the teeth on the sprocket (Fig. 34). Minor nicks and scratches can be smoothed with an oilstone. However, replace any part that is damaged.

Check the contact surfaces in the sprocket bore and on the mainshaft. Minor nicks and scratches can be smoothed with 320-400 grit emery cloth but do not try to salvage the shaft if nicks or wear is severe.