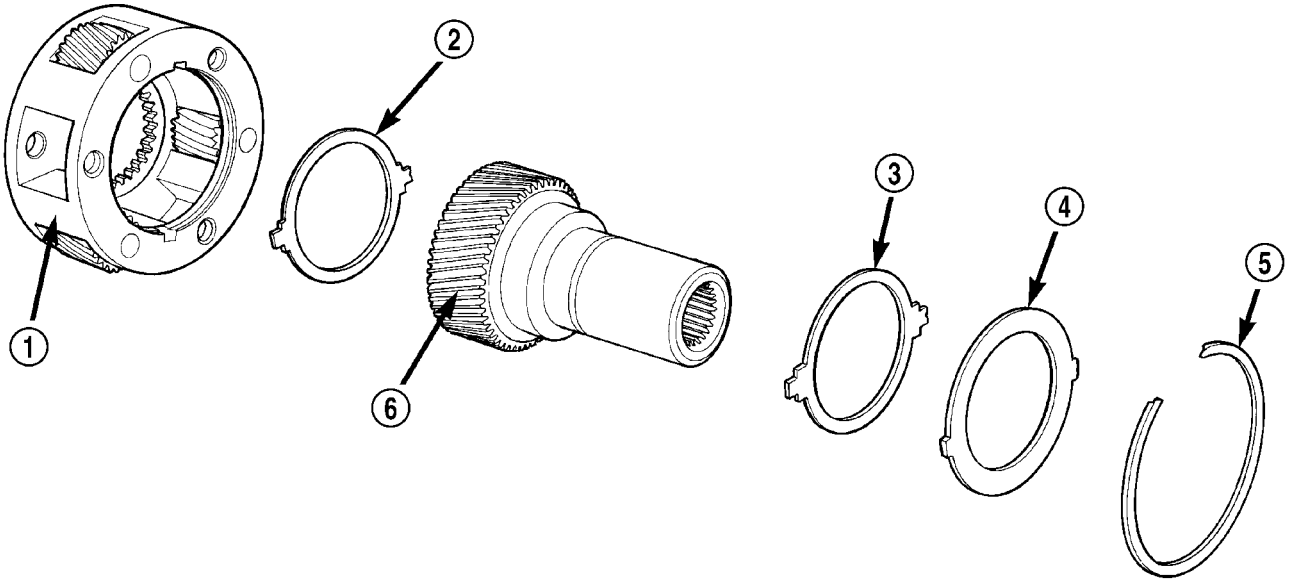

8001b75f

Fig. 35 Input Gear And Carrier Components

1 - PLANETARY CARRIER
2 - REAR THRUST WASHER
3 - FRONT THRUST WASHER
4 - CARRIER LOCK RING
5 - CARRIER LOCK RETAINING RING
6 - INPUT GEAR

SHIFT FORKS / HUBS / SLEEVES

Check condition of the shift forks and mode fork shift rail (Fig. 36). Minor nicks on the shift rail can be smoothed with 320-400 grit emery cloth.

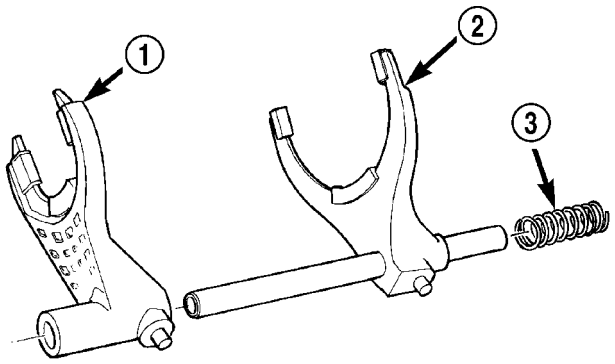

80010948

Fig. 36 Shift Forks

1 - RANGE FORK
2 - MODE FORK AND RAIL
3 - MODE SPRING

Inspect the shift fork wear pads (Fig. 37). The mode fork pads are serviceable and can be replaced if necessary. The range fork pads are not serviceable. The fork must be replaced as an assembly if the pads are worn or damaged.

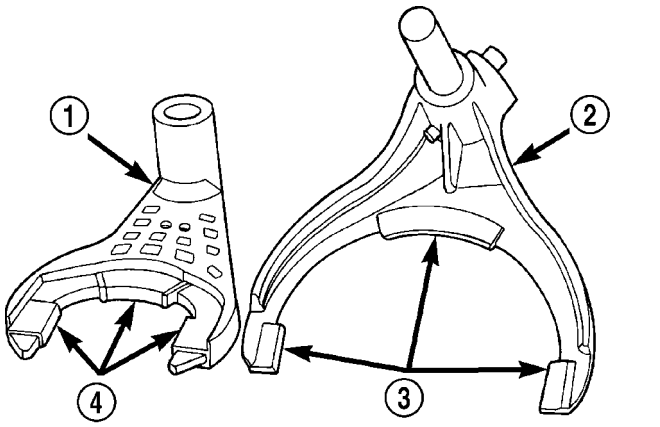

8001097c

Fig. 37 Shift Fork And Wear Pad Locations

1 - RANGE FORK
2 - MODE FORK
3 - WEAR PADS (SERVICEABLE)
4 - WEAR PADS (NON-SERVICEABLE)

Check both of the sleeves for wear or damage, especially on the interior teeth. Replace the sleeves if wear or damage is evident.

REAR RETAINER / BEARING / SEAL / SLINGER / BOOT

Inspect the retainer components (Fig. 38). Replace the bearing if rough or noisy. Check the retainer for cracks or wear in the bearing bore. Clean the retainer sealing surfaces with a scraper and 3M™ all purpose cleaner. This will ensure proper adhesion of the sealer during reassembly.