remove the gear (Fig. 40)

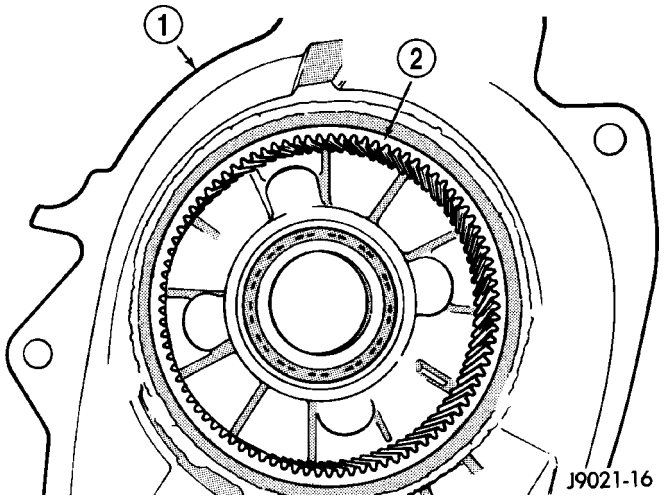


Fig. 40 Low Range Annulus Gear

1 - FRONT CASE
2 - LOW RANGE ANNULUS GEAR

FRONT / REAR CASES AND FRONT RETAINER

Inspect the cases and retainer for wear and damage. Clean the sealing surfaces with a scraper and 3M™ all purpose cleaner. This will ensure proper sealer adhesion at assembly. Replace the input retainer seal; do not reuse it.

Check case condition. If leaks were a problem, look for gouges and severe scoring of case sealing surfaces. Also make sure the front case mounting studs are in good condition.

Check the front case mounting studs and vent tube. The tube can be secured with Loctite™ 271 or 680 if loose. The stud threads can be cleaned up with a die if necessary. Also check condition of the fill/drain plug threads in the rear case. The threads can be repaired with a thread chaser or tap if necessary. Or the threads can be repaired with Helicoil™ stainless steel inserts if required.

OIL PUMP / OIL PICKUP

Examine the oil pump pickup parts. Replace the pump if any part appears to be worn or damaged. Do not disassemble the pump as individual parts are not available. The pump is only available as a complete assembly. The pickup screen, hose, and tube are the only serviceable parts and are available separately.

ASSEMBLY

Lubricate transfer case components with Mopar® ATF +4, Automatic Transmission Fluid, or petroleum jelly (where indicated) during assembly.

BEARINGS AND SEALS

CAUTION: The bearing bores in various transfer case components contain oil feed holes. Make sure replacement bearings do not block the holes.

(1) Remove the front output shaft seal from case with pry tool (Fig. 41).

(2) Remove the front output shaft bearing retaining ring with screwdriver (Fig. 42).

(3) Remove bearing with Tool Handle C-4171 and Tool 5065 (Fig. 43).

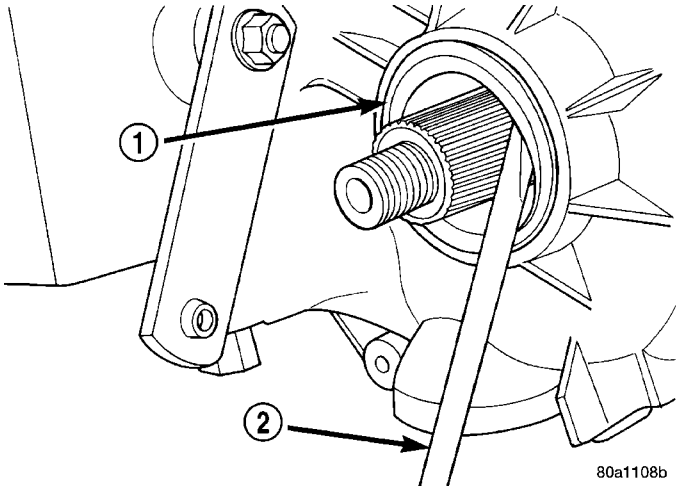


Fig. 41 Front Output Seal Removal - Typical

1 - OUTPUT SHAFT SEAL
2 - PRYBAR

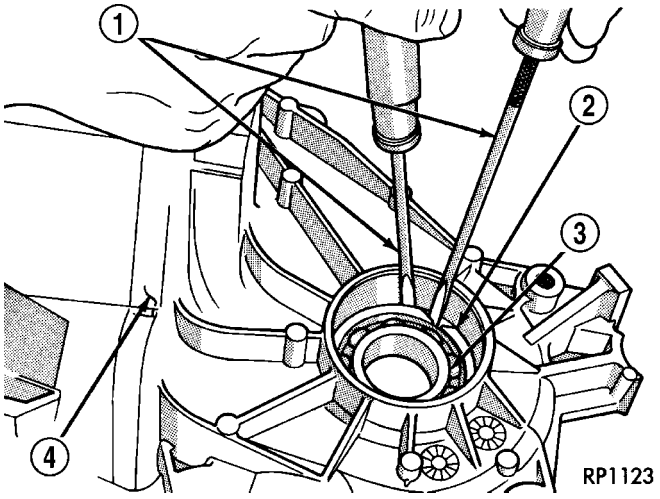


Fig. 42 Front Output Shaft Bearing Retaining Ring Removal

1 - SCREWDRIVERS
2 - SNAP-RING
3 - FRONT OUTPUT SHAFT BEARING
4 - FRONT CASE