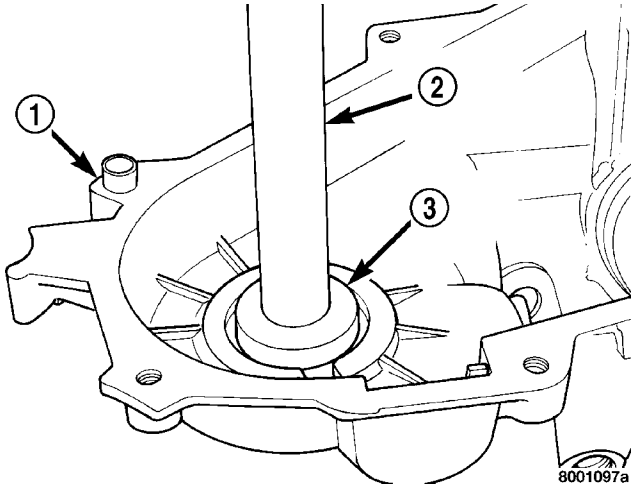

Fig. 43 Front Output Shaft Bearing Removal

1 - FRONT CASE
2 - SPECIAL TOOL C-4171
3 - SPECIAL TOOL 5065

(4) Install front output shaft front bearing in case with Tool Handle C-4171 and Installer 5064 (Fig. 44).

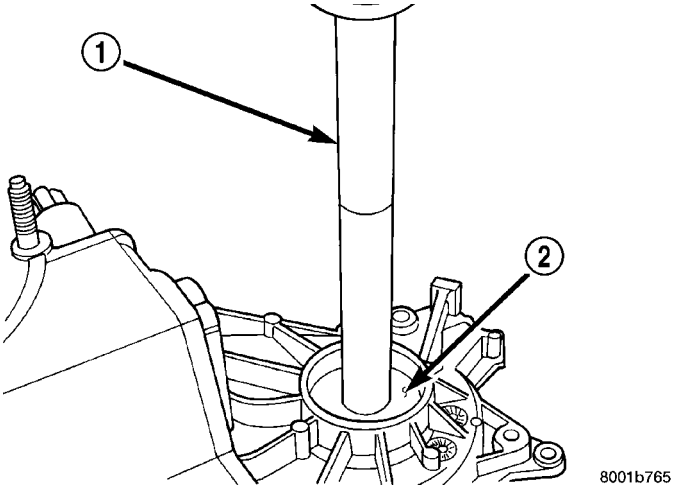

Fig. 44 Front Output Shaft Bearing Installation

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 5064

(5) Install output shaft front bearing retaining ring (Fig. 45). Start ring into place by hand. Then use small screwdriver to work ring into case groove. Be sure ring is fully seated before proceeding.

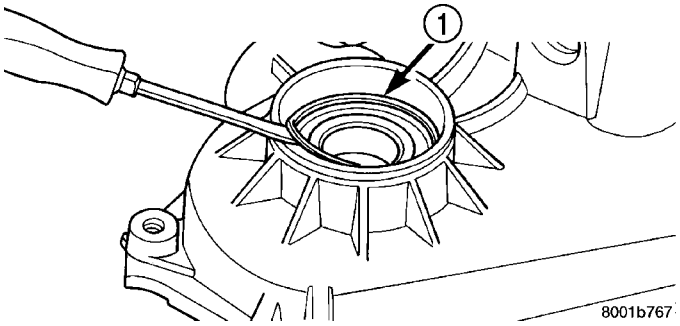

Fig. 45 Installing Output Shaft Front Bearing Retaining Ring

1 - WORK RETAINING RING INTO BORE GROOVE WITH SMALL SCREWDRIVER

(6) Install new front output seal in front case with Installer Tool 8143-A as follows:

(a) Place new seal on tool. **Garter spring on seal goes toward interior of case.**

(b) Start seal in bore with light taps from hammer (Fig. 46). Once seal is started, continue tapping seal into bore until installer tool bottoms against case.

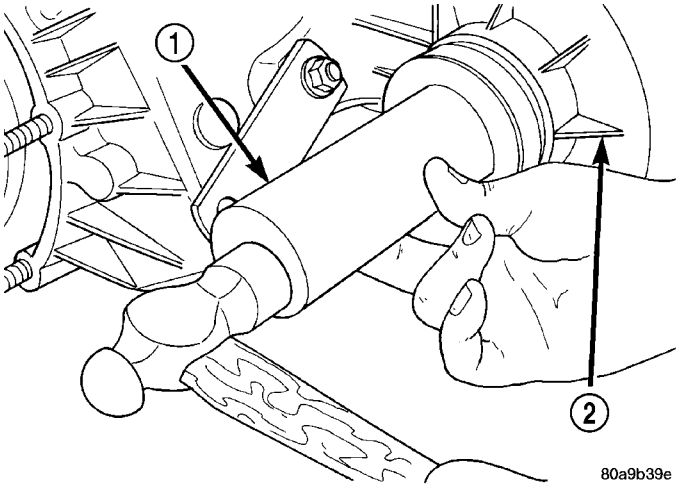

Fig. 46 Front Output Seal Installation - Typical

1 - INSTALLER 8143-A
2 - TRANSFER CASE

(7) Remove the output shaft rear bearing with the screw and jaws from Remover L-4454 and Cup 8148 (Fig. 47).

(8) Install new bearing with Tool Handle C-4171 and Installer 5066 (Fig. 48). The bearing bore is chamfered at the top. Install the bearing so it is flush with the lower edge of this chamfer (Fig. 49).