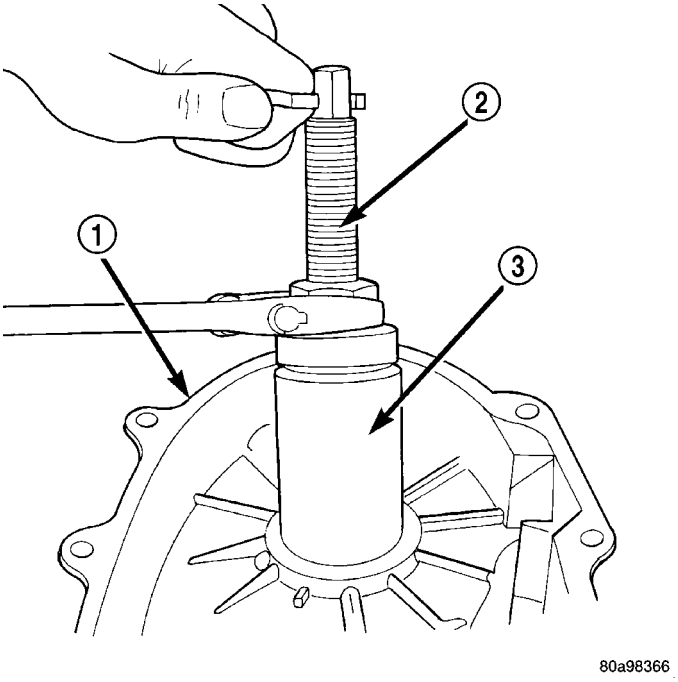

Fig. 47 Output Shaft Rear Bearing Removal

1 - REAR CASE
2 - SPECIAL TOOL L-4454-1 AND L-4454-3
3 - SPECIAL TOOL 8148

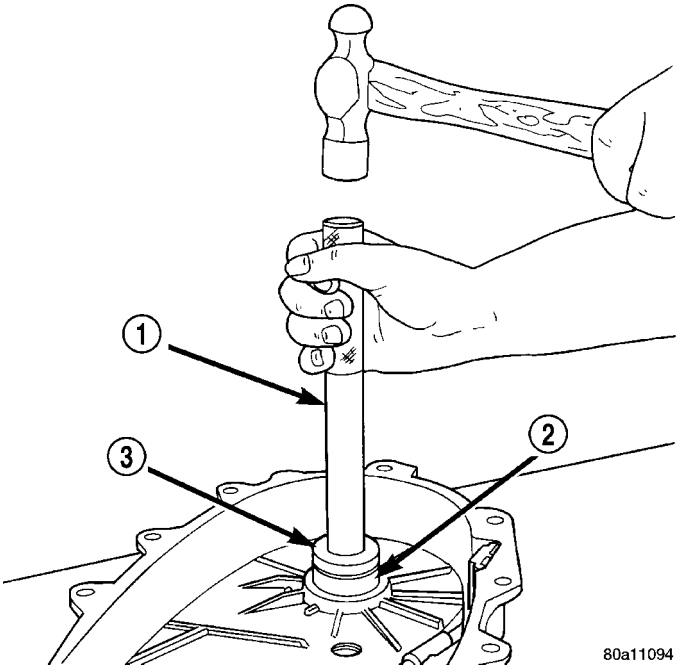

Fig. 48 Output Shaft Rear Bearing Installation

1 - HANDLE C-4171
2 - OUTPUT SHAFT INNER BEARING
3 - INSTALLER 5066

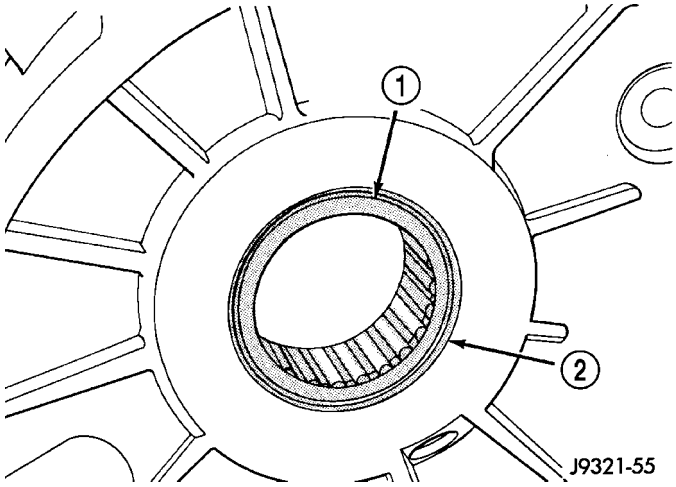

Fig. 49 Output Shaft Rear Bearing Installation Depth

1 - BEARING (SEATED) AT LOWER EDGE OF CHAMFER
2 - CHAMFER

(9) Using Remover C-4210 and Handle C-4171, drive input shaft bearing from inside the annulus gear opening in the case (Fig. 50).

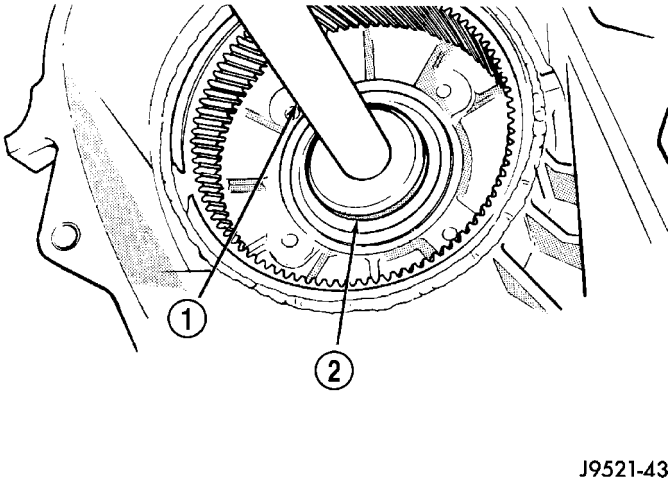

Fig. 50 Input Shaft Bearing Removal

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL C-4210

(10) Install locating ring on new bearing.

(11) Position case so forward end is facing upward.

(12) Using Remover C-4210 and Handle C-4171, drive input shaft bearing into case. The bearing locating ring must be fully seated against case surface (Fig. 51).