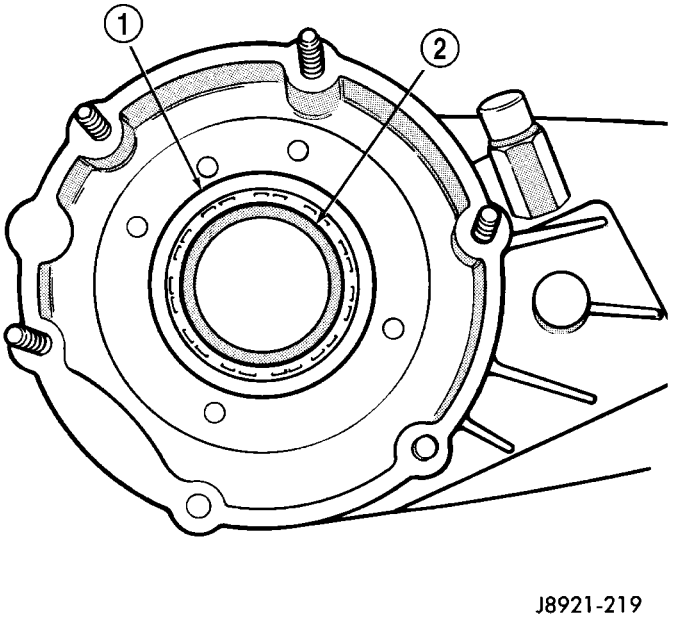

Fig. 51 Seating Input Shaft Bearing

1 - SNAP-RING
2 - INPUT SHAFT BEARING

(13) Remove input gear pilot bearing by inserting a suitably sized drift into the splined end of the input gear and driving the bearing out with the drift and a hammer (Fig. 52).

(14) Install new pilot bearing with Installer 5065 and Handle C-4171 (Fig. 53).

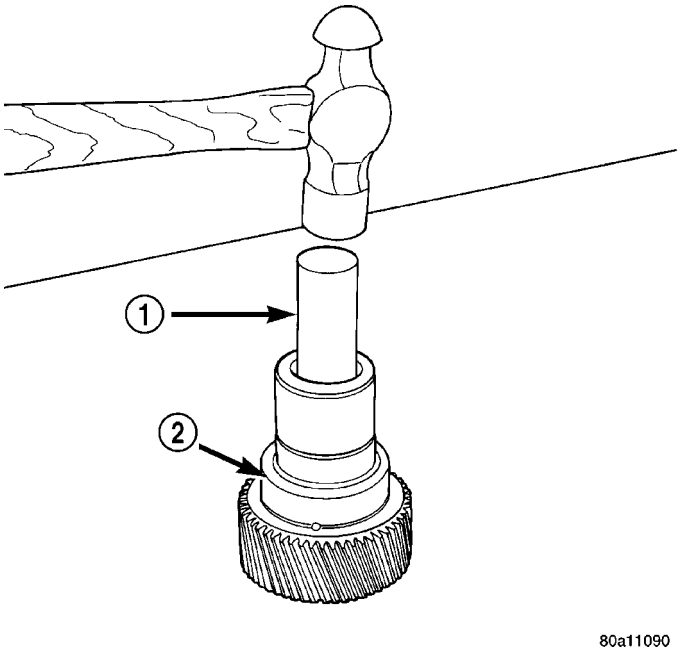

Fig. 52 Remove Input Gear Pilot Bearing

1 - DRIFT
2 - INPUT GEAR

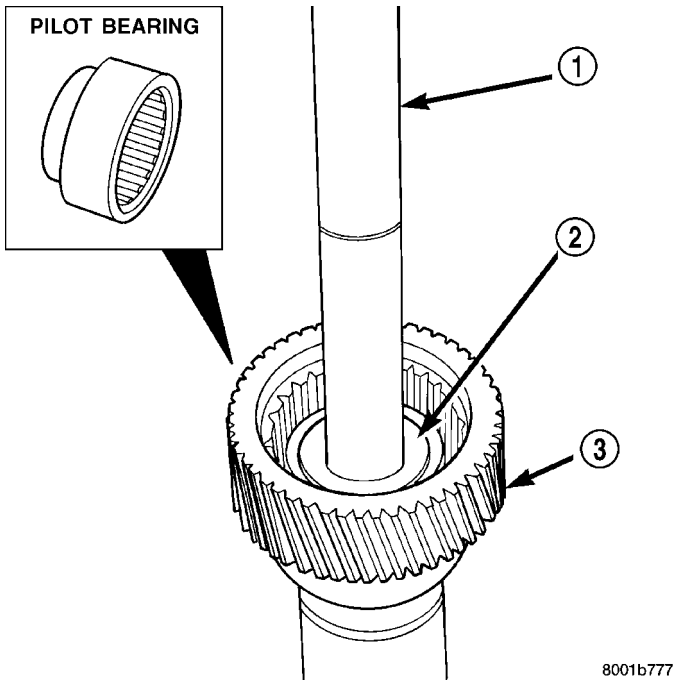

Fig. 53 Install Input Gear Pilot Bearing

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 5065
3 - INPUT GEAR

(15) Remove front bearing retainer seal with suitable pry tool.

(16) Install new front bearing retainer seal with Installer 7884 (Fig. 54).

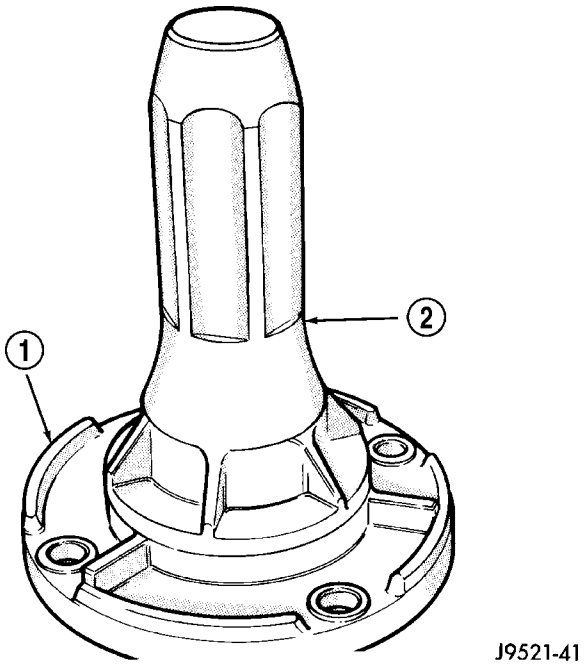

Fig. 54 Install Front Bearing Retainer Seal

1 - FRONT BEARING RETAINER
2 - SPECIAL TOOL 7884

(17) Remove seal from oil pump housing with a suitable pry tool