(18) Install new seal in oil pump housing with Installer 7888 (Fig. 55).

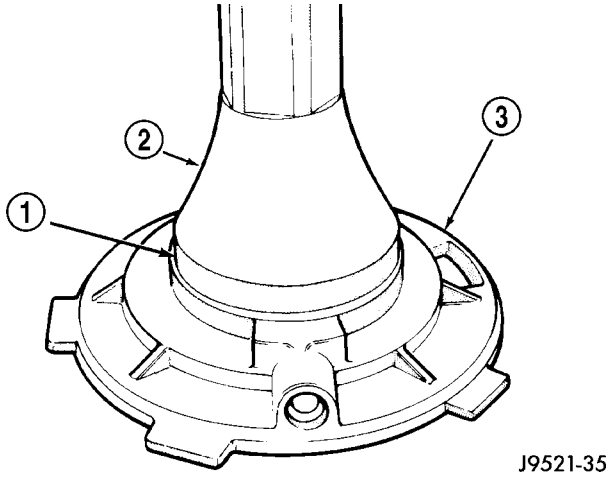


Fig. 55 Oil Pump Seal Installation

1 - HOUSING SEAL
2 - SPECIAL TOOL 7888
3 - OIL PUMP FEED HOUSING

(19) Remove rear retainer bearing with Installer 8128 and Handle C-4171.

(20) Install rear bearing in retainer with Handle C-4171 and Installer 5064 (Fig. 56).

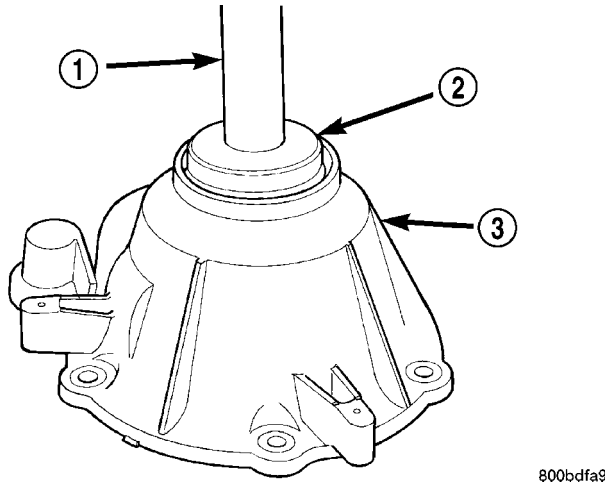


Fig. 56 Installing Rear Bearing In Retainer

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 5064
3 - REAR RETAINER

INPUT AND LOW RANGE GEAR

(1) Install first thrust washer in low range gear (Fig. 57). Be sure washer tabs are properly aligned in gear notches.

(2) Install input gear in low range gear. Be sure input gear is fully seated.

(3) Install remaining thrust washer in low range gear and on top of input gear. Be sure washer tabs are properly aligned in gear notches.

(4) Install retainer on input gear and install snap-ring.

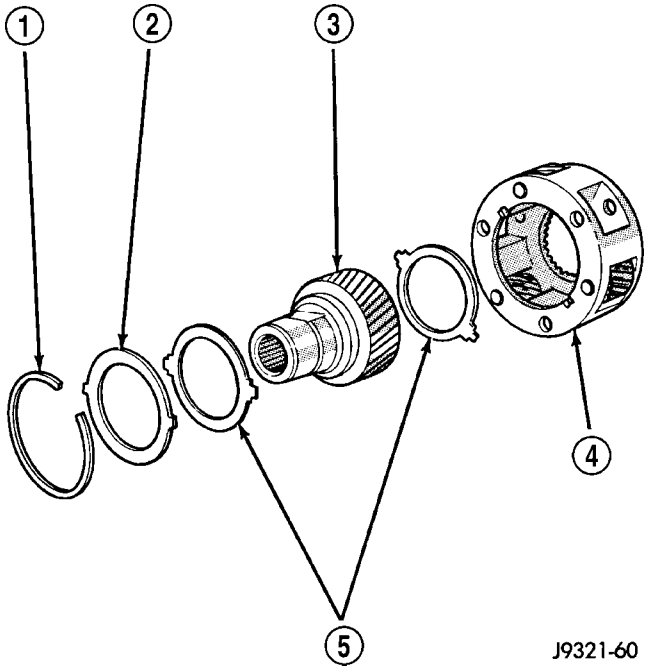


Fig. 57 Input/Low Range Gear Components

1 - SNAP-RING
2 - RETAINER PLATE
3 - INPUT GEAR
4 - LOW RANGE GEAR
5 - THRUST WASHERS

INPUT GEAR AND LOW RANGE GEAR

(1) Align and install low range/input gear assembly in front case (Fig. 58). Be sure low range gear pinions are engaged in annulus gear and that input gear shaft is fully seated in front bearing.

(2) Install snap-ring to hold input/low range gear into front bearing (Fig. 59).

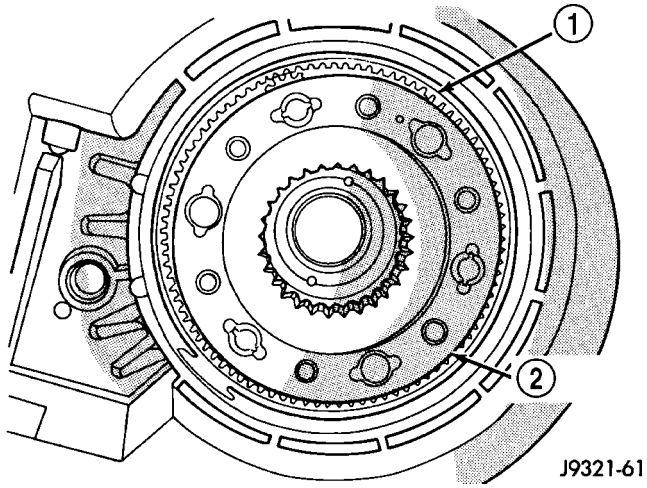


Fig. 58 Input/Low Range Gear Installation

1 - ANNULUS GEAR
2 - INPUT/LOW RANGE GEAR