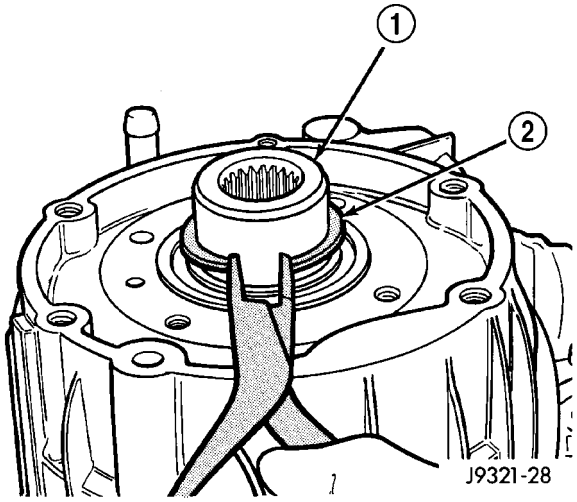


Fig. 59 Install Snap-Ring

1 - INPUT GEAR
2 - SNAP-RING

(3) Clean gasket sealer residue from retainer and inspect retainer for cracks or other damage.

(4) Apply a 3 mm (1/8 in.) bead of Mopar® gasket maker or silicone adhesive to sealing surface of retainer.

(5) Align cavity in seal retainer with fluid return hole in front of case.

CAUTION: Do not block fluid return cavity on sealing surface of retainer when applying Mopar® gasket maker or silicone adhesive sealer. Seal failure and fluid leak can result.

(6) Install bolts to hold retainer to transfer case (Fig. 60). Tighten to 21 N·m (16 ft. lbs.) of torque.

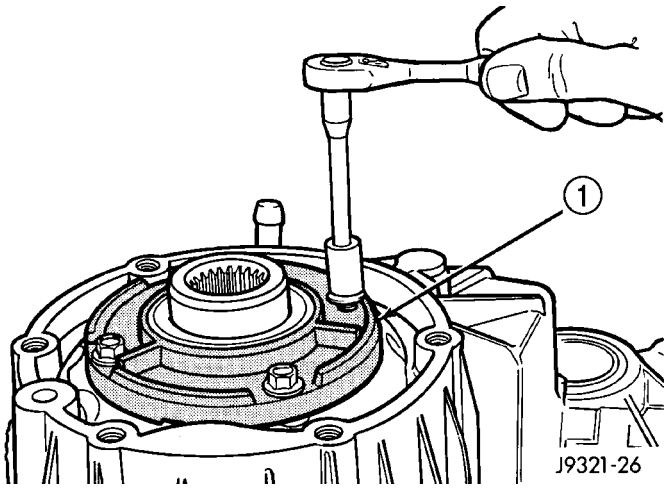


Fig. 60 Install Front Bearing Retainer

1 - FRONT BEARING RETAINER

MAINSHAFT

(1) Lubricate mainshaft splines with recommended transmission fluid.

(2) Slide drive sprocket onto mainshaft.

(3) Slide mode hub onto mainshaft.

(4) Install mode hub retaining ring. Verify that the retaining ring is fully seated in mainshaft groove.

SHIFT FORKS AND MAINSHAFT

(1) Install new sector shaft O-ring and bushing (Fig. 61).

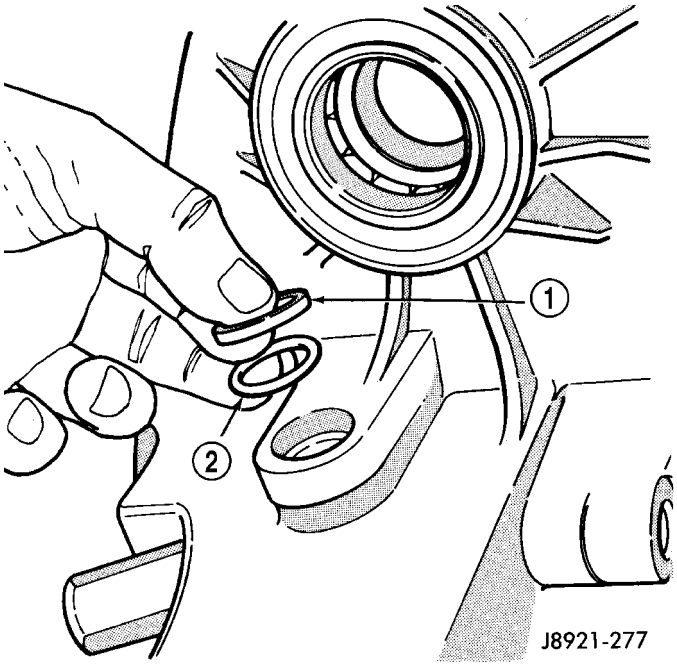


Fig. 61 Sector O-Ring And Bushing Installation

1 - SECTOR BUSHING
2 - O-RING

(2) Install shift sector in case (Fig. 62). Lubricate sector shaft with transmission fluid before installation.

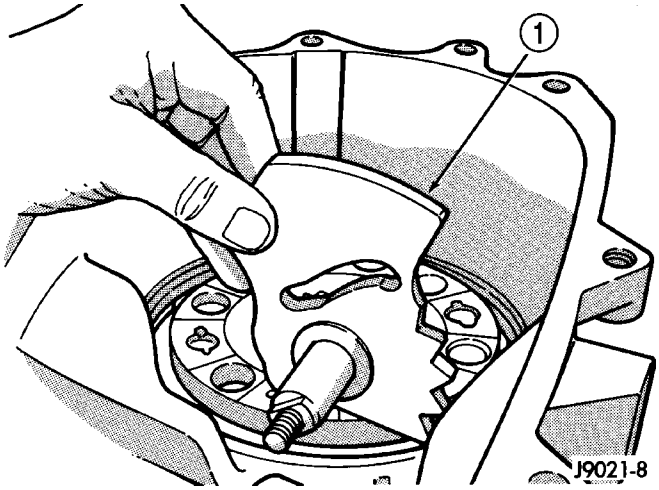


Fig. 62 Shift Sector Installation

1 - SHIFT SECTOR

(3) Install range lever, washer, and nut on sector shaft (Fig. 63). Tighten range lever nut to 27-34 N·m (20-25 ft. lbs.) torque.