
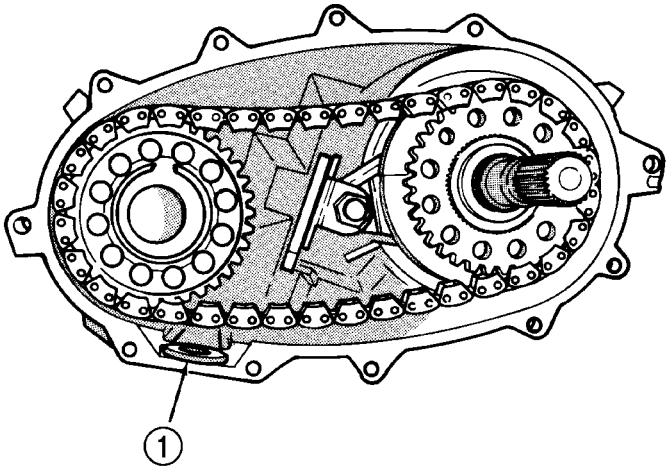


J8921-288

Fig. 71 Installing Case Magnet

1 - MAGNET

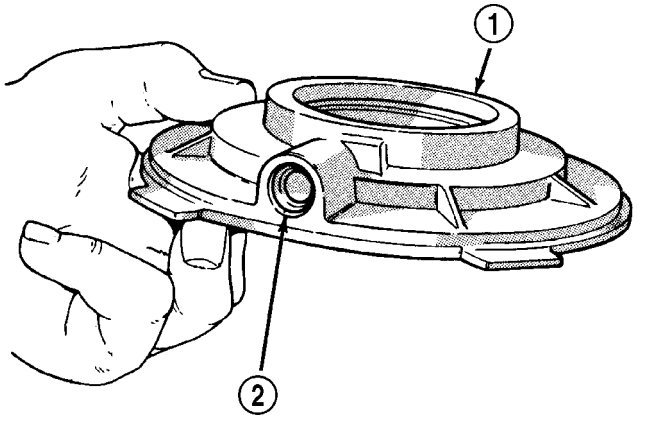


RR21F27

Fig. 72 Pickup Tube O-Ring Position

1 - OIL PUMP
2 - O-RING

(4) Insert oil pickup tube in oil pump inlet.

(5) Position assembled oil pump and pickup tube in rear case. Be sure pickup screen is securely seated in case slot. Also be sure oil pump locating tabs are outside rear case (Fig. 73).

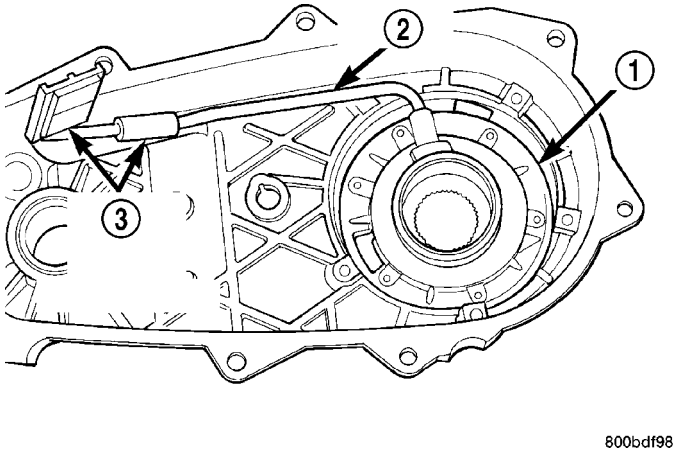

800bdf98

Fig. 73 Oil Pump And Pickup Tube Installation

1 - OIL PUMP
2 - PICKUP TUBE
3 - PICKUP SCREEN AND CONNECTOR

(6) Apply 3 mm (1/8 in.) wide bead of Mopar® gasket maker or silicone adhesive sealer to mounting flange of front case. Work sealer bead around bolt holes.

(7) Lift rear case and oil pump and carefully position assembly on front case. Be sure case dowels are aligned and that mode fork rail extends through rear case before seating rear case on front case.

(8) Install case attaching bolts. Alignment bolts at each end of case are only ones requiring washers (Fig. 74).

(9) Tighten case bolts to 27-34 N·m (20-25 ft. lbs.) torque.

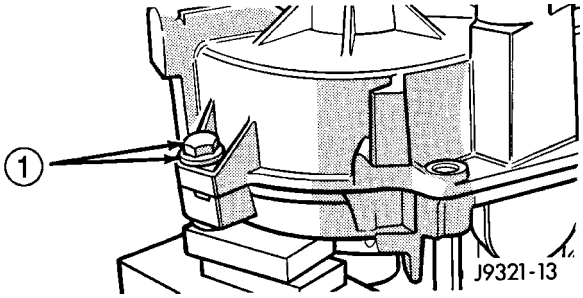


Fig. 74 Alignment Bolt Location

1 - ALIGNMENT BOLT AND WASHER (AT EACH END OF CASE)

YOKE AND RANGE LEVER

(1) Install indicator switch in front case. Tighten switch to 20-34 N·m (15-25 ft. lbs.) torque.

(2) Install range lever, washer and locknut on sector shaft (Fig. 75). Tighten locknut to 27-34 N·m (20-25 ft. lbs.) torque.