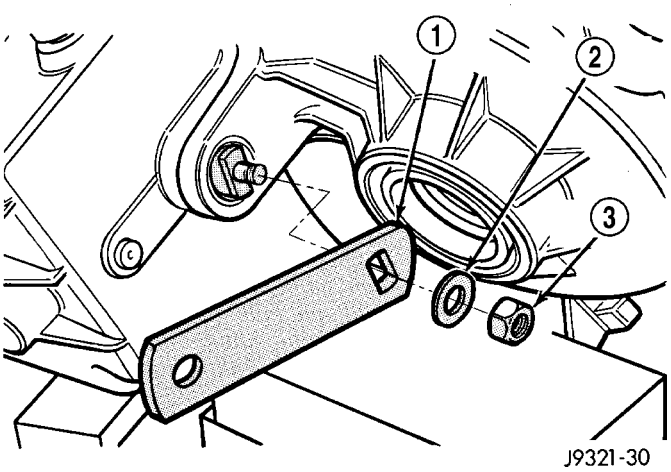


Fig. 75 Range Lever Installation

1 - RANGE LEVER
2 - WASHER
3 - LOCKNUT

(3) Install new seal washer on front output shaft (Fig. 77).

(4) Lubricate yoke hub with transmission fluid and install yoke on front shaft.

(5) Install new seal washer on front shaft.

(6) Install yoke and new yoke nut on front output shaft (Fig. 76).

(7) Tighten yoke nut to 122-176 N·m (90-130 ft. lbs.) torque. Use Tool C-3281, or similar tool to hold yoke while tightening yoke nut.

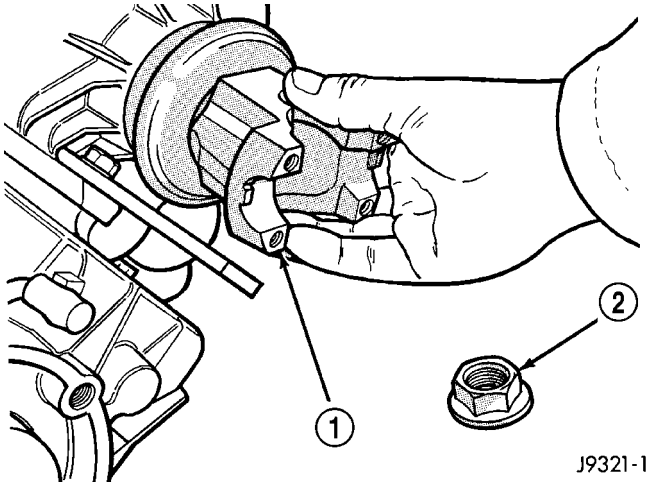


Fig. 76 Output Shaft Yoke Installation

1 - OUTPUT SHAFT YOKE
2 - YOKE NUT

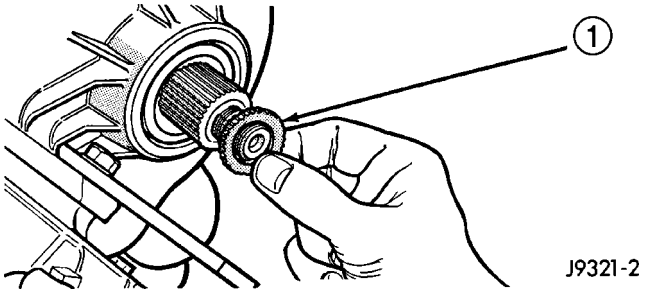


Fig. 77 Seal Washer Installation

1 - YOKE SEAL WASHER

REAR RETAINER

(1) Apply bead of Mopar® Sealer P/N 82300234, or Loctite™ Ultra Gray, to mating surface of rear retainer. Sealer bead should be a maximum of 3/16 inch.

(2) Install rear retainer on rear case. Tighten retainer bolts to 20-27 N·m (15-20 ft. lbs.) torque.

(3) Install rear bearing I.D. retaining ring and spacer on output shaft.

(4) Apply liberal quantity of petroleum jelly to new rear seal and to output shaft. Petroleum jelly is needed to protect seal lips during installation.

(5) Slide seal onto Seal Protector 6992 (Fig. 78). Slide seal protector and seal onto output shaft.

(6) Slide Installer C-4076-B onto seal protector with the recessed side of the tool toward the seal. Drive seal into rear bearing retainer with Installer C-4076-B and Handle MD-998323 (Fig. 79).

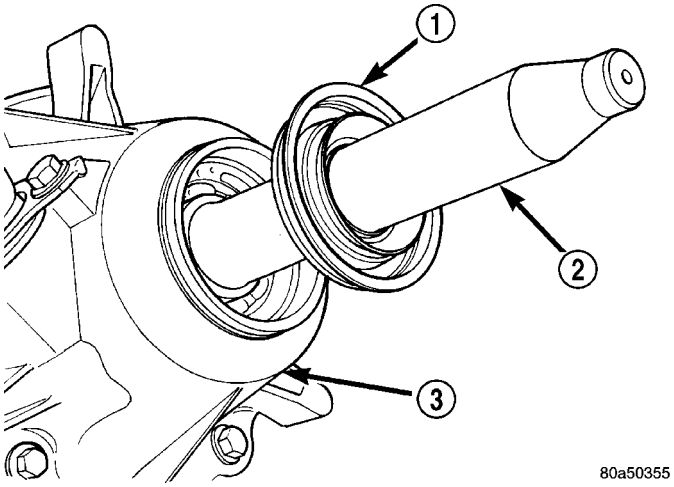


Fig. 78 Output Shaft Seal and Protector

1 - OUTPUT SHAFT SEAL
2 - SPECIAL TOOL 6992
3 - TRANSFER CASE