(b) Start seal in bore with light taps from hammer (Fig. 86). Once seal is started, continue tapping seal into bore until installer tool seats against case.

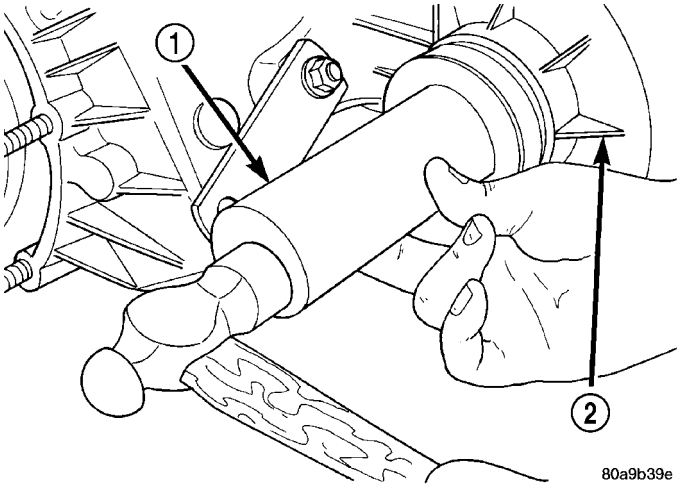

Fig. 86 Front Output Seal Installation - Typical

1 - INSTALLER 8143-A
2 - TRANSFER CASE

REAR OUTPUT SHAFT SEAL

REMOVAL

(1) Shift the transmission and transfer case into NEUTRAL.

(2) Raise and support vehicle.

(3) Mark a line across the pinion shaft and at each end of the propeller shaft for installation reference.

(4) Remove the U-joint strap bolts at the pinion shaft yoke.

(5) Pry open clamp holding the dust boot to propeller shaft yoke (Fig. 87).

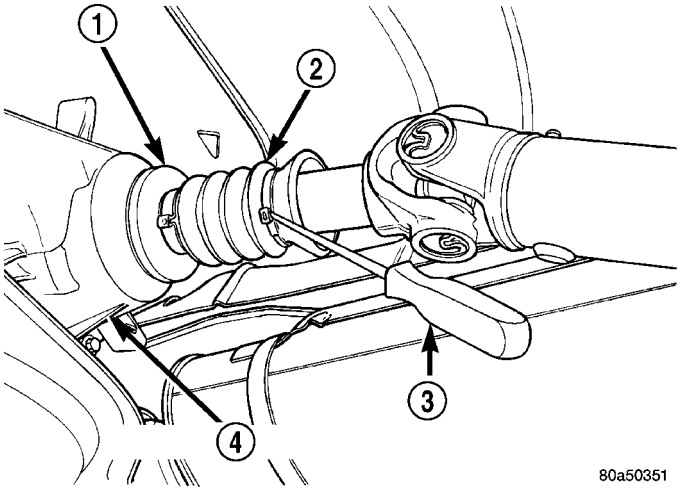

Fig. 87 Dust Boot Clamp

1 - SLINGER
2 - BOOT
3 - AWL
4 - TRANSFER CASE

(6) Slide the slip yoke off of the transmission/transfer case output shaft and remove the propeller shaft.

(7) Spread band clamp which holds output shaft boot to the output shaft slinger, or output shaft damper, with a suitable awl, or equivalent.

NOTE: Vehicles built with a 4.0L engine and a manual transmission use a damper weight on the transfer case output shaft. Be sure to identify the transfer case before proceeding.

(8) Remove output shaft boot from slinger, or output shaft damper, and output shaft.

(9) If the vehicle is not equipped with an output shaft damper, remove the output shaft rear slinger using Puller MD-998056-A (Fig. 88).

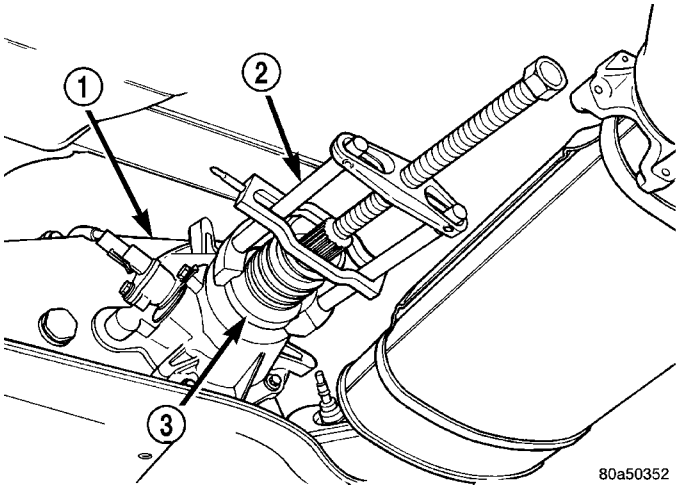

Fig. 88 Rear Slinger Removal

1 - TRANSFER CASE
2 - SPECIAL TOOL MD-998056-A
3 - SLINGER

(10) If the vehicle is equipped with an output shaft damper, use Screws 8421 and the puller yoke and forcing screw from a bolt-grip puller set, such as those used to remove steering wheels and harmonic balancers, to remove the transfer case output shaft damper.

(11) Use a suitable pry tool, or a slide hammer mounted screw, to remove the seal from the rear retainer (Fig. 89).