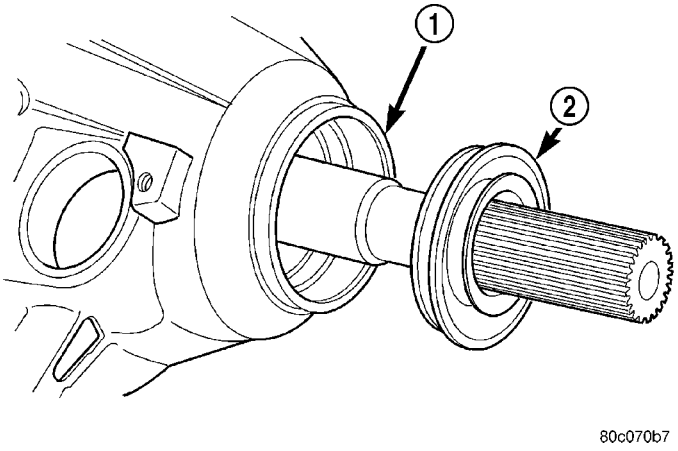

Fig. 89 Rear Output Shaft Seal

1 - REAR RETAINER
2 - OUTPUT SHAFT SEAL

INSTALLATION

(1) Apply liberal quantity of petroleum jelly to new rear seal and to output shaft. Petroleum jelly is needed to protect seal lips during installation.

(2) Slide seal onto Seal Protector 6992 (Fig. 90). Slide seal protector and seal onto output shaft.

(3) Slide Installer C-4076-B onto seal protector with the recessed side of the tool toward the seal. Drive seal into rear bearing retainer with Installer C-4076-B and Handle MD-998323 (Fig. 91).

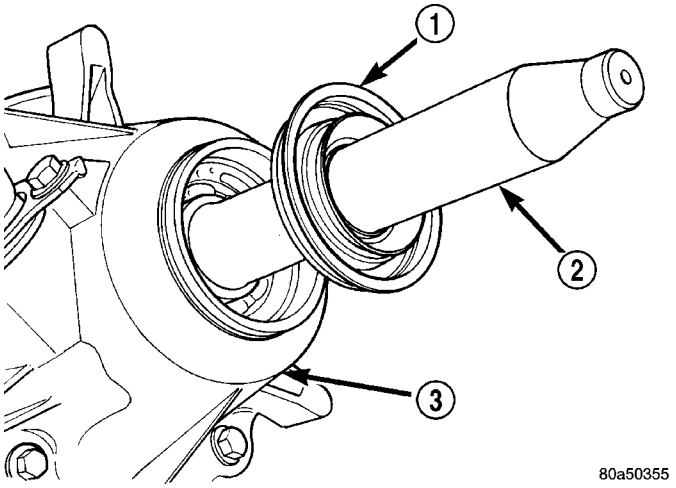

Fig. 90 Output Shaft Seal and Protector

1 - OUTPUT SHAFT SEAL
2 - SPECIAL TOOL 6992
3 - TRANSFER CASE

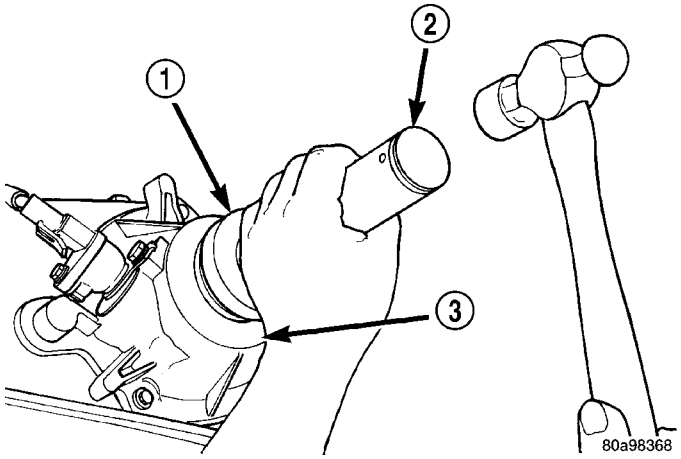

Fig. 91 Rear Seal Installation

1 - SPECIAL TOOL C-4076-B
2 - SPECIAL TOOL MD-998323
3 - TRANSFER CASE

NOTE: Vehicles built with a 4.0L engine and a manual transmission use a damper weight on the transfer case output shaft. Be sure to identify the transfer case before proceeding.

(4) Install a new output shaft rear slinger with Installer 8408, if the vehicle is not equipped with an output shaft damper.

(5) If the vehicle is equipped with an output shaft damper, install the output shaft damper as follows:

(a) Position the damper weight on the output shaft. Start the damper onto the output shaft chamfer, being careful to keep the weight square to the output shaft. (Fig. 92)

(b) Position the driver portion of Installer 8422 (Fig. 93) onto the damper, making sure the legs of the damper are positioned through the slots of the damper.

(c) Thread the puller screw of Installer 8422 into the output shaft by hand only. Make sure the screw is fully threaded into the output shaft.

(d) Using a wrench to hold the pulling screw stationary (Fig. 94), turn the pulling screw nut until the driver legs contact the rear face of the transfer case rear retainer. When the legs contact the retainer, the damper is properly positioned on the output shaft.