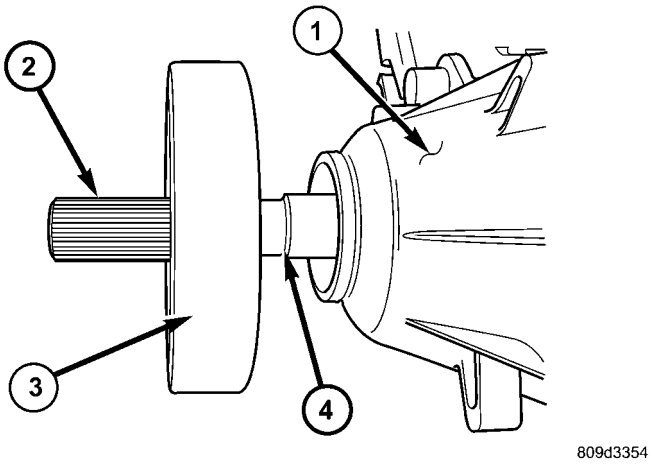

Fig. 92 Position Damper on Output Shaft

1 - Transfer Case
2 - Output Shaft
3 - Damper Weight
4 - Chamfer

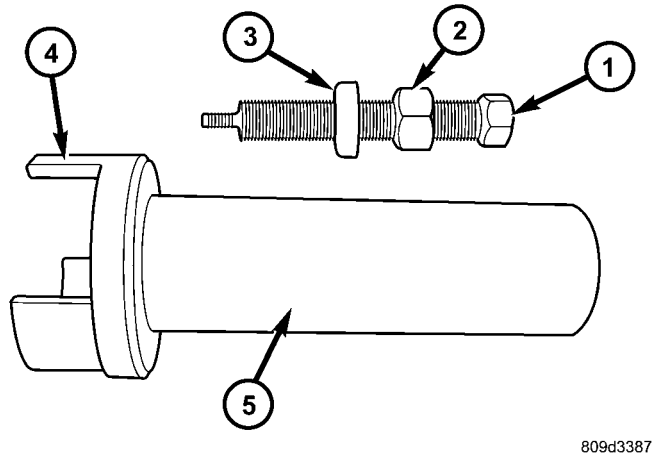

Fig. 93 Driver Installer 8422

1 - Pulling Screw
2 - Pulling Screw Nut
3 - Bearing
4 - Driver Legs
5 -Installer Driver

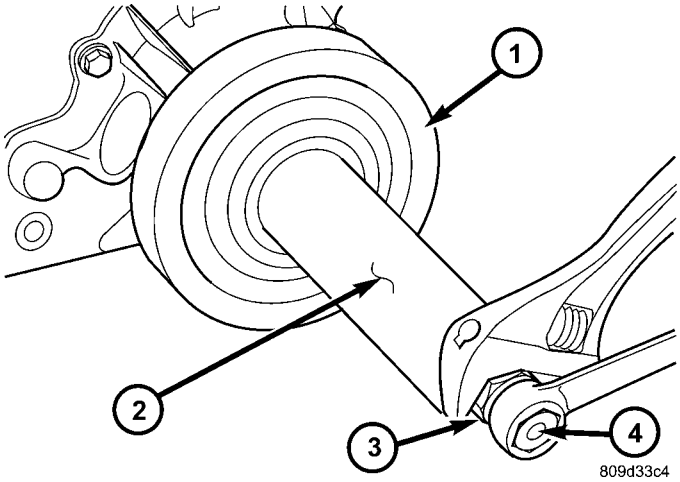

Fig. 94 Install Damper

1 - Damper
2 - Installer Driver
3 - Pulling Screw Nut
4 - Pulling Screw

(6) Install boot on output shaft slinger, or output shaft damper, and crimp retaining clamp with tool C-4975-A (Fig. 95).

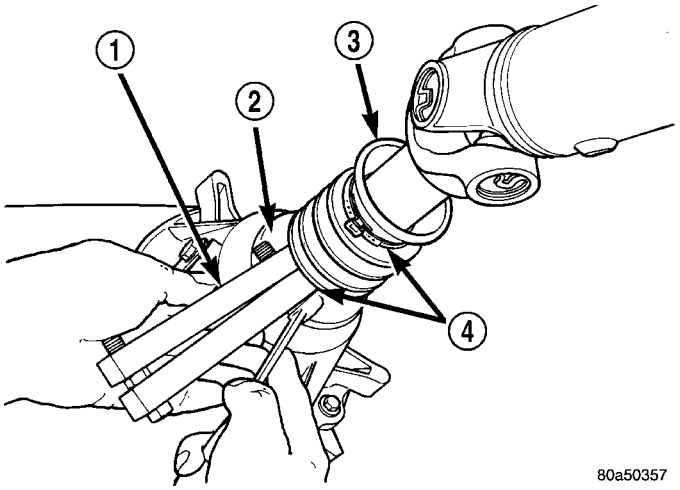

Fig. 95 Slinger Boot Installation - Typical

1 - SPECIAL TOOL C-4975–A
2 - SLINGER
3 - BOOT
4 - CLAMP

(7) Slide the slip yoke on the transmission/transfer case output shaft. Align installation reference marks at the axle yoke and install the propeller shaft.

(8) Tighten the U-joint strap/clamp bolts at the axle yoke to 19 N·m (14 ft. lbs.).

(9) Crimp clamp with Clamp Tool C-4975A to hold dust boot to propeller shaft yoke.

(10) Remove support and lower the vehicle.