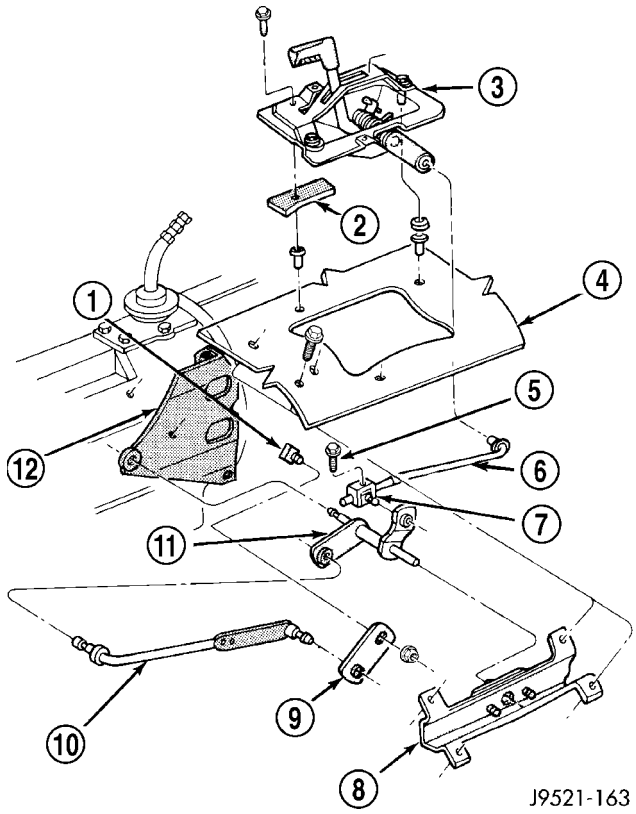

Fig. 97 Shift Linkage

1 - TRANSFER CASE SHIFT LEVER SHAFT
2 - SEAL
3 - TRANSFER CASE SHIFT LEVER ASSEMBLY
4 - FLOORPAN
5 - TRUNNION LOCK BOLT
6 - SHIFT ROD
7 - ADJUSTING TRUNNION
8 - TORQUE SHAFT BRACKET
9 - RANGE LEVER
10 - TORQUE SHAFT ROD
11 - TORQUE SHAFT
12 - LINKAGE BRACKET

SPEEDOMETER DRIVE ADAPTER

REMOVAL

(1) Raise vehicle.
(2) Disconnect wires from vehicle speed sensor.
(3) Remove adapter clamp and screw (Fig. 98).
(4) Remove speed sensor and speedometer adapter as an assembly.
(5) Remove speed sensor retaining screw and remove sensor from adapter.
(6) Remove speedometer pinion from adapter. Replace pinion if chipped, cracked, or worn.
(7) Inspect sensor and adapter O-rings (Fig. 98). Remove and discard O-rings if worn or damaged.
(8) Inspect terminal pins in speed sensor. Clean pins with Mopar® electrical spray cleaner if dirty or oxidized. Replace sensor if faulty, or if pins are loose, severely corroded, or damaged.