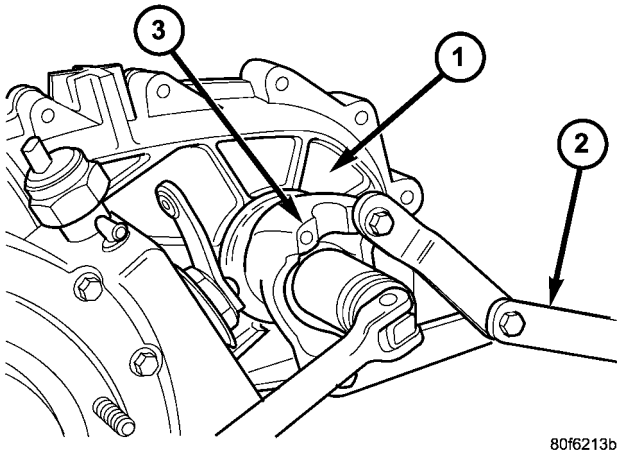

Fig. 10 Front Yoke Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE

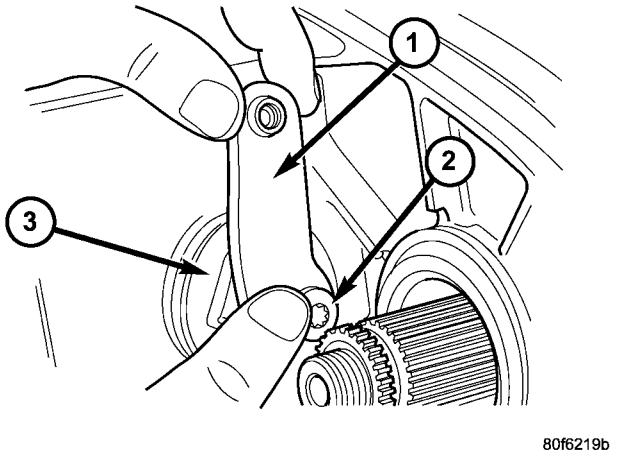

Fig. 12 Shift Lever Bolt Removal

1 - SHIFT LEVER
2 - BOLT
3 - SECTOR SUPPORT

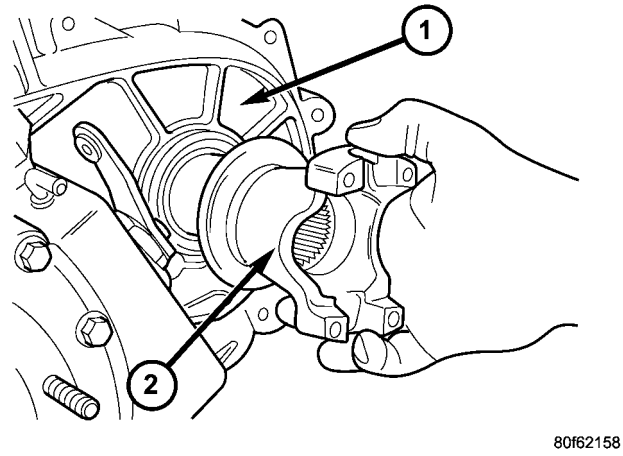

Fig. 11 Front Yoke Removal

1 - TRANSFER CASE
2 - FRONT YOKE

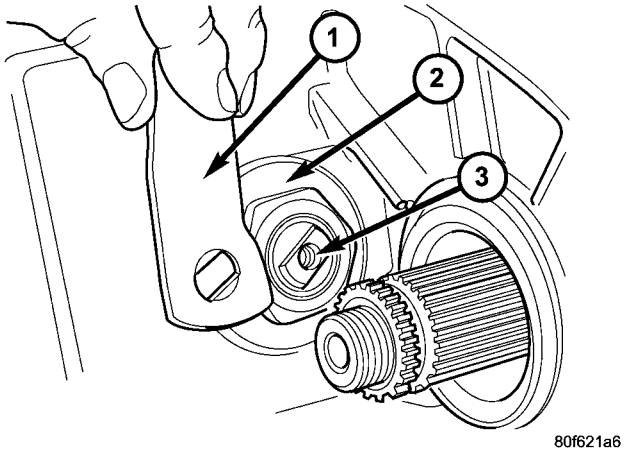

Fig. 13 Shift Lever Removal

1 - SHIFT LEVER
2 - SECTOR SUPPORT
3 - SHIFT SECTOR

(4) There is a seal slinger located on the rear of the yoke that can be replaced if necessary. Use a suitable cold chisel to strike the slinger hub parallel to the centerline in several spots to expand the slinger hub. A new slinger can be driven onto the yoke hub using a suitable pipe tool.

(5) Remove yoke rubber seal from front output shaft.

(6) Remove bolt (Fig. 12) that retains the shift lever to sector shaft.

(7) Remove the shift lever (Fig. 13) from the shift sector.

(8) Remove the detent plug (Fig. 14).

(9) Remove the detent plug (Fig. 15), spring, and plunger from the transfer case.