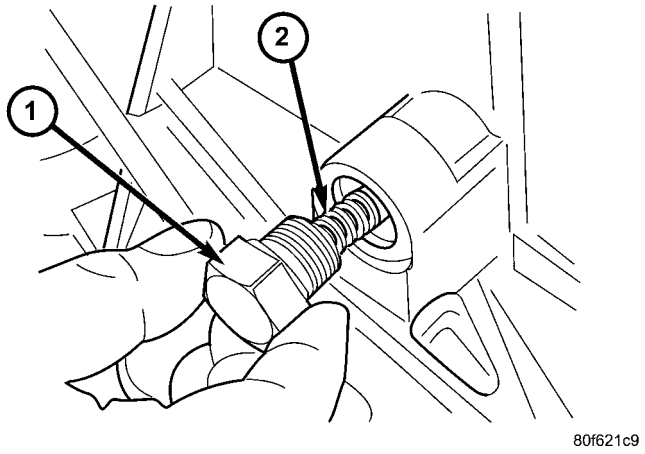

Fig. 14 Detent Plug Removal

1 - DETENT PLUG
2 - SPRING

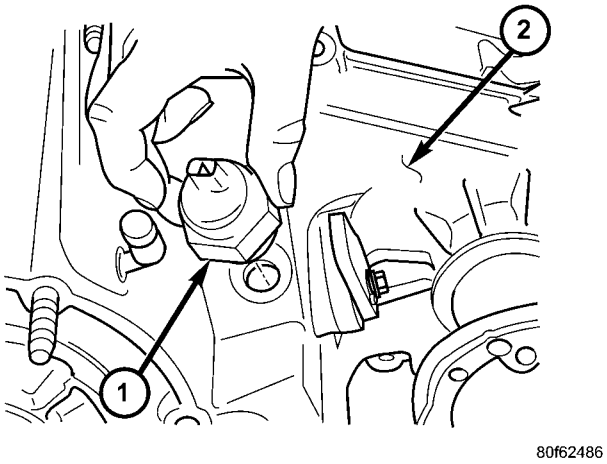

Fig. 16 Remove Transfer Case Position Sensor

1 - TRANSFER CASE POSITION SENSOR
2 - TRANSFER CASE

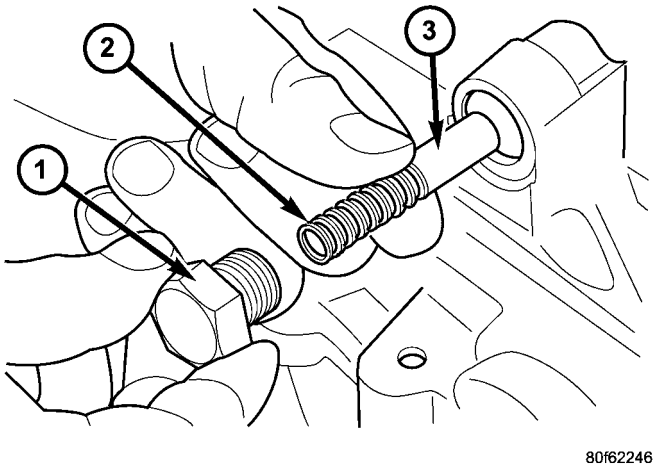

Fig. 15 Detent Plug, Spring, and Plunger Removal

1 - DETENT PLUG
2 - SPRING
3 - PLUNGER

(10) Remove the transfer case position sensor (Fig. 16).

(11) Remove the shift sector support (Fig. 17).

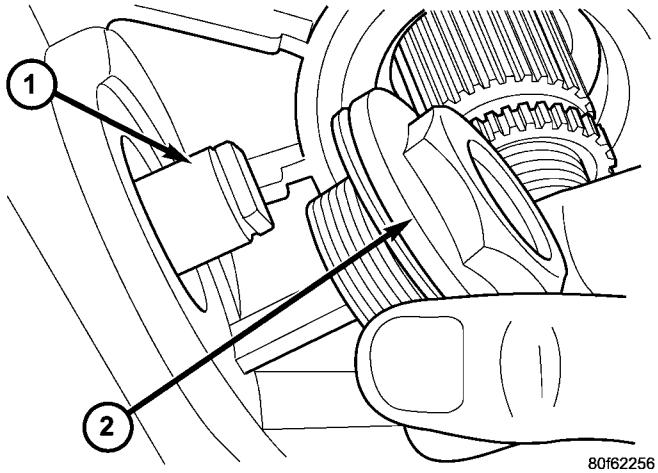

Fig. 17 Shift Sector Support Removal

1 - SHIFT SECTOR SHAFT
2 - SECTOR SUPPORT

MAINSHAFT, FRONT OUTPUT SHAFT, AND DRIVE CHAIN

(1) Note position of bolts that attach rear case to front case. Some bolts are unique. Mark position of these bolts with paint or scriber.

(2) Remove rear case-to-front case bolts (Fig. 18).