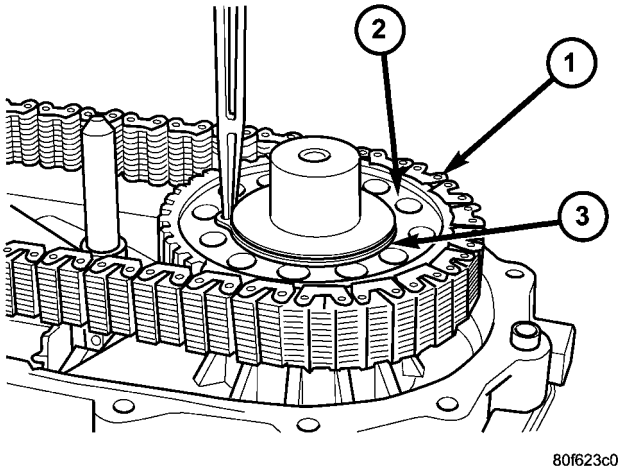

Fig. 22 Front Drive Sprocket Snap-Ring Removal

1 - DRIVE CHAIN
2 - FRONT DRIVE SPROCKET
3 - SNAP-RING

(8) Remove mainshaft, front sprocket, and chain as an assembly (Fig. 23).

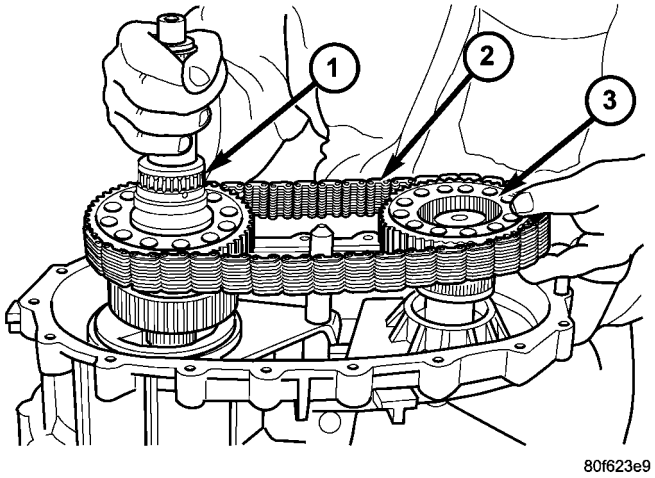

Fig. 23 Remove Mainshaft, Drive Chain, and Front Sprocket

1 - MAINSHAFT
2 - DRIVE CHAIN
3 - DRIVE SPROCKET

SHIFT FORKS

(1) Remove front output shaft from bearing in case (Fig. 24).

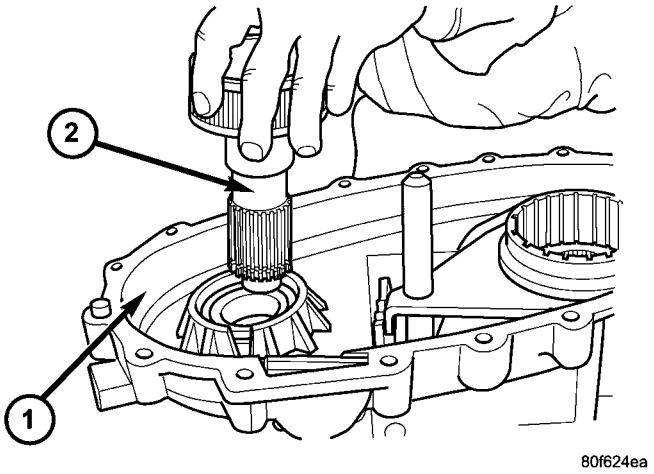

Fig. 24 Front Output Shaft Removal

1 - FRONT CASE HALF
2 - FRONT OUTPUT SHAFT

(2) Remove the shift rail (Fig. 25) from the shift forks.

(3) Remove mode fork, mode sleeve (Fig. 26). Note which way sleeve fits in fork (long side of sleeve goes to front).

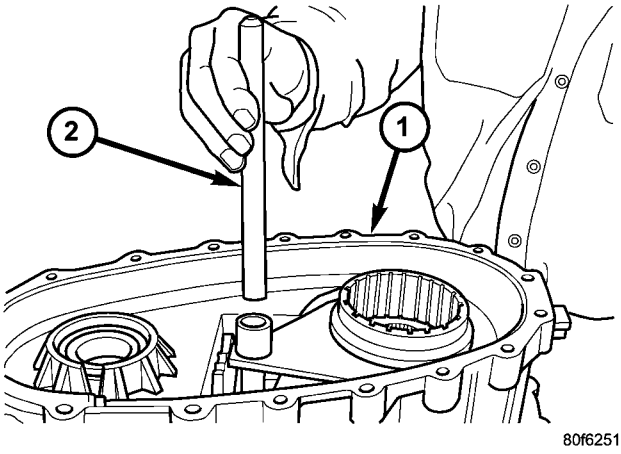

Fig. 25 Shift Fork Rail Removal

1 - FRONT CASE HALF
2 - SHIFT RAIL