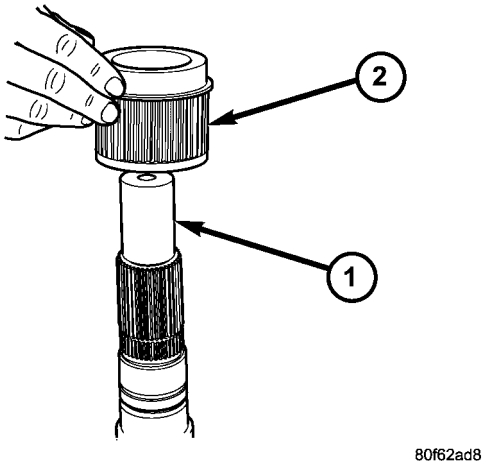

Fig. 34 Drive Sprocket Drive Hub Removal

1 - MAINSHAFT
2 - DRIVE SPROCKET DRIVE HUB

INPUT AND PLANETARY GEAR

(1) Remove front input retainer attaching bolts (Fig. 35).

(2) Remove the input gear seal with a suitable screw and slide hammer.

(3) Remove the input gear snap-ring (Fig. 36) from the input retainer.

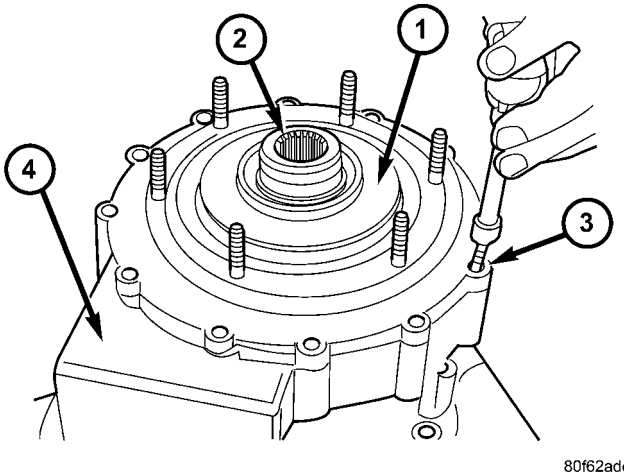

Fig. 35 Front Input Retainer Bolt Removal

1 - INPUT RETAINER
2 - INPUT GEAR
3 - BOLT
4 - FRONT CASE HALF

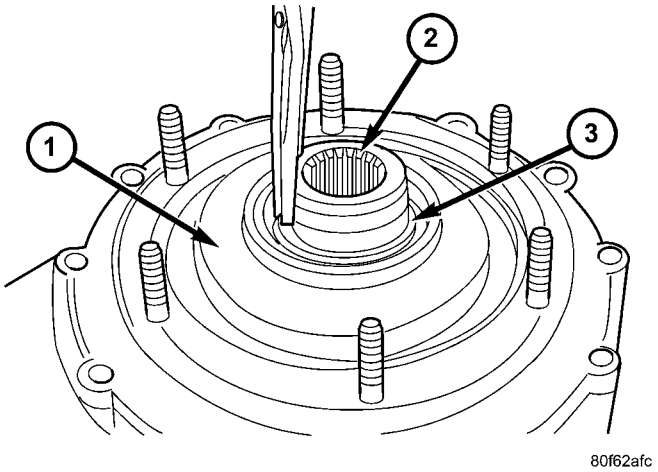

Fig. 36 Input Gear Snap-Ring Removal

1 - INPUT RETAINER
2 - INPUT GEAR
3 - SNAP-RING

(4) Remove the input gear (Fig. 37) from the input gear bearing with suitable hammer.

(5) Remove front input retainer (Fig. 38).

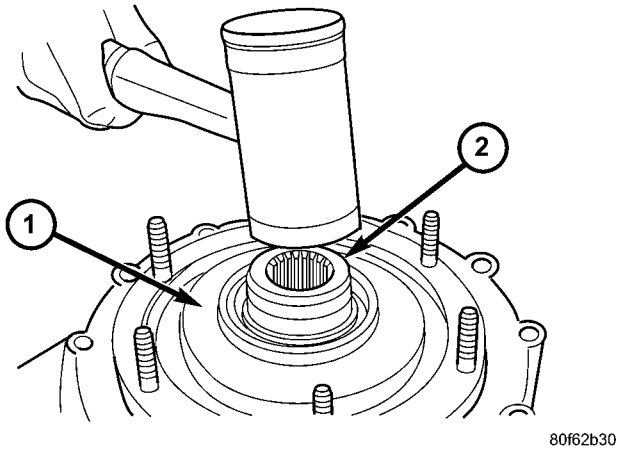

Fig. 37 Input Gear Removal

1 - INPUT RETAINER
2 - INPUT GEAR