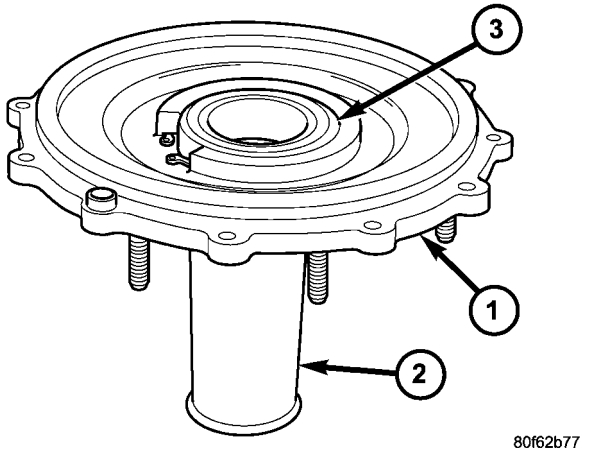

Fig. 42 Support Input Gear Bearing For Removal

1 - INPUT RETAINER
2 - CUP 8148
3 - INPUT GEAR BEARING

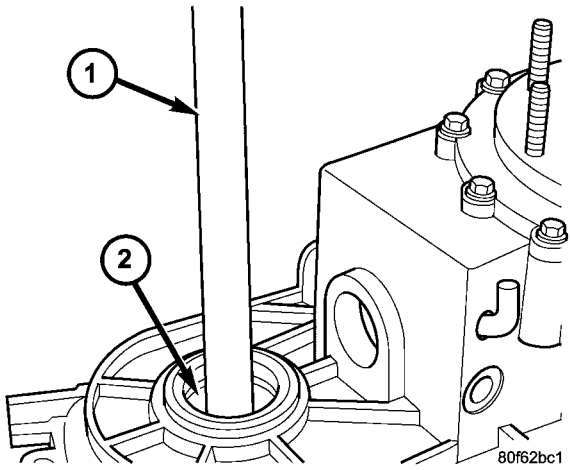

Fig. 44 Front Output Bearing Removal

1 - HANDLE C-4171
2 - INSTALLER 8239

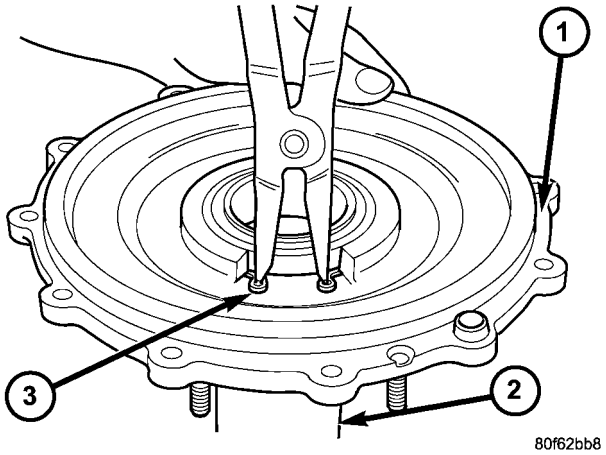

Fig. 43 Input Gear Bearing Removal

1 - INPUT RETAINER
2 - CUP 8148
3 - INPUT GEAR BEARING

(11) Remove the front output shaft bearing with Handle C-4171 and Installer 8239 (Fig. 44).

(12) Remove the rear output shaft bearing with Handle C-4171 and Installer 8239 (Fig. 45).

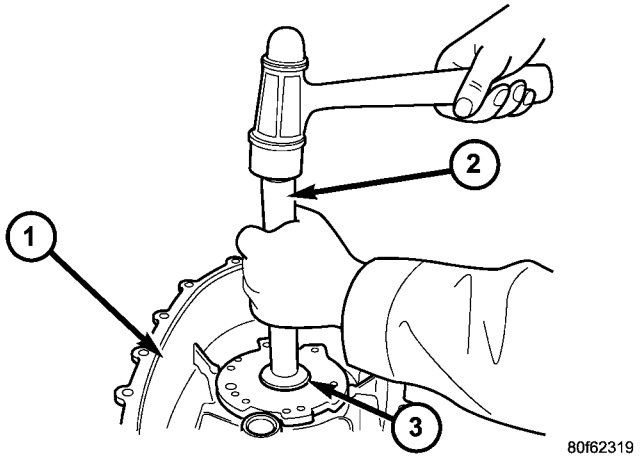

Fig. 45 Rear Output Bearing Removal

1 - REAR CASE HALF
2 - HANDLE C-4171
3 - INSTALLER 8239

CLEANING

Clean the transfer case parts with a standard parts cleaning solvent. Remove all traces of sealer from the cases and retainers with a scraper and 3M™ all purpose cleaner. Use compressed air to remove solvent residue from oil feed passages in the case halves, retainers, gears, and shafts.

INSPECTION

MAINSHAFT / SPROCKET / HUB

Inspect the splines on the hub and shaft and the teeth on the sprocket. Minor nicks and scratches can be smoothed with an oilstone, however, replace any part that is damaged.

Check the contact surfaces in the sprocket bore and on the mainshaft. Minor nicks and scratches can