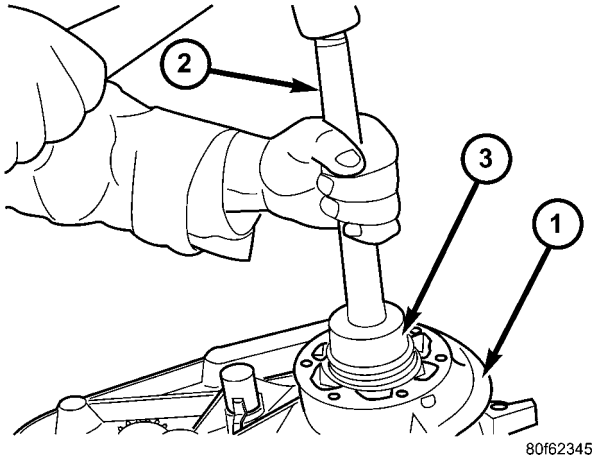

Fig. 47 Rear Output Bearing Installation

1 - REAR CASE HALF
2 - HANDLE C-4171
3 - INSTALLER 6953

(5) Remove the input gear pilot bearing using Puller Jaws 8240 and Cup 8148.

(6) Remove the input gear cup plug (Fig. 48) with a suitable drift and hammer inserted from the front of the input gear.

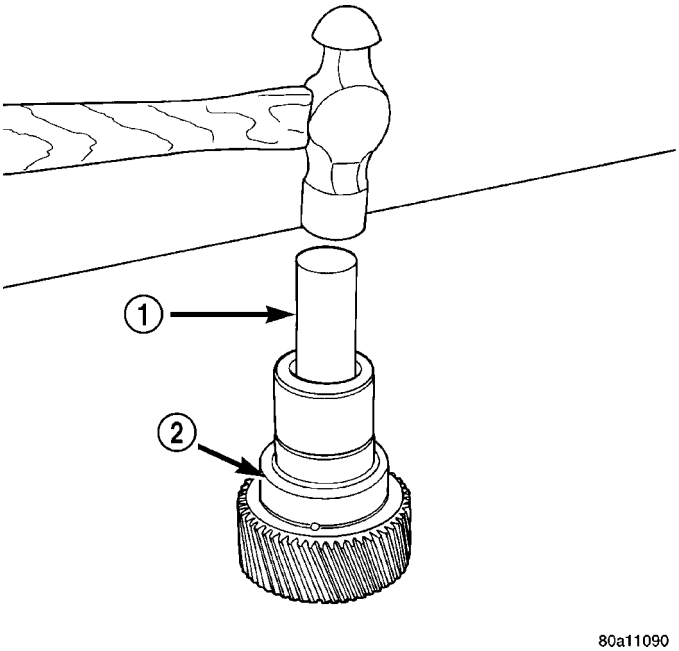

Fig. 48 Remove Input Gear Cup Plug

1 - DRIFT
2 - INPUT GEAR

(7) Install a new input gear cup plug with Installer 9045 and Handle C-4171.

(8) Install new input gear pilot bearing with Installer 9047 and Handle C-4171.

(9) Remove the front output shaft rear bearing with the screw and jaws from Remover L-4454 and Cup 8148 (Fig. 49).

(10) Install new bearing with Tool Handle C-4171 and Installer 5066 (Fig. 50). The bearing bore is chamfered at the top. Install the bearing so it is flush with the lower edge of this chamfer (Fig. 51).

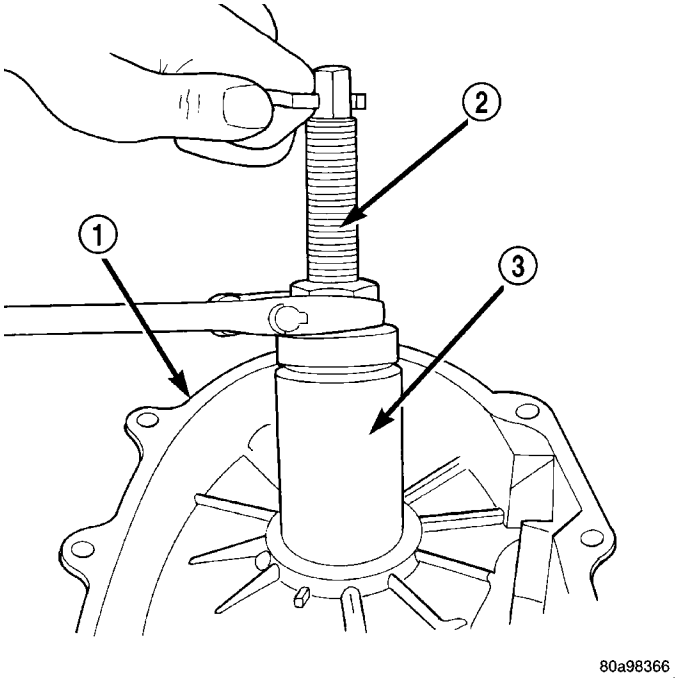

Fig. 49 Front Output Shaft Rear Bearing Removal

1 - REAR CASE
2 - SPECIAL TOOL L-4454-1 AND L-4454-3
3 - SPECIAL TOOL 8148

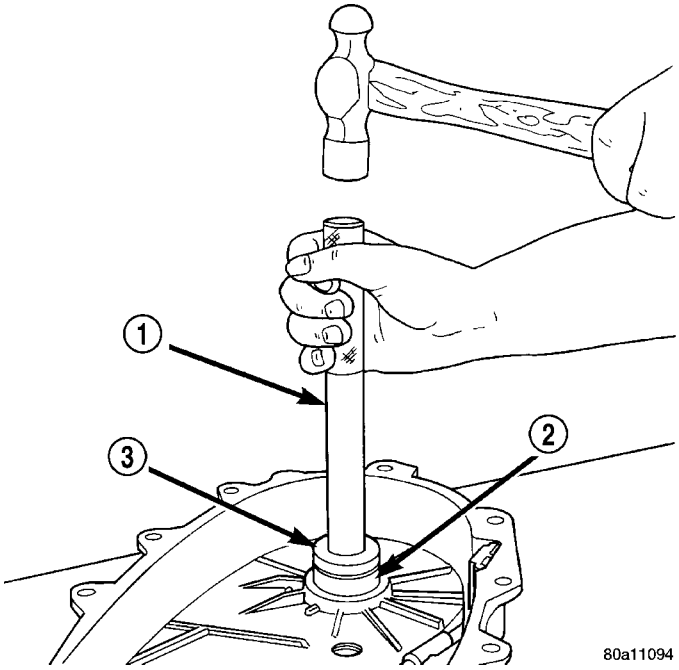

Fig. 50 Output Shaft Rear Bearing Installation

1 - HANDLE C-4171
2 - OUTPUT SHAFT INNER BEARING
3 - INSTALLER 5066