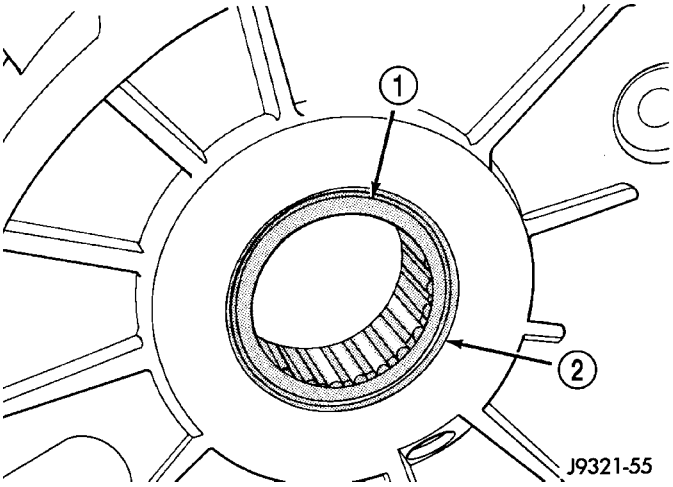

Fig. 51 Output Shaft Rear Bearing Installation Depth

1 - BEARING (SEATED) AT LOWER EDGE OF CHAMFER
2 - CHAMFER

INPUT AND PLANETARY GEAR

(1) Install the annulus gear (Fig. 52) into the front case half.

(2) Align and install low range planetary assembly into the front case half (Fig. 53). Be sure low range planetary pinions are engaged in annulus gear.

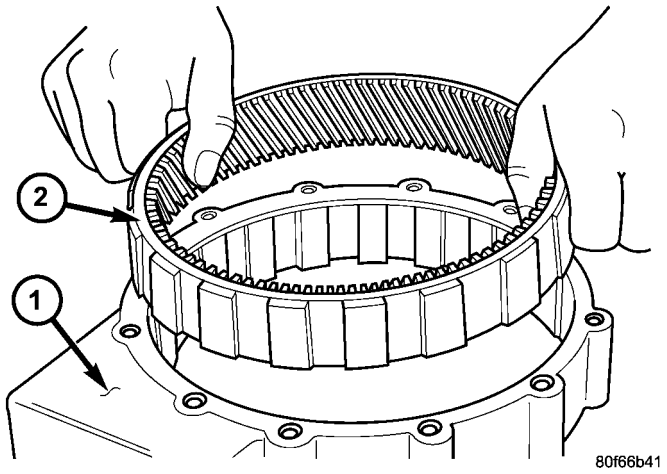

Fig. 52 Install Annulus Gear

1 - FRONT CASE HALF
2 - ANNULUS GEAR

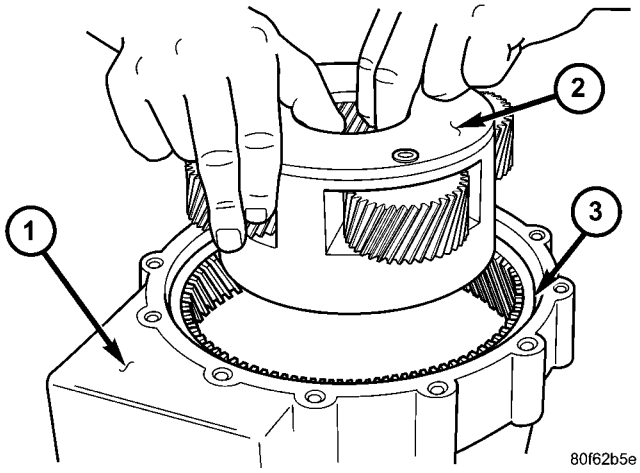

Fig. 53 Low Range Planetary Installation

1 - FRONT CASE HALF
2 - LOW RANGE PLANETARY
3 - ANNULUS GEAR

(3) Install the low range planetary plastic spacer (Fig. 54) onto the low range planetary carrier.

(4) Clean gasket sealer residue from retainer and inspect retainer for cracks or other damage.

(5) Apply a 3 mm (1/8 in.) bead of Mopar® Gasket Maker, or equivalent silicone adhesive, to sealing surface of retainer.

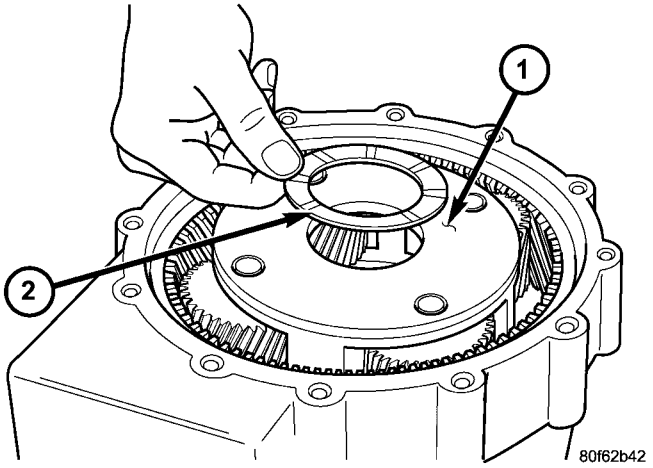

Fig. 54 Low Range Planetary Plastic Spacer

1 - LOW RANGE PLANETARY
2 - PLASTIC SPACER

(6) Install the front input retainer (Fig. 55) onto the front case half.

(7) Install bolts to hold retainer to transfer case (Fig. 56). Tighten to 21 N·m (16 ft. lbs.) of torque.