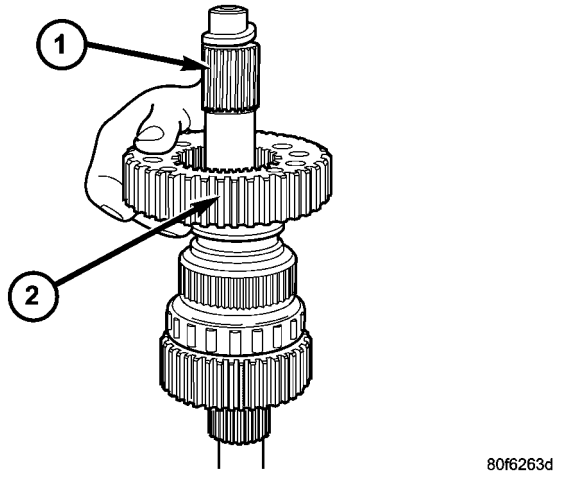

Fig. 63 Mainshaft Drive Sprocket Installation

1 - MAINSHAFT
2 - DRIVE SPROCKET

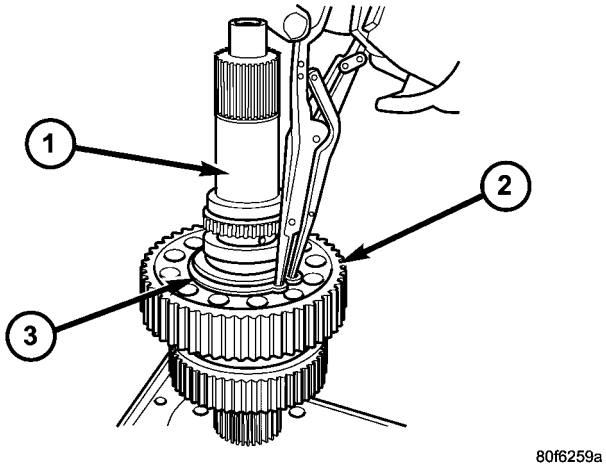

Fig. 64 Mainshaft Drive Sprocket Snap-Ring Installation

1 - MAINSHAFT
2 - DRIVE SPROCKET
3 - SNAP-RING

(8) Support front case on wood blocks so case interior is facing up. Place blocks between mounting studs on forward surface of case.

(9) Lubricate mainshaft components with transmission fluid.

(10) Lubricate sector shaft with transmission fluid and install shift sector in case (Fig. 65). Position slot in sector so it will be aligned with shift fork pin when shift forks are installed.

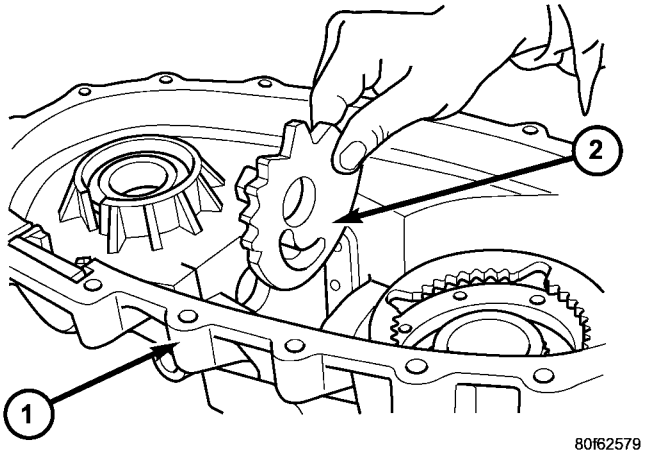

Fig. 65 Shift Sector Installation

1 - FRONT CASE HALF
2 - SHIFT SECTOR

(11) Assemble and install range fork and hub (Fig. 66). Be sure hub is properly seated in low range gear and engaged to the input gear.

(12) Align and insert range fork pin in shift sector slot.

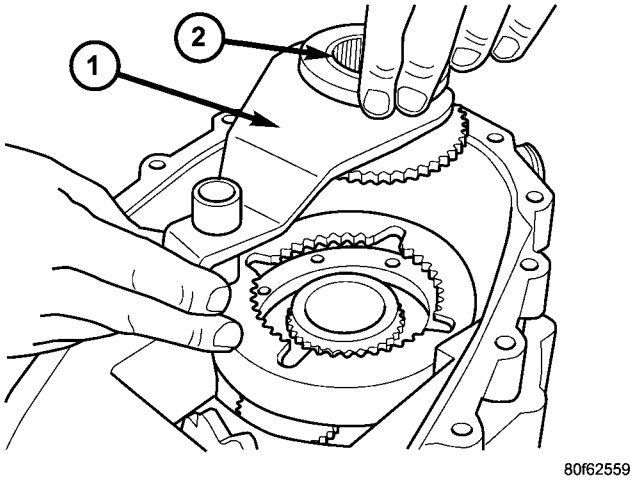

Fig. 66 Range Fork and Hub Installation

1 - RANGE FORK
2 - RANGE HUB

(13) Install mode fork and mode sleeve (Fig. 67). Verify that the long side of the mode sleeve is towards the front of the transfer case.

(14) Install the shift rail (Fig. 68) through the shift forks and into the shift rail pocket in the front case half.